

DIR-612

Access point setup guide

Step 1

If the router is not reset, please reset by pressing and holding the reset button at the back of the router for 15 sec. Once the device is reset, use a LAN and computer to login to 192.168.0.1 or 10.0.0.2.


Step 2

Dear Customer! It's the first time the device is turned on. Please configure the device in order to use the Internet access services. To run the Wizard, click the "Start" button.

START

Click on the "**start**" button.

Step 3

 Maybe your language is English?

NO

YES

Click "**yes**".

Step 4

You can use the advanced settings or continue configuration with the Wizard

ADVANCED SETTINGS

CONTINUE

Click on "**continue**".

Step 5


Device mode

Connection method

Wired connection

Work mode

Access point

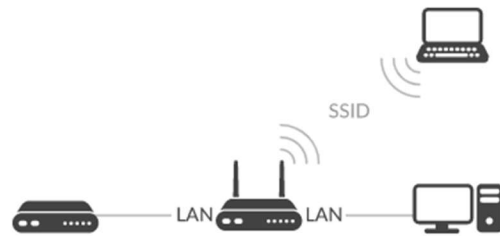

< BACK

NEXT >

Connection method: **Wired connection**

Work mode: **Access point**

Step 6

LAN

Automatic obtainment of IPv4 address

⚠ Automatic obtainment of IPv4 address sufficiently protects against use of the same addresses in one LAN. In order to avoid IPv4 address conflicts, static IPv4 addresses of LAN devices should not coincide with addresses from the address range assigned by an upper-level router (or a local DHCP server).

Hostname*

dlinkapcfb6.local

i Specify a domain name ending with .local. In order to access the web-based interface using the domain name, enter this name with a dot and slash at the end in the address bar of the web browser (for example, dlinkap12ab.local/)

< BACK

NEXT >

Tick the box "Automatic obtain of IPv4 address"

*The **Hostname** will be what is used to get to this settings page again after the setup is complete. Using the **default IP address will no longer work** because it will receive a new IP address from the main router.*

Step 7

Wireless Network 2.4 GHz

Enable

Broadcast wireless network 2.4 GHz

Disabling broadcast does not influence the ability to connect to another Wi-Fi network as a client.

Network name*

DIR-612-CFB6

Open network

Password*

.....



Password should be between 8 and 63 ASCII characters

< BACK

NEXT >

Here you can set the **Name** and **Password** of the WIFI for the Access point.

Step 8

Changing web-based interface password

For security reasons, please change the password used to access the device's settings.

User's interface password*



Password should be between 1 and 31 ASCII characters

Password confirmation*



< BACK

NEXT >

Set the new admin password used to login to this site.

Step 10

Summary

LAN

Dynamic IPv4: Yes
Hostname: dlinkapcfb6.local


Wi-Fi 2.4 GHz

Enable: Yes
SSID: DIR-612-CFB6
Encrypt: WPA2-Personal
Password: 63891157


Device

Model: DIR-612
Software version: 1.0.0
Serial number: U82P11A004211
Mode: Access point

Login data

Username: admin
Password:  *

[SAVE CONFIGURATION FILE](#)

 BACK

APPLY

Summary page. **Apply**