3G Failover Setup guide (DIR-825 Blue interface)

This setup guide was created using a DIR-825 (F/W:3.0.4) and a DWM-157 with a Vodacom sim card. First insure that the sim card is active and the dongle you are using is operating correctly.

Step 1)

Login on the router (192.168.0.1) with your admin username and password.





Step 2)

Navigate to "USB modem" then "Basic settings". Here you can see if your dongle is detected by the router.

D-Link Building Networks for People	K WAN	Basic Settings	
In Statistics	Settings	Information	
Connections Setup	Automatic creation of connection	Vendor	MTK1
⊚ Wi-Fi		Model	MTK2
· · · · · · · · · · · · · · · · · · ·		Revision	0.2.8
Print Server		IMSI	655017701361886
		IMEI	355621058761952
		Signal level	. 11] 45%
💣 USB Modem			
Basic Settings			
PIN			

Step 3)

Navigate to "Connection setup", then "WAN" and click the "ADD" button.

D-Link Building Networks for People	K Basic Settings		WAN	
♠ Home				
Summary	Default Gateway Gateway is not set	y IPv4	IGMP/MLD) P/MLD page you can allow the router to use IGMP and MLD
Initial Configuration	O WAN		and configure the	
In Statistics	Connections List	t		RECONNECT ADD DELETE
Connections Setup	Name	Connection type	Interface	Status
WAN	WAN	Dynamic IPv4	Internet	Disconnected
LAN				

Step 4)

Choose the connection type 3G to change the type of WAN interface. Then leave the mode as Auto. The sim card APN is service provider specific (Known APN's are listed at the end of the setup guide). The "Dial number" is always *99#. The username and password fields are left blank (insure that "Without authentication" is selected). Click "Apply" to save the settings.

3G	• • • • • • • • • • • • • • • • •
Mode	
Auto	•
APN	
internet	
Dial number*	
*99#	
Without authorization	
Username*	
	~
Password*	

Step 5)

The new 3G WAN profile is created and active as shown by the green circle.

Default Gatew	ay IPv4	IGMP/MI	LD		
⊖ wan		(i) On the IC and configure	(i) On the IGMP/MLD page you can allow the router to use IGMP and MLD and configure their settings.		
O 3G_84					
Connections Li	st		RECONNECT ADD DEL		
Connections Li	st Connection type	Interface	RECONNECT ADD DEL		
Connections Li Name WAN	Connection type Dynamic IPv4	Interface Internet	RECONNECT ADD DEL Status Disconnected		

Step 6)

Navigate to "WAN Reservation" and enable it. Here you can choose the main internet connection and the one to use for backup. There is no other setting to change except for the connections (Basic and Backup). Then click apply.

D-Link Building Networks for People	K Basic Settings	WAN Reservation	
Statistics	Enable		
Connections Setup	Basic connection WAN	Check interval (in seconds)* • 10	
LAN WAN Recording	Backup connection 3G_84	Timeout check (in seconds)* 3	
WAIN RESERVATION	Test host (IP)* 8.8.8.8	Number of inspections of active connection* 1	
଼ Wi-Fi		Number of inspections of inactive connection*	
Print Server		1	
	APPLY		

Step 7)

Navigate to Connection Setup then WAN. Here you can see that all connections are active and primary source of internet is the normal WAN connection (Fibre) and the 3G connection will only activate if the Fibre goes down.

D-Link Building Networks for People	K WAN Reservation		WAN		
Statistics	Default Gateway IF	2v4	IGMP/MLD		
Connections Setup	● WAN ○ 3G_84		On the IGMP/M and configure their s	LD page you can allow the router to use IGMP and MLD settings.	
WAN Reservation	Connections List	Connection turn	Interface	RECONNECT ADD DELETE	
Print Server	WAN	Dynamic IPv4	Internet	Connected •	
↓ USB Storage	3G_84	3G	3G	Connected •	
K Summary		WAN			
Default Gateway II	Default Gateway IPv4 IGMP/MLD				
 WAN 3G_84 		(i) On the IGMP/MLD page you can allow the router to use IGMP and MLD and configure their settings.			
Connections List				RECONNECT ADD DELETE	
Name	Connection type	Interface	Status		
WAN	Dynamic IPv4	Internet	Disconn	ected	

List of APN's

• Telkom TelkomInternet

internet

- Vodacom internet
- CellC
- MTN internet