



[Basic Manual Setup for DIR-825 HW G1- How to change Wi-Fi name and password]

Step 1: Open your web browser and type 192.168.0.1 into the address bar, then press Enter.

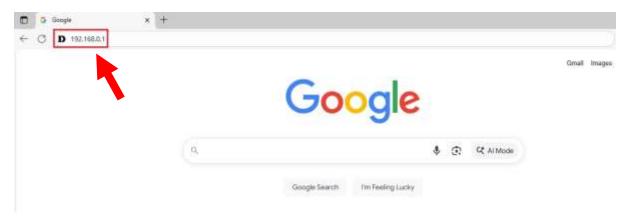


If your device is connected to the router, it will take you to an orange D-Link page asking for a username and password. Default Username is admin, leave the password field blank, unless it was updated.

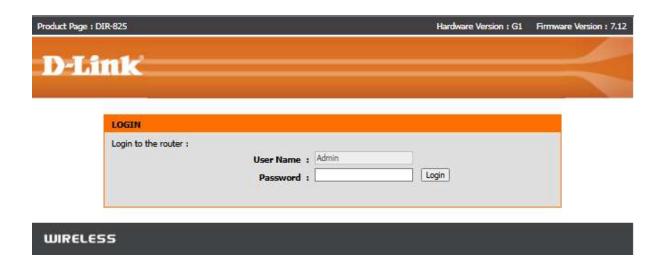



Step 2: Once logged in, navigate to

Wireless Settings → Manual Wireless Connection Setup

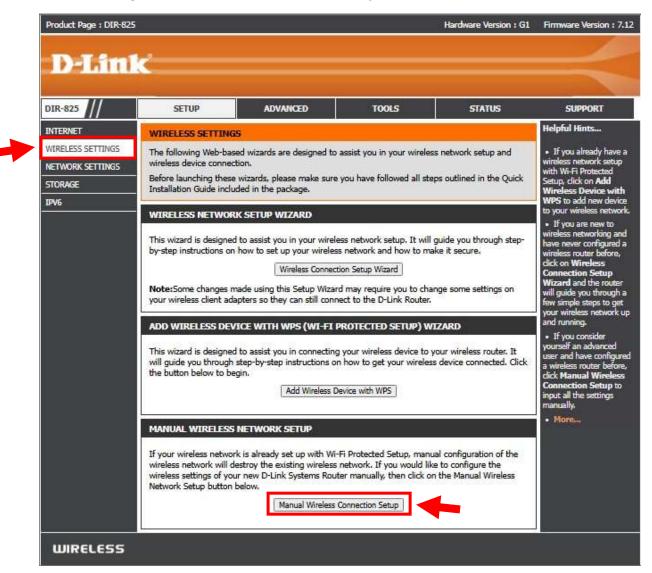




Step 3: From here you will have the option to change the Wi-Fi name and password for both the 2.4Ghz and 5Ghz.

Wireless network name will be the Wi-Fi name you are going to connect to. You can change it here.

Make sure the Security mode, is set to **WPA-Personal**.

Pre-Shared Key will be the Wi-Fi password, you can change it here.

Scroll down and click on Save settings.

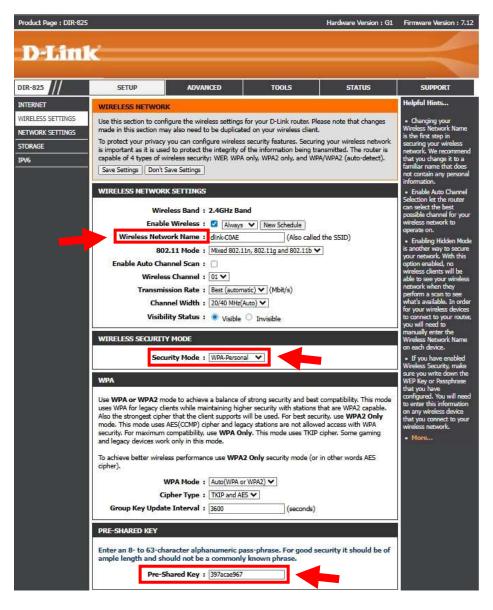

Please note: All devices will now be disconnected, look for the new Wi-Fi name and connect to it using the new password.