

DNS-320

PnP-X driver

Installation Guide

D-Link[®]


Building Networks for People




RECYCLABLE

DNS-320 PnP-X Driver Installation Guide

Step-1. Select Computer.

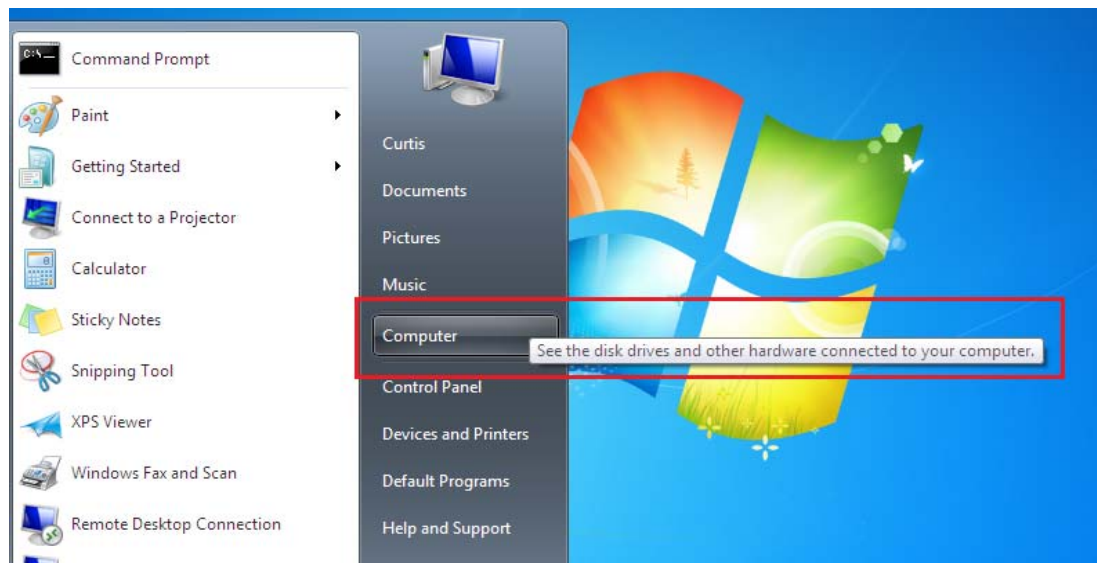


Step-2. Install device in the Network.

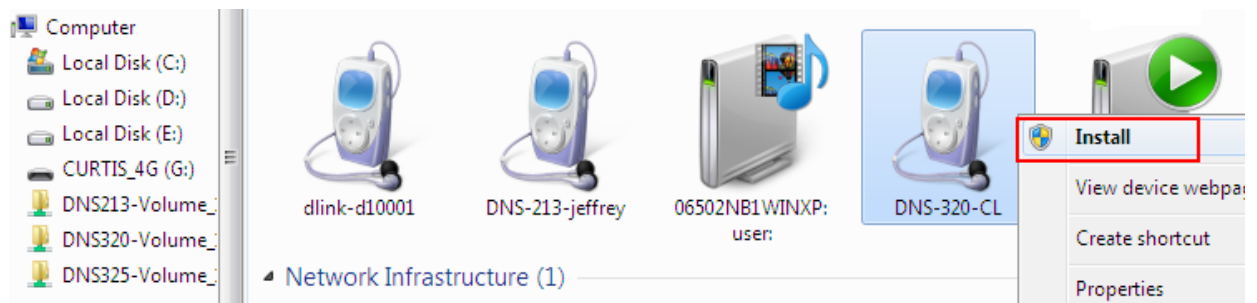


DNS-320 PnP-X Driver Installation Guide

Step-3. Open Device Manager and update driver software.

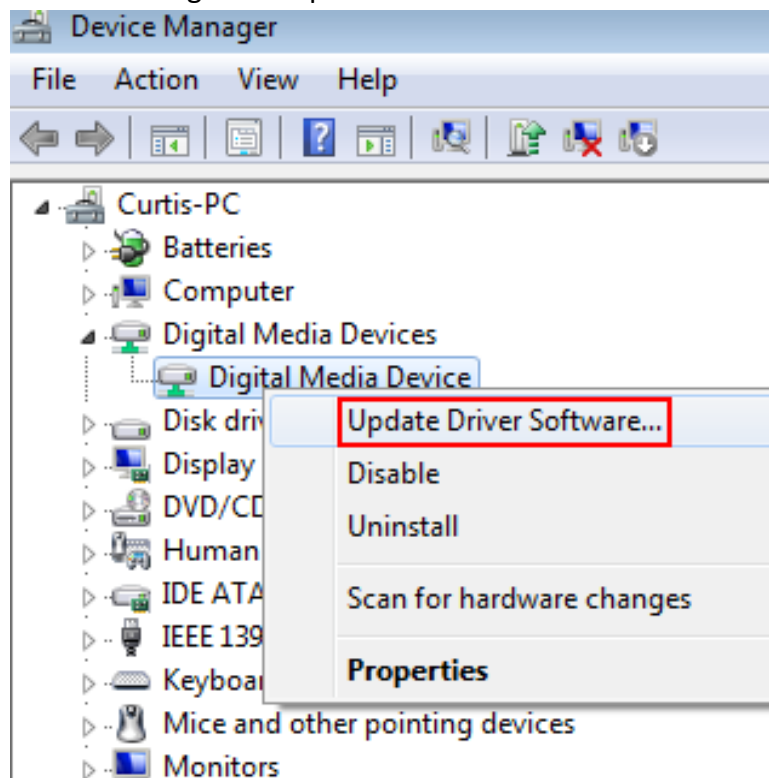


Step-4. Select "Browse my computer for driver software".

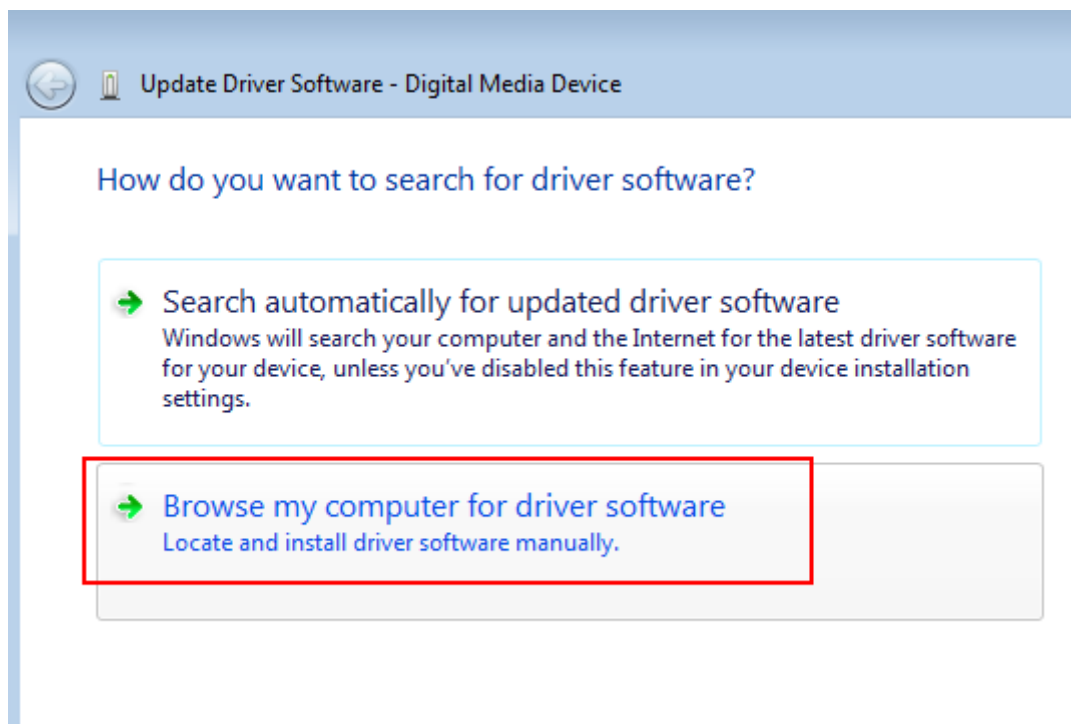

DNS-320 PnP-X Driver Installation Guide

Step-5. Select “Let me pick from a list of device drivers on my computer”.

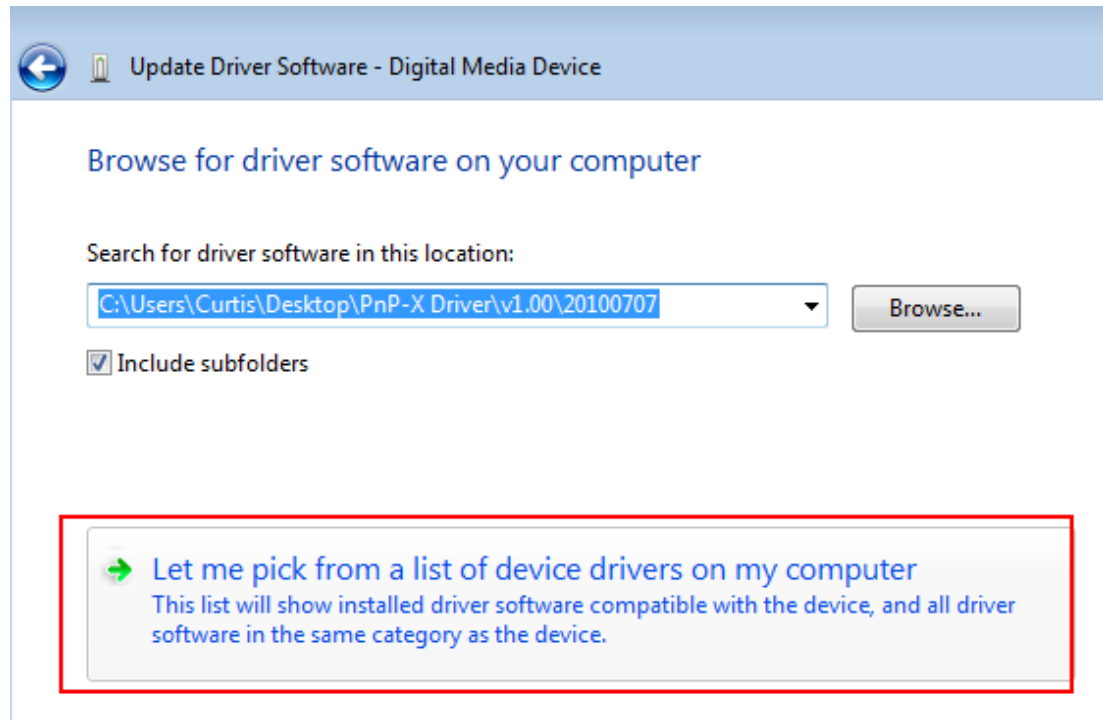

Step-6. Click “Have Disk” and select the “pnpxnas.inf”.

