# **D-Link Quick Installation Guide**

This product can be setup using any current web browser, i.e., Internet Explorer 6 or Netscape Navigator 7.0

DP-G310 AirPlus™G 2.4GHz Wireless Print Server

**Before You Begin** 

You will need an Ethernet-enabled device, such as a laptop or desktop computer and a USB printer that will connect to the DP-G310.

Important: TURN OFF the power to the printer before installing the DP-G310.

#### **Check Your Package Contents**



DP-G310 AirPlus™G Wireless USB Print Server



**CD-ROM (Software, Manual and Warranty)** 



5V DC 2.5A Power Adapter

Using a power supply with a different voltage rating will damage this product and void its warranty.

If any of the above items are missing, please contact your reseller.



#### Connecting The DP-G310 To Your Network

First, insert one end of a straight-through CAT5 Ethernet RJ-45 cable into the "Network Port" (shown below.) Connect the other end of the cable to the LAN port of the gateway or switch. *Note: Do not connect the power cord to the DP-G310 until you are advised to do so.* 



#### Warning!

Only a USB printer may be connected to the USB port of the DP-G310. Do not connect any other USB device to the USB port; doing so may damage the unit, voiding the warranty for this product.

Next, make sure that the Printer is turned **OFF**.

Using the USB cable, connect one end of the cable to the USB port of the DP-G310 (shown below) and the other end to the USB port of the printer. Turn **ON** the printer.




Then, plug one end of the power adapter into the DP-G310 and the other end into your electric outlet. The DP-G310 will turn on and begin a self-test.



For Mac OS printing, please refer to manual (.pdf) located on the CD-ROM.

For additional Windows operating system setup or information on the web-management interface, refer to the manual located on the CD-ROM.

The factory default IP address of the DP-G310 is 192.168.0.10. In order to network to the printer through the DP-G310, the DP-G310 must have the same IP network settings as your network. IP address can be assigned manually or automatically by DHCP, BOOTP or RARP. To access the print server's web configuration, manually assign an IP address on one of the wired PC's on your network to the same subnet as the print server.

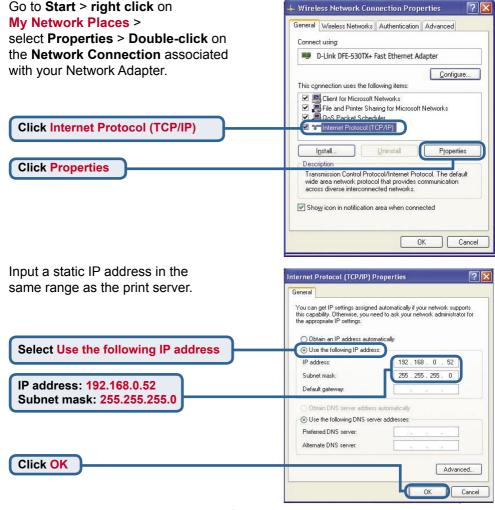




(continued)


\*Note:Please notice that if you connect your printer server in a LAN where a DHCP server is present. The IP address will differ from the one in the example 192.168.0.10.

Click OK to apply IP address settings.

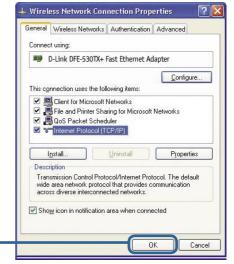

Click OK

Using your web browser enter the IP address of the DP-G310. By default the IP address is set to 192.168.0.10

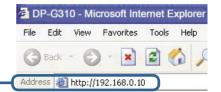

The IP address of the DP-G310 can be modified on the **Network** tab of the web configuration menu.

The following instructions use the print server's default IP address as an example. Make the appropriate changes if you modify the DP-G310's IP address.



2

#### Setting up your DP-G310 for network printing in Windows XP

(continued)

Click on the **Configuration** tab to view the current **Wireless Settings**.

- 1 Select your Connection Mode
- 2 Enter the SSID of the remote access point or wireless router you wish to connect to.
- 3 If you would like to set WEP Encryption, select the encryption level and the key here.

Click on the **System** tab to view the current **Port Settings**.

(3)

Write down on a piece of paper the Port name that you wish to use.



Port Name Description PS-121B28-U

Apply Cancel

No 🕶

What is Infrastructure and Ad-Hoc Mode?

**Ad-Hoc:** Refers to two or more 802.11b wireless devices that communicate directly with one another without using an access point or any connection to a wired network. **Infrastructure:** Refers to an 802.11 network in which wireless devices communicate with each other by first going through an Access Point (AP) or wireless router.

What is an SSID?

A workgroup name of your Wireless Network. All wireless devices mu

A workgroup name of your Wireless Network. All wireless devices must all have the same SSID to communicate on the Wireless Network. All D-Link Wireless devices have the default SSID of default, all lower case.

How does WEP Work?


64 bit WEP encryption uses a 10 hexidecimal character key. 128 bit WEP uses a 26 hexidecimal character key. The WEP encryption key must match the WEP settings on your AP or wireless router to connect properly.



(continued)





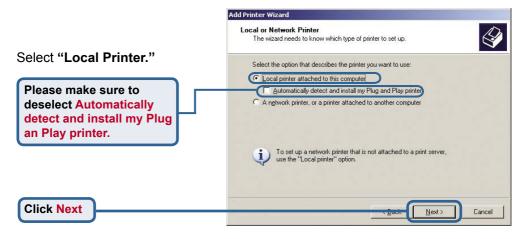




(continued)

Add Printer Wizard Select a Printer Port Computers communicate with printers through ports. Select the port you want your printer to use. If the port is not listed, you can create a new port. C Use the following port: LPT1: (Recommended Printer Port) Note: Most computers use the LPT1: port to communicate with a local printer. The connector for this port should look something like this: Select "Create a new port." At the pull-down menu, highlight "Standard TCP/IP Port." Create a new port Standard TCP/IP Port **Click Next** Add Standard TCP/IP Printer Port Wizard Welcome to the Add Standard TCP/IP Printer Port Wizard You use this wizard to add a port for a network printer. Before continuing be sure that: The device is turned on.
 The network is connected and configured. To continue, click Next **Click Next** Cancel Add Standard TCP/IP Printer Port Wizard Add Port Type in the IP address of the For which device do you want to add a port?


Type in the IP address of the print server. (i.e. 192.168.0.10) The port name will automatically be filled in.

Click Next

This may take a few seconds

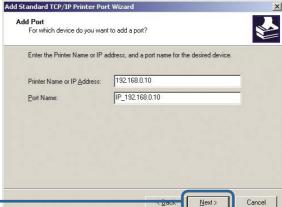




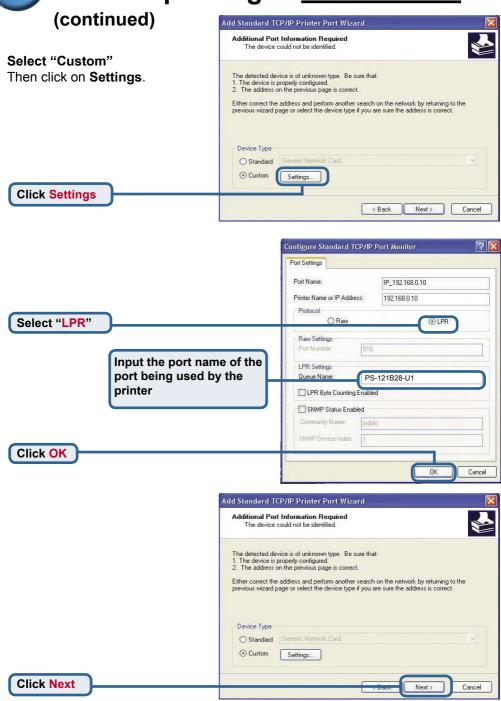

2


Setting up your DP-G310 for network printing in Windows XP

(continued)

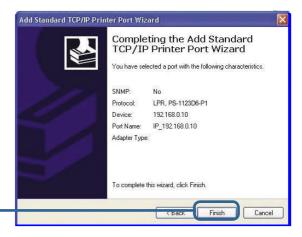


Click Finish

In this window, scroll down to find your printer. (If it is not listed, insert the driver CD or diskette that came with your printer.)
Click on "Have Disk..."
Then, scroll down and highlight the printer.

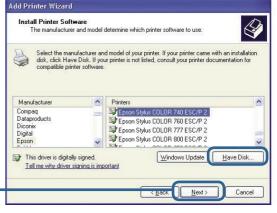

Click Next

At this screen, you can input a name for this printer.

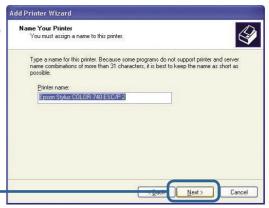


2

Setting up your DP-G310 for network printing in Windows XP

(continued)

Select "Yes" to print a test page

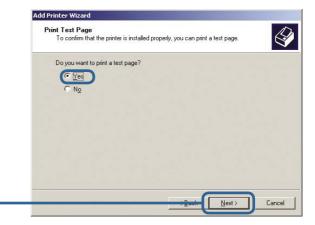

# 3

**Click Next** 

#### Your Setup is Complete!

The printer is now ready for printing with Windows XP, on your network.



Click Finish

#### **MEMO**