


D-Link®

Building Networks for People

Setup Guide for the DSL-224

Step 1: Open your Internet browser (ex. Internet Explorer, Mozilla, Google Chrome, Safari) and type in the Router's IP address in the address bar and press enter. (Default IP 10.0.0.2).

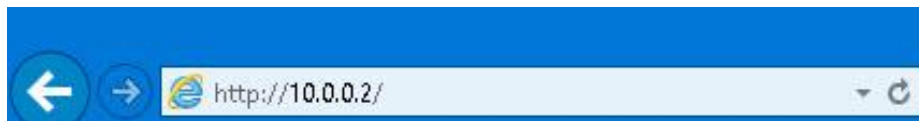


Step 2: Type in the User Account Credentials for the router. By default the Username is: admin and the Password is: admin



Authorization Failed

Without a valid username and password, access to this page cannot be granted. Please click reload and enter a username and password when prompted.

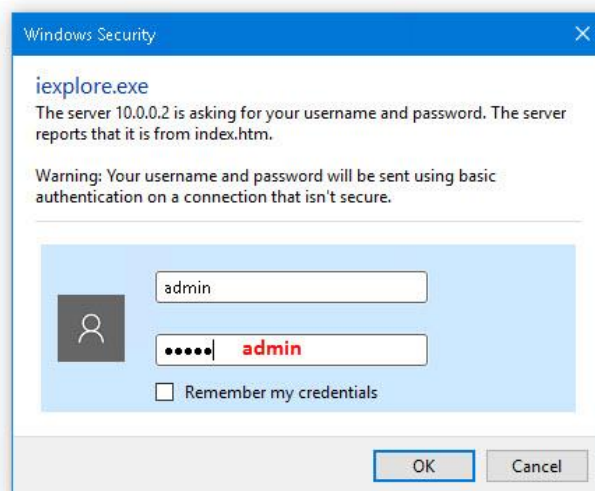

Step 3: Click on Internet setup, Channel Config. Select the WAN Physical type as "Ethernet WAN"



Note: once interface has been selected, unit will restart to load correct interface.





Setup Guide for the DSL-224

Step 4: After the unit has loaded the correct interface, Scroll down to the WAN table. Select the circular tick box to edit the default account.


CURRENT WAN TABLE:									
Select	Inf	Mode	NAPT	IGMP	Firewall	DRoute	User Name	Status	Edit
<input checked="" type="radio"/>	pppoe2	PPPoE	On	Off	On	On	guest@telkomadsl	Down	 

Step 5: Scroll up to the Channel configuration and modify the default configuration with the username and password provided by your ISP

- **Channel mode: PPPoE**
- **Enable NAPT: Enabled by default**
- **Enable Firewall: Enabled by default**
- **802.1q: Disable (Enabled by default)**
- **IP Protocol: IPv4/IPv6**
- **PPP setting Username and Password. Please enter details provided by ISP (Default is guest@telkomadsl and guest).**

CHANNEL CONFIGURATION	
Channel Mode: <input type="text" value="PPPoE"/>	Enable NAPT: <input checked="" type="checkbox"/> Enable IGMP: <input type="checkbox"/>
Enable Firewall: <input checked="" type="checkbox"/>	802.1q: <input checked="" type="radio"/> Disable <input type="radio"/> Enable
IP Protocol: <input type="text" value="Ipv4/Ipv6"/>	VLAN ID(1-4095): <input type="text" value="0"/>
PPP Settings: Username: <input type="text" value="guest@telkor"/>	Password: <input type="password" value="....."/>
Type: <input type="text" value="Continuous"/>	Idle Time (min): <input type="text"/>

Step 6: Click on modify to apply the new settings.

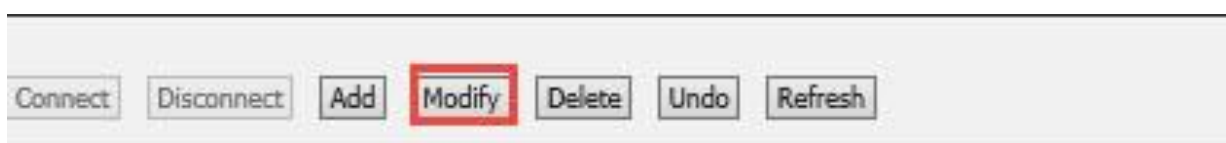



Setup Guide for the DSL-224