



## Step 1:

Open your Internet Browser and In put your router's IP (Default- 192.168.1.1). Username and Password- admin

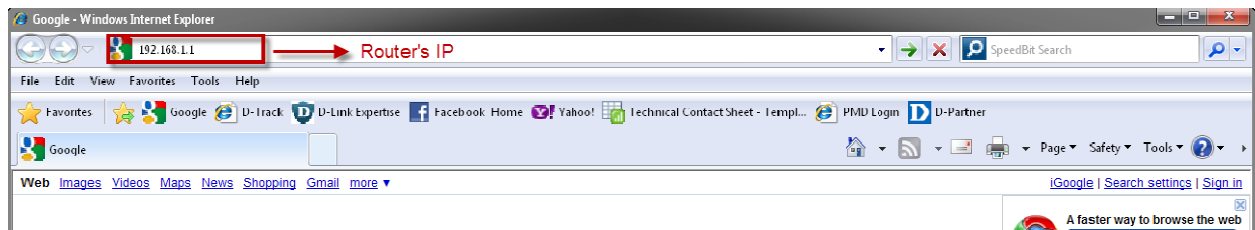

## Step 2:


Once Logged on Click Management followed by Update Software

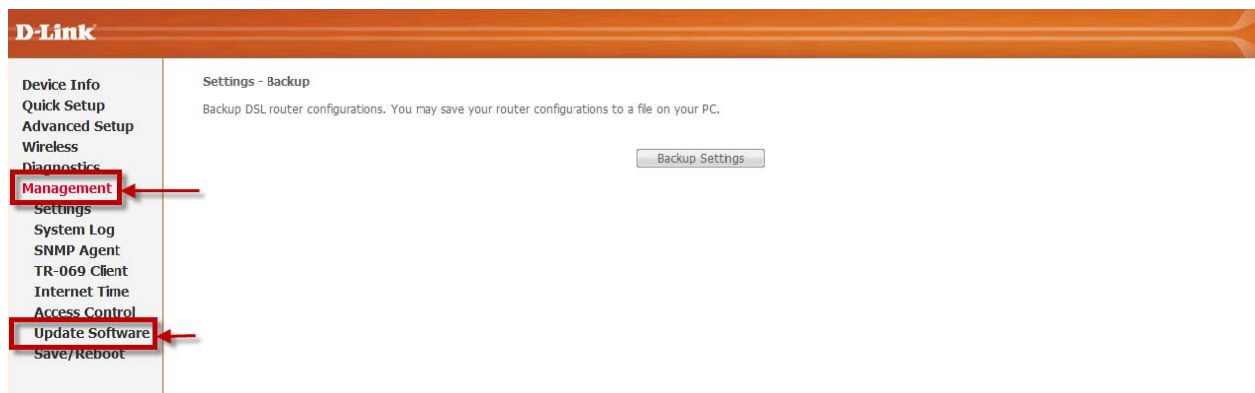


## Step 3:

Click on Browse and browse to the Firmware on your computer, then Click on Update Software.



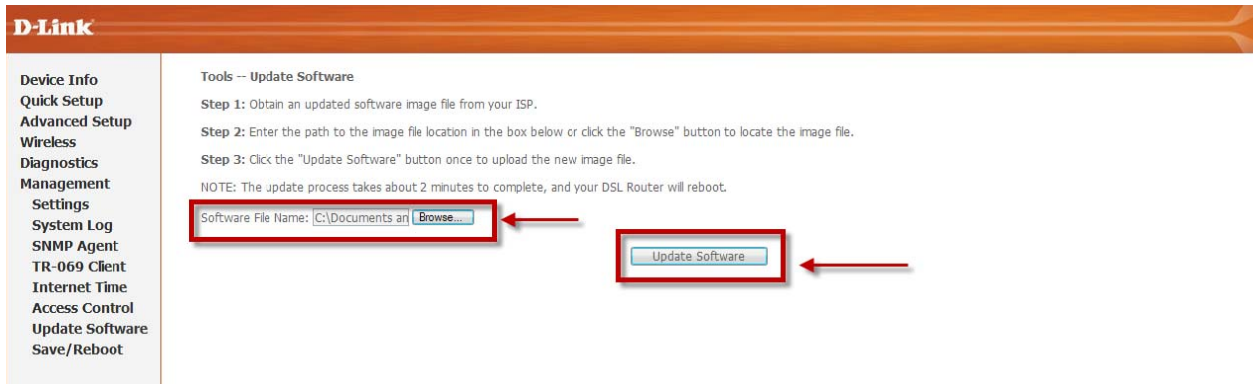


(Update Software)

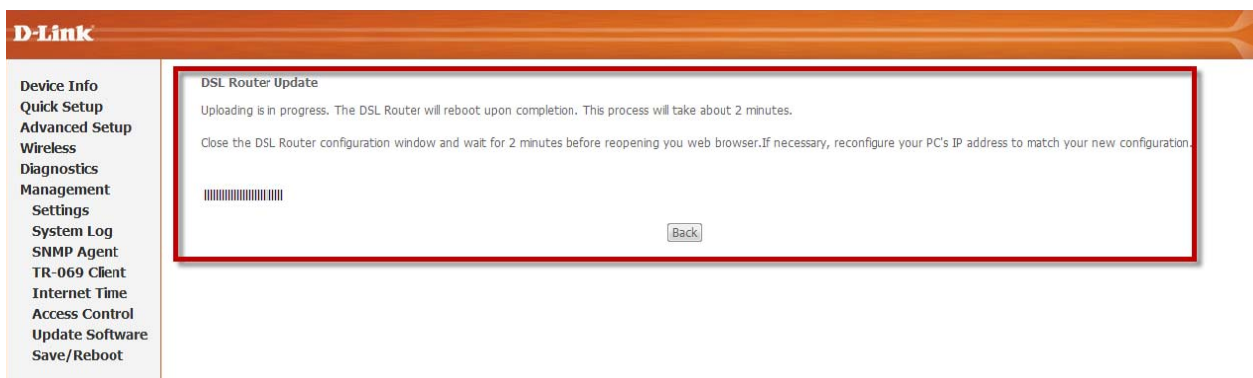


#### Step 4:

After Firmware has been Updated Click on Management followed By save/Reboot and then save and Reboot

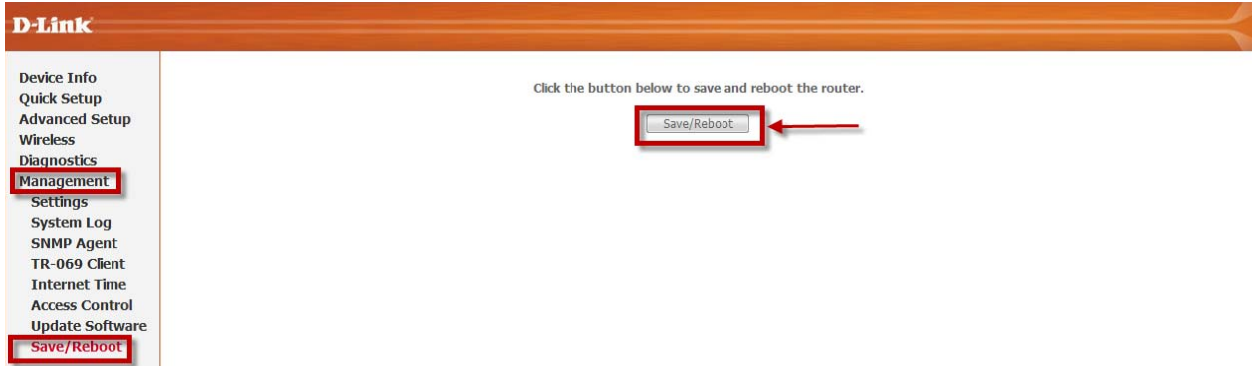

(save/Reboot)

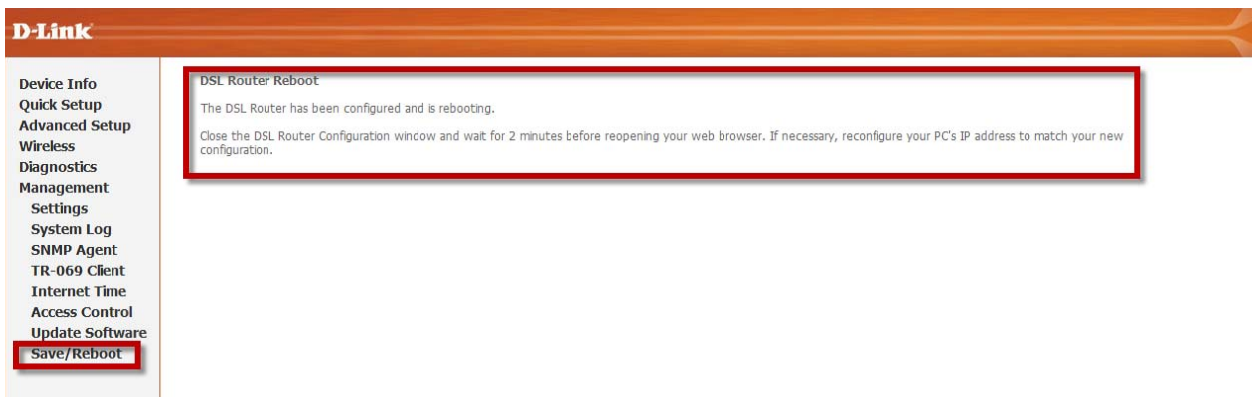

**New Firmware has now successfully been Loaded.**