

DSL-2750U Wireless Setup Guide

Step 1: Open your Internet browser (ex. Internet Explorer, Mozilla, Google Chrome, Safari) and type in the Routers IP address in the address bar and press enter. (Default IP 192.168.1.1).



Step 2: Type in the User Account Credentials for the router, then click OK/Log In.

By default the Username is: admin and the Password is: admin



Step 3: On the left side of the screen after successfully logging in, click on Wireless Setup.

Product Page: DSL-275	F	irmware Version:ME_1.03					
D-Linl	ĸ						
DSL-27500	SETUP	ADVANCED	MANAGEMENT	STATUS	HELP		
Wizard	WIRELESS BASIC			r <u> </u>			
Internet Setup	Use this section to con	figure the wireless settings	for your router. Please note	that changes made in this	section will also need to		
Wireless	<u>Wireless Basic</u>						
Local Network	Wireless Security	K SETTINGS					
LAN IPv6		Enable Wireless: 🗹		_	1 / 1 - 1 - 1		
Time and Date	Enable MultiAP Isolation:						
Logout	Wireless Net	work Name (SSID) : S+	M		2473œ		
		Visibility Status :	Visible O Invisible	¥	194		
		Country/Region : 50			12115		
			to Scan				
		Wireless Channel : Au	2 11b/g/n				
		Band Width : 20	M/40M ✓				
	Remember your SSID	as you will need to configure	e the same settings on your	wireless devices and PC.			
			Apply Cancel				
BROADBAND							
		Copyright @ 2013-2	015 D-Link Systems, Inc.				

Step 4: Wireless Basic Settings

- 1. Ensure that Enable Wireless is ticked.
- 2. Enable MultiAP Isolation un-ticked
- 3. SSID (Wireless network name) can be changed to whatever you want to call the wireless.
- 4. Country South Africa
- 5. Control Sideband Upper
- 6. Wireless Channel Auto Scan
- 7. 802.11 mode 802.1b/g/n (default settings)
- 8. Band Width 20M/40M
- Click "Apply Changes".
 <u>Note:</u> Router will restart the WLAN (Wireless) after you click "Apply Changes".

Step 4: Wireless Security Settings

- 1. Security Mode: Auto (WPA or WPA2) best for iOS devices.
- 2. WPA encryption: TKIP+AES (Default for WPA or WPA2 setting)
- 3. WPA Authentication Mode: Auto "(WPA or WPA2) PSK"
- 4. Group Key Update Interval: Change to 3600 (Default 1800) for better connectivity when experiencing intermittency.
- 5. Pre-Shared Key: must be a minimum of 8 characters

Note: The password will not be visible when entering. Best is to type the password in a notepad to ensure it is correct.

6. Click "Apply Changes".

Note: Router will restart the WLAN (Wireless) after you click "Apply Changes".

Product Page: DSL-275	0U			:	Firmware Version:ME_1.03				
D-Lin	ĸ								
DSL-2750U	SETUP	ADVANCED	MANAGEMENT	STATUS	HELP				
Wizard	WIRELESS SECURITY								
Internet Setup	In this page, you can configure the wireless security settings for the router. Please note that changes made in this page must also be duplicated to your wireless clients and PC.								
Wireless	Wireless Basic								
Local Network	Wireless Security	Y MODE							
LAN IPv6	To protect your privacy, you can configure wireless security features. The device supports 3 wireless security modes including: WEP, WPA, and WPA2. WEP is the original wireless encryption standard. WPA and WPA2 provide higher levels of security.								
Time and Date									
Logout	Security Mode : Auto(WPA or WPA2)								
	WPA Encryption : TKIP+AES V								
Select WPA or WPA2 to achieve a balance of strong security and best compatibility. This mode uses WPA for while maintaining higher security with stations that are WPA2 capable. The strongest cipher that the client su									
	For the highest securi access with WPA secu legacy devices work o	ty, select WPA2 Only. Thi rity. For maximum compat nly in this mode.	s mode uses AES (CCMP) o bility, select WPA Only . T	ipher and legacy stations a his mode uses TKIP cipher	are not allowed to r. Some gaming and				
To achieve better wireless performance, selectWPA2 Only (which uses AES cipher).									
	WPA-PSK does not require an authentication server. The WPA option requires an external RADIUS server.								
	WPA Mode : Auto(WPA or WPA2)-F 🗸								
		Group Key Update In	terval : 3600	Default 180	00				
PRE-SHARED KEY									
		Pre-Share	d Key :	Minimum o	of 8 characters				
	Remember your SSID a	nd the security key as you	will need to configure the s	ame settings on your wire	less devices and PC.				
			Apply Cancel						