


Dsl-2760u Internet setup


1. Change your network adapters IP address in the same range as the dsl-2760u.

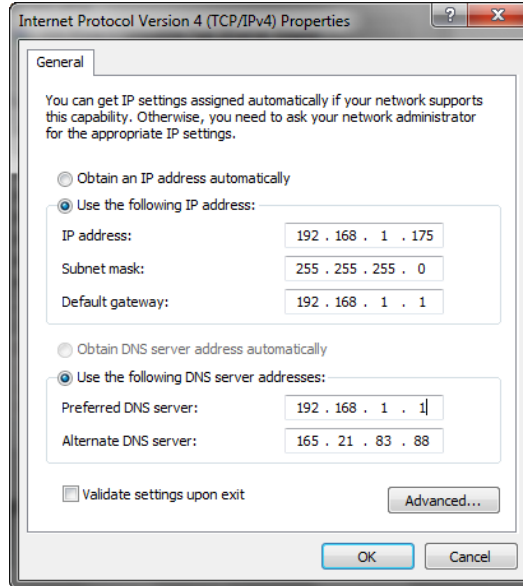


2. In Internet Explorer, in the address bar type the ip address if the dsl 2760u.



3. When it asks you for a user name and password the username is: "admin" and the password is: "admin"

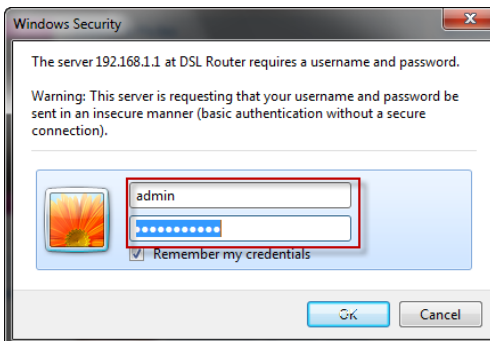

- When you are logged in, go to “advanced setup”, and then select “layer 2 interface” and select “add”

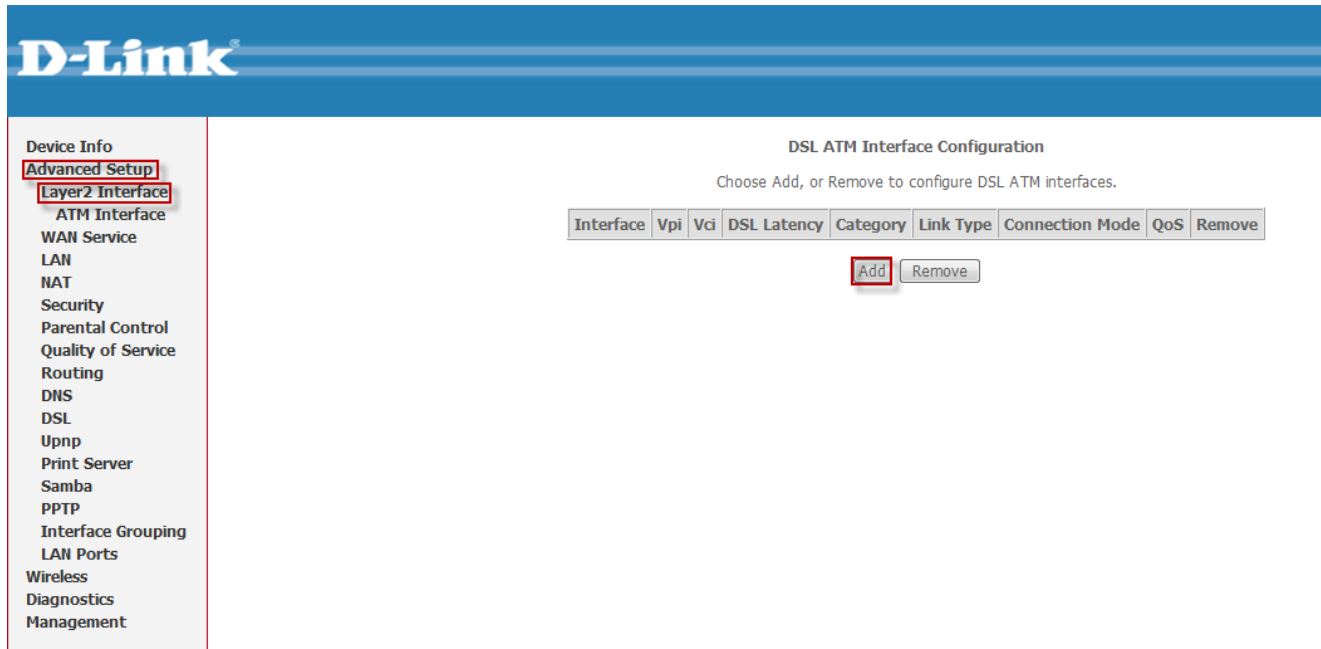

- Make sure the vpi is: 8 and the vci is: 35 and the select apply and save

ATM PVC Configuration

This screen allows you to configure an ATM PVC identifier (VPI and VCI), select DSL latency, select a service category. Otherwise choose an existing interface by selecting the checkbox to enable it.

VPI: [0-255]
VCI: [32-65535]

Select DSL Link Type (EoA is for PPPoE, IPoE, and Bridge.)

- EoA
- PPPoA
- IPoA

Encapsulation Mode:

Service Category:

Select Connection Mode


- Default Mode - Single service over one connection
- VLAN MUX Mode - Multiple Vlan service over one connection
- MSC Mode - Multiple Service over one Connection

Enable Quality Of Service


Enabling packet level QoS for a PVC improves performance for selected classes of applications. QoS cannot be set for CBR and Realtime VBR. QoS consumes system resources; therefore the number of PVCs will be reduced. Use **Advanced Setup/Quality of Service** to assign priorities for the applications.

Enable Quality Of Service.

6. Then go to “advanced setup” and “WAN Service” And select “add”

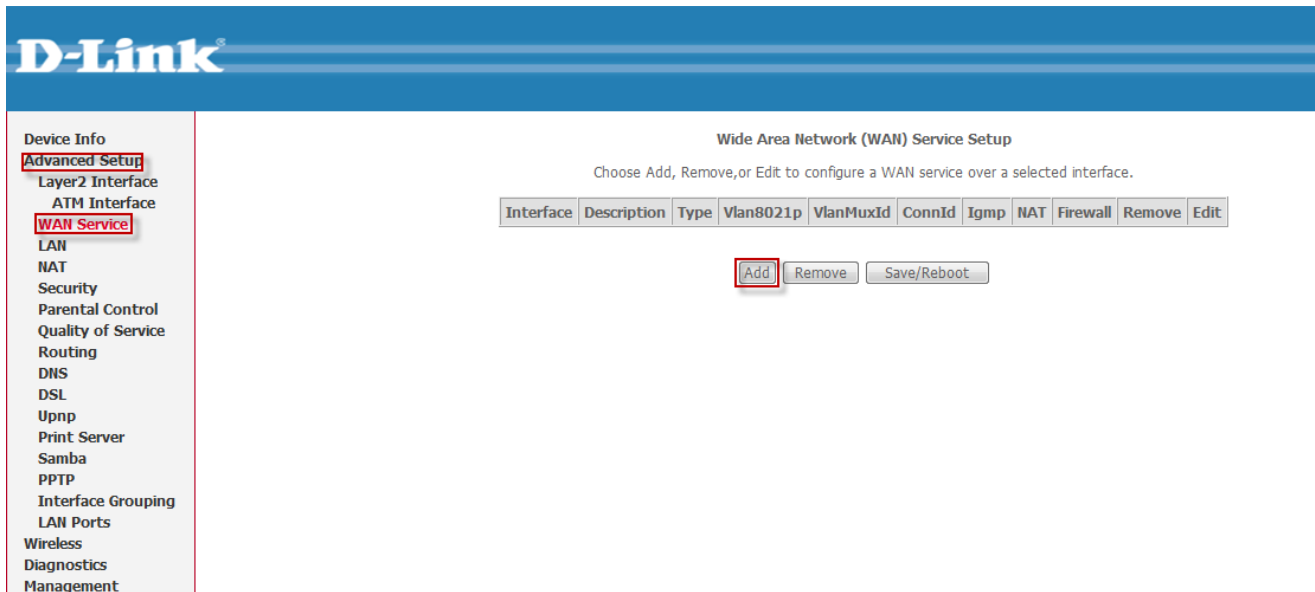

7. Select the layer 2 interface and then select next

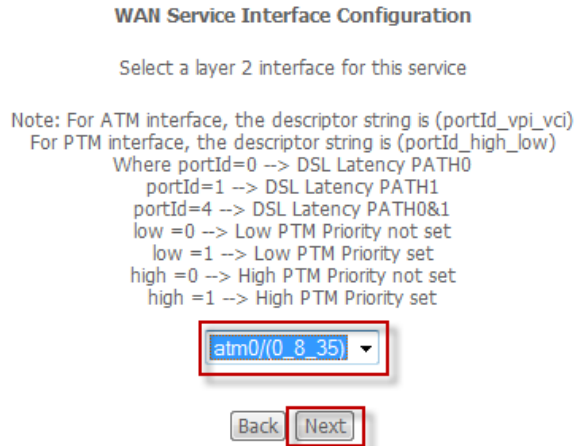

8. Select “ppp over Ethernet” and then next.

WAN Service Configuration

Select WAN service type:

PPP over Ethernet (PPPoE)

IP over Ethernet

Bridging

Enter Service Description:

9. Now type in your username and pass word that your ISP gave you at “ppp username” and “ppp password”. And make sure NAT is enabled and that Firewall is enabled. Then select next.

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

PPPoE Service Name:

Authentication Method:

Enable Fullcone NAT

Enable NAT

Enable Firewall

Keep alive PPP connection

LCP echo interval(seconds):

IP fragmentation low threshold:

IP fragmentation high threshold:

IP fragmentation time (seconds):

Dial on demand (with idle timeout timer)

PPP IP extension

Use Static IPv4 Address

Enable PPP Debug Mode

Bridge PPPoE Frames Between WAN and Local Ports

Multicast Proxy

Enable IGMP Multicast Proxy

PPP Link Setting

MTU

10. Select the wan interface you want to use. And select.

Routing -- Default Gateway

Select a preferred wan interface as the system default gateway.

Selected WAN Interface

11. Select “obtain DNS address from WAN interface” and select the WAN interface, and select then next.

DNS Server Configuration

Get DNS server information from the selected WAN interface OR enter static DNS server IP addresses. If only a single PVC with IPoA or static MER protocol is configured, you must enter static DNS server IP addresses.

Obtain DNS info from a WAN interface:
WAN Interface selected:

Use the following Static DNS IP address:
Primary DNS server:
Secondary DNS server:

12. Select apply and save.


D-Link Africa Setup Guide Document.

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

PORT / VPI / VCI:	0 / 8 / 35
Connection Type:	PPPoE
Service Name:	pppoe_0_8_35
Service Category:	UBR
IP Address:	Automatically Assigned
Service State:	Enabled
NAT:	Enabled
Full Cone NAT:	Disabled
Firewall:	Enabled
IGMP Multicast:	Disabled
Quality Of Service:	Disabled

 Click "Apply/Save" to have this interface to be effective. Click "Back" to make any modifications.



13. And the save and reboot.

Wide Area Network (WAN) Service Setup

Choose Add, Remove, or Edit to configure a WAN service over a selected interface.

Interface	Description	Type	Vlan8021p	VlanMuxId	ConnId	Igmp	NAT	Firewall	Remove	Edit
ppp0	pppoe_0_8_35	PPPoE	N/A	N/A	N/A	Disabled	Enabled	Enabled	<input type="checkbox"/>	<input type="button" value="Edit"/>


 


Wait 2 minutes for the router to save and reboot.

DSL Router Reboot


The DSL Router is rebooting.

Close the DSL Router Configuration window and wait for 2 minutes before reopening your web browser.

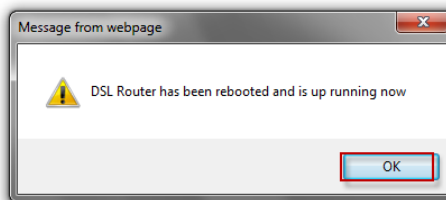

How to see if your internet is up:

1. Select “device Info” and then select WAN. Look at the box where it says status, if it says “up” then you have internet.

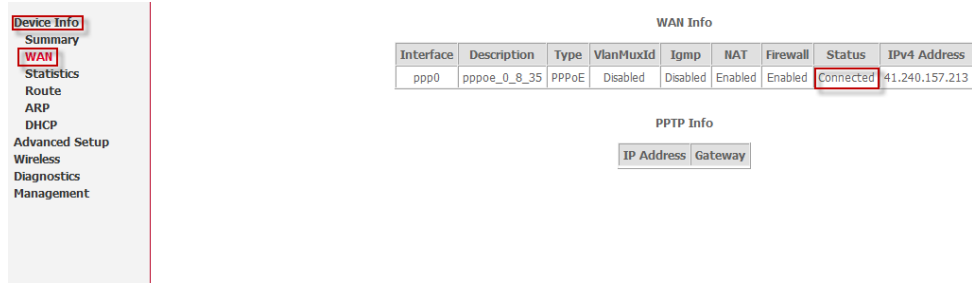

The screenshot shows the router's configuration interface. On the left is a sidebar menu with 'Device Info' selected. Under 'Device Info', 'WAN' is highlighted. The main content area displays 'WAN Info' with a table of interface details. The 'Status' column for the 'ppp0' interface is 'Connected', which is highlighted with a red box. Below the table, there is a 'PPTP Info' section with 'IP Address' and 'Gateway' fields.

Interface	Description	Type	VlanMuxId	Igmp	NAT	Firewall	Status	IPv4 Address
ppp0	pppoe_0_8_35	PPPoE	Disabled	Disabled	Enabled	Enabled	Connected	41.240.157.213

PPTP Info

IP Address	Gateway
------------	---------