



## How to setup Dongle on DSL-G2562DG


1. Please ensure that the dongle is compatible with the router  
[ftp://ftp.d-link.co.za/DSL/DSL-G2562DG%20\(Telkom\)/compatibility%20list/DSL-G2562DG%203G-LTE%20Compatibility%20List.pdf](ftp://ftp.d-link.co.za/DSL/DSL-G2562DG%20(Telkom)/compatibility%20list/DSL-G2562DG%203G-LTE%20Compatibility%20List.pdf)
2. Ensure the SIM is placed in the dongle correctly
3. Plug the Dongle in the USB port located on the back of the dngle

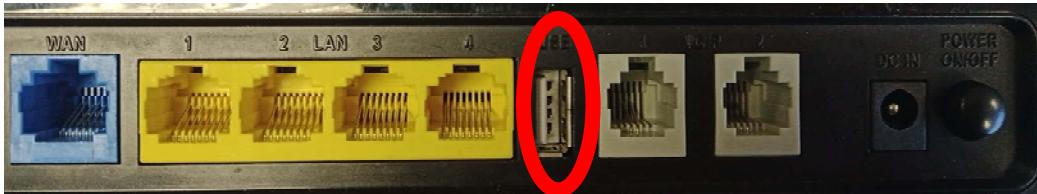

4. Check under Status > WAN > Dongle, status will show “Up” if the dongle is detected

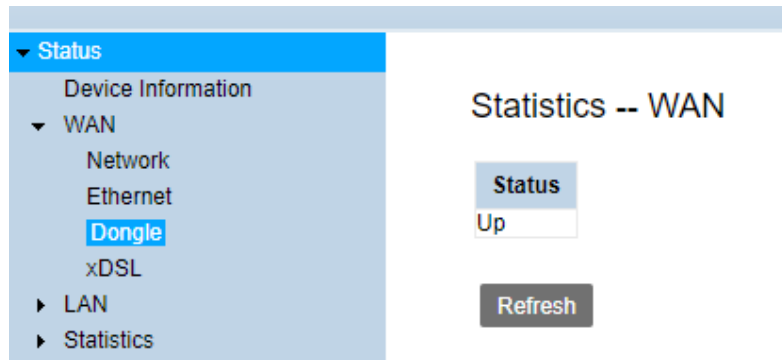

5. Check the setting for the Dongle under Basic Setup > WAN Service > Edit for Dongle

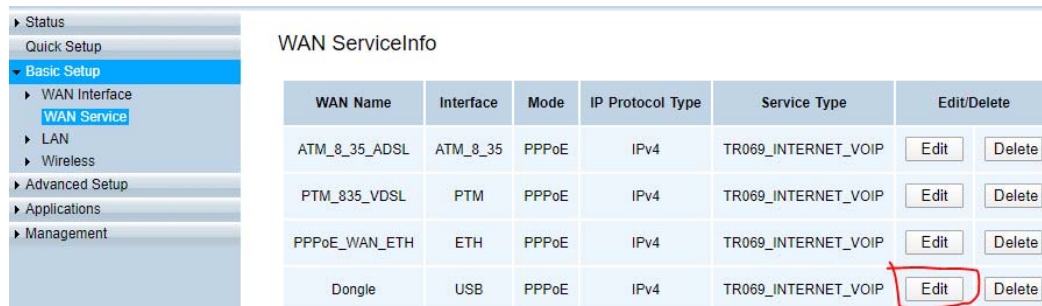


6. Check the APN settings,

Telkom sim: TelkomInternet

Any other sim: internet

Rain sim: rain (only works if the Dongle itself supports 4G)

And APPLY

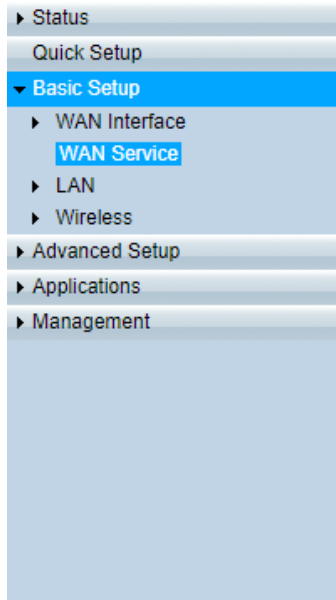

## WAN Service

Connection Name:	<input type="text" value="Dongle"/>
Enable:	<input checked="" type="checkbox"/>
MTU:	<input type="text" value="1492"/>
IP Protocol Type:	<input type="text" value="IPv4"/>
NAT:	<input checked="" type="checkbox"/>
Firewall:	<input checked="" type="checkbox"/>
IPv4 Static DNS:	<input type="checkbox"/>
PIN:	<input type="text"/>
APN:	<input type="text" value="TelkomInternet"/>

7. Restart the router for settings to apply

8. Check under Status > WAN > Network > under IPv4 WAN Connection Status >

Connection name: Dongle > Status

Connected: Internet is working correctly

Connecting: router is busy connecting to internet

Disconnected: please restart router

Note:

Internet light will flash Red/Green when dongle connects to internet