How do I update my ADSL2+ firmware on my DSL-504T?

Step 1 : Change you Local Area Connection IP to a Static IP e.g. 192.168.1.45 and disable your firewall.

Internet Protocol (TCP/IP) Properties	
General	
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	
O Obtain an IP address automatically	
⊙Use the following IP address:	
IP address:	192.168.1.45
S <u>u</u> bnet mask:	255.255.255.0
Default gateway:	192.168.1.1
Obtain DNS server address automatically	
O Use the following DNS server addresses:	
Preferred DNS server:	196 . 7 . 0 .140
<u>A</u> lternate DNS server:	196 . 7 .142 .132
Ad <u>v</u> anced	
OK Cancel	

Step 2 : Download the firmware version V2.01B01T01.RU.20060522 from our local website http://www.dlink.co.za/dsl-504t_tech_s.php

D-Link Africa Setup Guide Document.

Step 3: Open Internet Explorer and enter the default IP of the DSL-504T which is 192.168.1.1 to log in to the Web Configuration. (The default username and password is **admin**)



Step 4 : Click on TOOLS and FIRMWARE.

Step 4 : Click on Browse and browse to the downloaded files on your computer and select the Load_me_1st_V2.01B01T01.RU.20060522 file and click on Open. Then Click Apply.







Step 6 : Click on TOOLS and FIRMWARE.

Step 7 : Click on Browse and browse to the downloaded files on your computer and select the Load_me_2nd_V2.01B01T01.RU.20060522 file and click on Open. Then Click Apply.

