

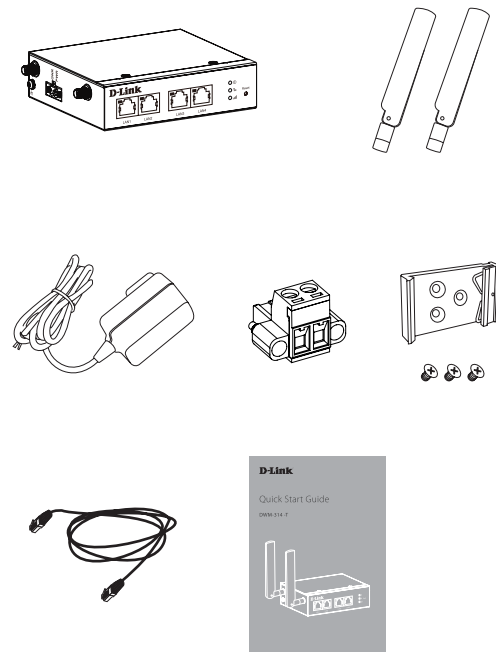


Quick Start Guide

DWM-314 -T

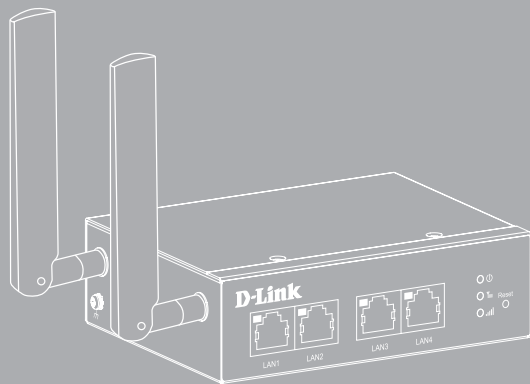

1

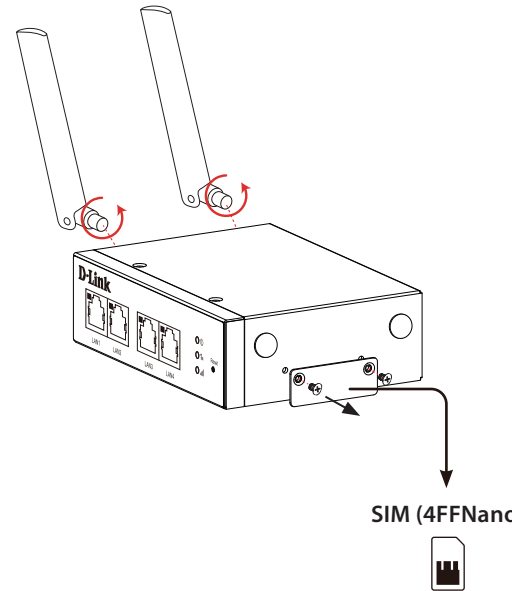


SIM (4FFNano)




2

9~36V DC


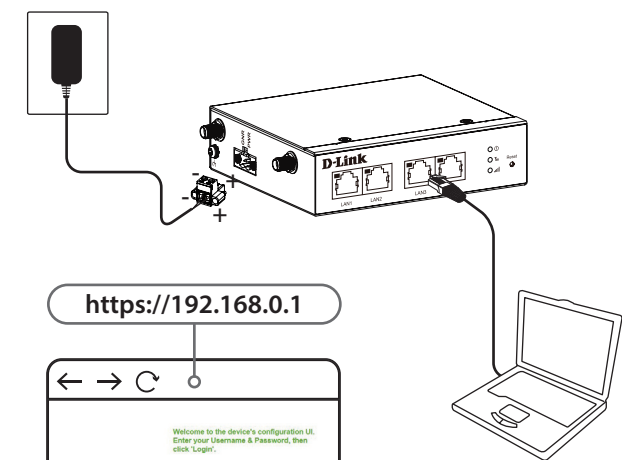


https://192.168.0.1

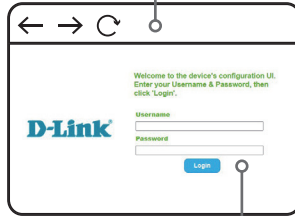


admin/admin

3

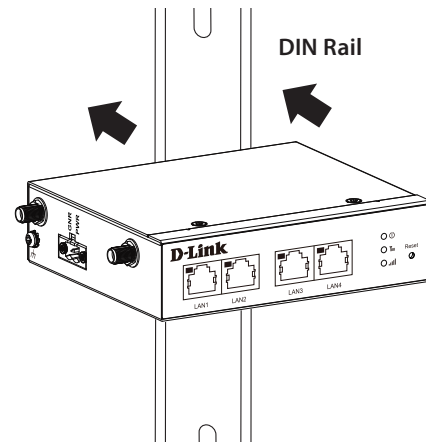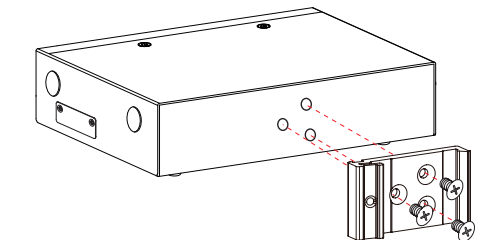

DIN Rail

4

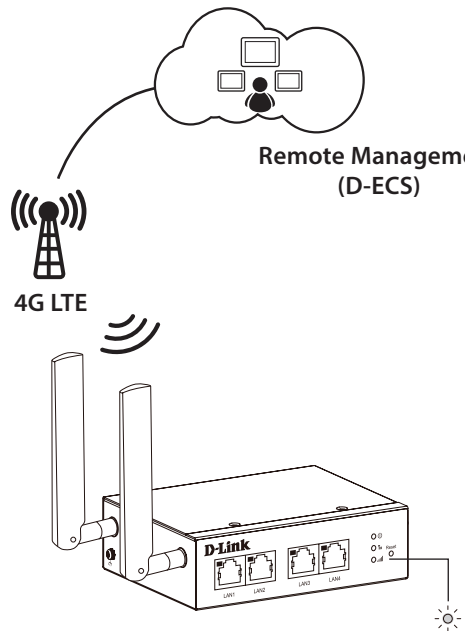

4G LTE

Remote Management
(D-ECS)



<http://www.dlink.com/support>



<http://www.dlink.com/warranty>