

# USER MANUAL

DWR-712

VERSION 1.0



**D-Link**<sup>®</sup>

**WIRELESS**

---

# Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

## Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2013 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

# Table of Contents

<b>Product Overview</b> .....	1	Wireless Connection Setup Wizard.....	21
Package Contents.....	1	Manual Wireless Connection Setup .....	23
System Requirements .....	1	Wireless Settings.....	24
Introduction .....	2	Wireless Security Mode .....	25
Hardware Overview .....	3	Wi-Fi Protected Setup .....	28
Rear Panel.....	3	Network Settings.....	30
Front Panel .....	4	Router Settings.....	30
LEDs .....	5	DHCP Server Settings.....	31
<b>Installation</b> .....	6	Message Service.....	32
Connect to Your Network .....	6	SMS Inbox.....	32
Wireless Installation Considerations.....	7	Create Message .....	33
<b>Configuration</b> .....	8	Advanced .....	34
Web-based Configuration Utility .....	8	Virtual Server .....	34
Setup.....	9	Application Rules.....	36
Internet.....	9	QoS Engine.....	37
Internet Connection Setup Wizard.....	9	MAC Address Filter .....	38
Manual Internet Connection Setup .....	12	URL Filter.....	39
Internet Connection .....	12	Outbound Filter.....	40
Static IP .....	13	Inbound Filter .....	41
Dynamic IP (DHCP).....	14	SNMP .....	42
PPPoE .....	15	Routing.....	43
PPTP.....	17	Advanced Wireless .....	44
L2TP .....	18	Advanced Network .....	45
3G .....	19	DMZ.....	46
Wireless Settings.....	21	Tools .....	47
		Admin .....	47

Time .....	48	<b>Wireless Basics .....</b>	<b>77</b>
Syslog .....	49	What is Wireless? .....	78
E-mail Settings .....	50	Tips .....	80
System .....	51	Wireless Modes .....	81
Firmware .....	52	<b>Networking Basics .....</b>	<b>82</b>
Dynamic DNS .....	53	Check your IP address .....	82
System Check .....	54	Statically Assign an IP address .....	83
Schedules .....	55	<b>Technical Specifications .....</b>	<b>84</b>
Connection Reset .....	56		
Status .....	57		
Device Info .....	57		
Log .....	58		
Statistics .....	59		
Wireless .....	60		
Support .....	61		
<b>Connecting to a Wireless Network .....</b>	<b>62</b>		
Using Windows 7 .....	62		
Configuring Wireless Security .....	64		
Using Windows Vista™ .....	67		
Configuring Wireless Security .....	68		
Using Windows® XP .....	70		
Configure WEP .....	71		
Configure WPA-PSK .....	73		
<b>Troubleshooting .....</b>	<b>75</b>		

# Product Overview

## Package Contents

- D-Link DWR-712 HSPA+ 3G Router
- Power adapter
- Manual and Warranty on CD
- Antenna

**Note:** Using a power supply with a different voltage rating than the one included with the DWR-712 will cause damage and void the warranty for this product.

## System Requirements

- A compatible (U)SIM card with service.\*
- Computers with Windows®, Macintosh®, or Linux-based operating system with an installed Ethernet adapter
- Internet Explorer 6 or Netscape Navigator™ Version 6.0 and above (for configuration)

\*Subject to services and service terms available from your carrier.

# Introduction


The D-Link HSPA+ 3G Router allows users to access worldwide mobile broadband networks. Once connected, users can transfer data, stream media, and send SMS messages. Simply insert your UMTS/HSUPA SIM card, and share your 3G Internet connection through a secure 802.11n wireless network or using any of the four 10/100 Ethernet ports.

Keep your wireless network safe with WPA/WPA2 wireless encryption. The DWR-712 utilizes dual-active firewalls (SPI and NAT) to prevent potential attacks across the Internet, and includes MAC address filtering to control access to your network.

The HSPA+ 3G Router can be installed quickly and easily almost anywhere. This router is great for situations where an impromptu wireless network must be set up, or wherever conventional network access is unavailable. The DWR-712 can even be installed in buses, trains, or boats, allowing passengers to check e-mail or chat online while commuting.

# Hardware Overview


## Rear Panel

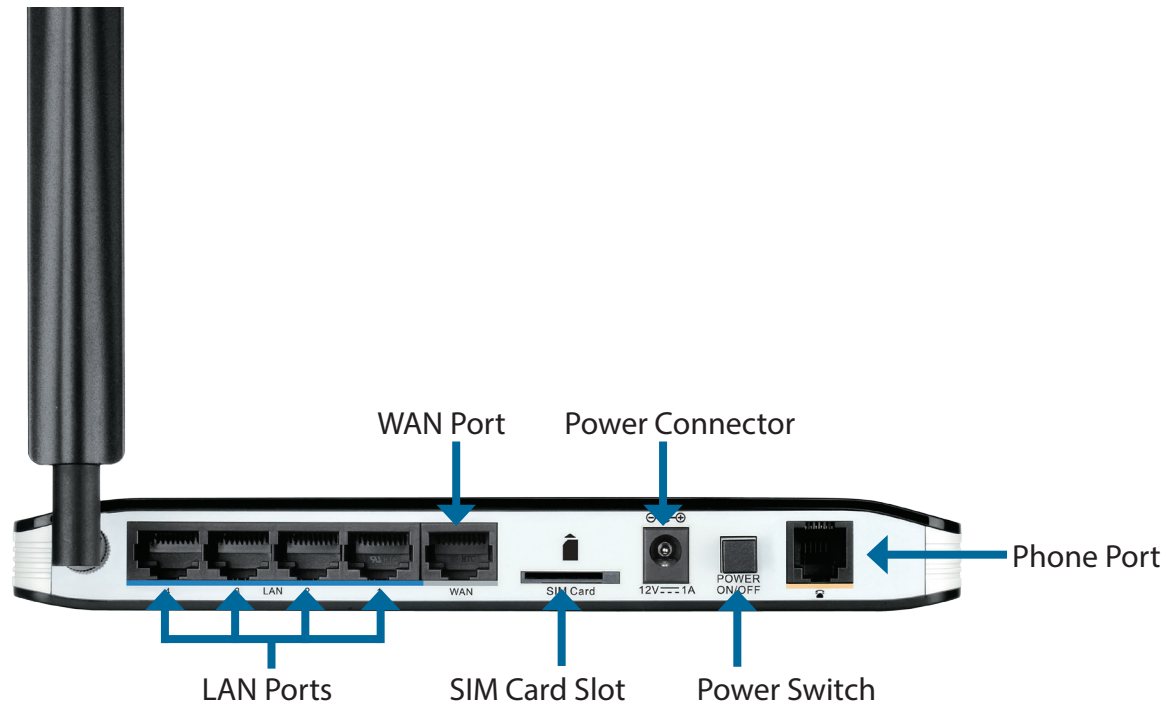

Port	Function
<b>LAN Ports (RJ-45)</b>	Connects to a network device such as a desktop or notebook computer through an Ethernet cable.
<b>WAN (RJ-45)</b>	Connects to a DSL/Cable modem or router through an Ethernet cable.
<b>SIM</b>	Accepts a standard (U)SIM card for 3G connectivity.
<b>Power</b>	Connects to the included power adapter.
<b>Power Switch</b>	Turns the device on or off.
<b>Phone Port</b>	Connect to a regular phone line.

# Hardware Overview

## Front Panel

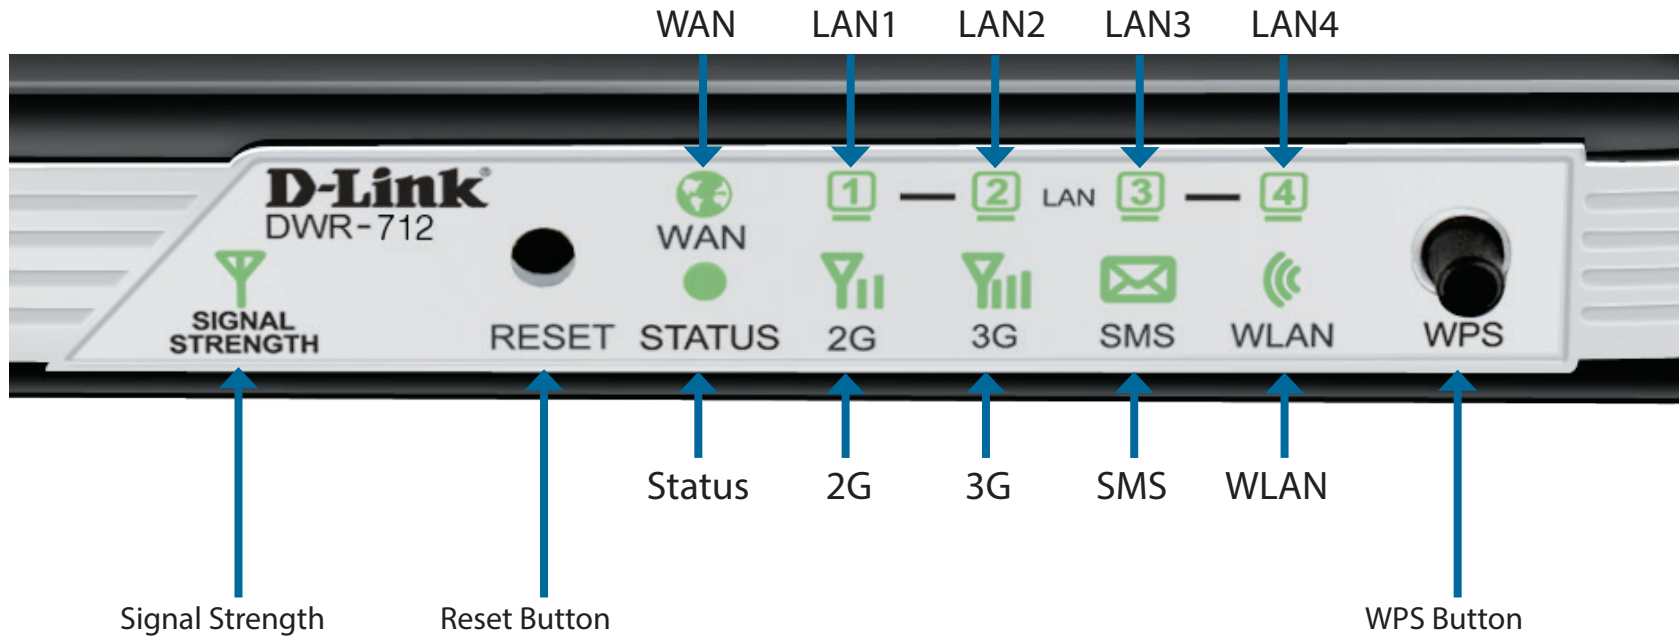

Button Name	Function
<b>Reset</b>	Press this button with an unfolded paperclip to reset the device.
<b>WPS</b>	Press this button to initiate a new WPS connection.



# Hardware Overview

## LEDs

LED Name	Function
<b>Status</b>	<b>Blinking Green:</b> Device is working
<b>WAN</b>	<b>Solid Green:</b> Ethernet connection has been established <b>Blinking Green:</b> Data is being transferred
<b>LAN 1-4</b>	<b>Solid Green:</b> Ethernet connection has been established <b>Blinking Green:</b> Data is being transferred
<b>Signal Strength</b>	<b>Blinking Red:</b> No SIM card / signal or unverified PIN code <b>Solid Red:</b> Signal strength is at level one (weak) <b>Solid Amber:</b> Signal strength is at level two or three (medium) <b>Solid Green:</b> Signal strength is at level four or five (strong)
<b>WPS</b>	<b>Slow Blinking Green:</b> WPS is functioning normally <b>Fast Blinking Green:</b> WPS is functioning in PBC mode
<b>2G</b>	<b>Solid Green:</b> EDGE or GPRS connection has been established <b>Blinking Green:</b> Data is being transferred via 2G/2.5G
<b>3G</b>	<b>Solid Green:</b> UMTS/HSDPA/HSUPA connection is established <b>Blinking:</b> Data is being transferred via 3G/3.75G
<b>SMS</b>	<b>Solid Green:</b> SMS storage is full <b>Blinking Green:</b> There is an unread SMS message
<b>WLAN</b>	<b>Solid Green:</b> WLAN is active and available <b>Blinking Green:</b> Data is being transferred over the WLAN

# Installation

This section will guide you through the installation process. Placement of the router is very important. Do not place the router in an enclosed area such as a closet, cabinet, or in an attic or garage.

## Connect to Your Network

1. Ensure that your DWR-712 HSPA+ 3G Router is disconnected and powered off.
2. Insert a standard (U)SIM card into the SIM card slot on the back of the router as indicated by the SIM card logo next to the slot. The gold contacts should face downwards.

**Caution:** Always unplug/power down the router before installing or removing the SIM card. Never insert or remove the SIM card while the router is in use.

3. Insert your Internet/WAN network cable into the WAN port on the back of the router.

**Note:** The 3G connection can also be used as a backup WAN. Once a backup is configured, the router will automatically use 3G for the Internet connection if the Ethernet WAN is not available.

4. Insert the Ethernet cable into the LAN Port 1 on the back panel of the DWR-712 HSPA+ 3G Router and an available Ethernet port on the network adapter in the computer you will use to configure the router.

**Note:** The DWR-712 HSPA+ 3G Router LAN Ports are Auto-MDI/MDIX, so both patch and crossover Ethernet cables can be used.

5. Connect the power adapter to the socket on the back panel of your DWR-712 HSPA+ 3G Router. Plug the other end of the power adapter into a wall outlet or power strip and turn the device on.
  - a. The Status LED will light up to indicate that power has been supplied to the router.
  - b. The LEDs on the front panel will flash on and off as the DWR-712 HSPA+ 3G Router performs initialization and Internet connection processes.
  - c. After a few moments, if a connection has been established, the following LEDs will turn solid green: Power, Status, WAN, WLAN, and any LAN Port LEDs that are connected computers or other devices.

# Wireless Installation Considerations

The DWR-712 can be accessed using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may limit the range of the wireless signal. Ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:


1. Minimize the number of walls and ceilings between the D-Link router and other network devices. Each wall or ceiling can reduce your adapter's range from 3 to 90 feet (1 to 30 meters).
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways and drywall. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using 2.4 GHz cordless phones, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even if the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

# Configuration

This section will show you how to configure your new D-Link mobile router using the web-based configuration utility.


## Web-based Configuration Utility

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the router (**192.168.0.1** by default).

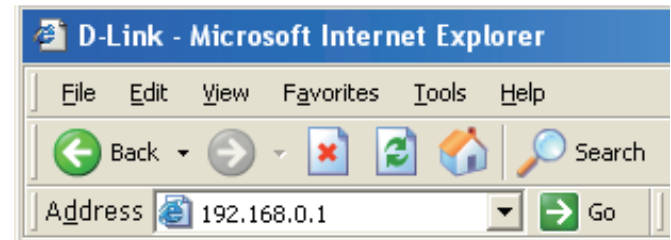

To log in to the configuration utility, enter **admin** as the username, and then enter the password. By default, the password is blank.

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section for assistance.

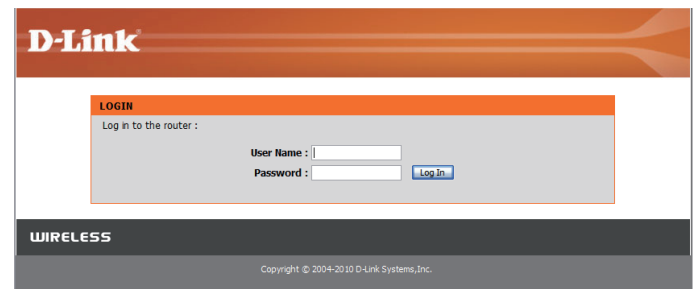


The configuration utility will open to the **STATUS > DEVICE INFO** page. You can view different configuration pages by clicking on the categories at the top of the screen (SETUP/ADVANCED/TOOLS/STATUS/SUPPORT), and then selecting a configuration page from the bar on the left side.

The following pages will describe each section in detail, starting with the **SETUP** pages.



# Setup

 The SETUP pages allow you to configure your Internet and wireless settings, as well as manage your SMS inbox. To view the Setup configuration pages, click on **SETUP** at the top of the screen.




## Internet

The Internet page allows you to configure how your router connects to the Internet. There are two ways to set up your Internet connection.

You can click on the **Internet Connection Setup Wizard** button to start a wizard that will guide you through setting up your Internet settings.

If you want to manually configure your settings, click **Manual Internet Connection Setup** and skip to “Manual Internet Connection Setup” on page 12.

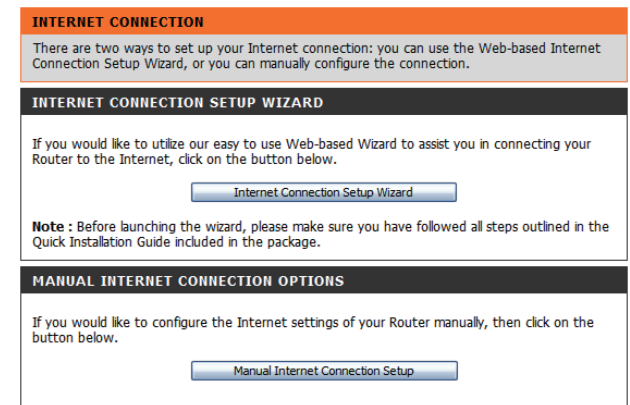


## Internet Connection Setup Wizard


This wizard will guide you through a step-by-step process to configure your D-Link router to connect to the Internet.

Click **Next** to continue.

**Note:** While using the wizard, you can click **Prev** to go back to the previous page or you can click **Cancel** to close the wizard.

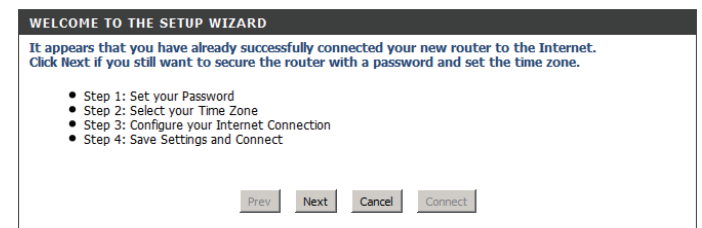

Create a new password and then click **Next** to continue.

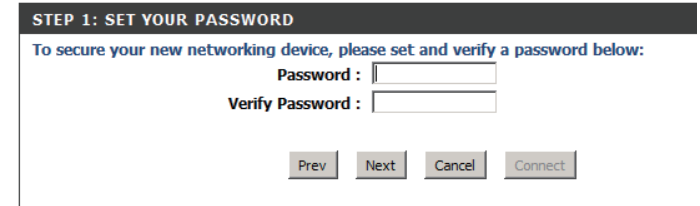


**STEP 1: SET YOUR PASSWORD**

To secure your new networking device, please set and verify a password below:

Password :

Verify Password :

Select your time zone from the drop-down box and then click **Next** to continue.

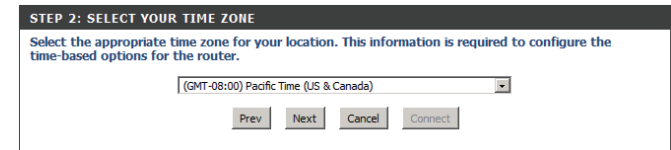


**STEP 2: SELECT YOUR TIME ZONE**

Select the appropriate time zone for your location. This information is required to configure the time-based options for the router.

Select the Internet connection type you use. The connection types are explained on the following page. If you are unsure which connection type you should use, contact your Internet Service Provider (ISP).

Click **Prev** to go back to the previous page or click **Cancel** to close the wizard.

**Note:** The DWR-712 has a WAN Failover feature that allows the router to switch to a 3G connection if the WAN connection is down or unavailable. To configure this feature, please refer to "Internet Connection" on page 12.

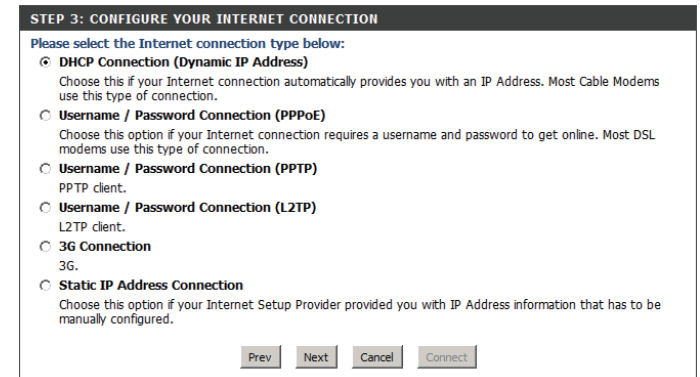

**STEP 3: CONFIGURE YOUR INTERNET CONNECTION**

Please select the Internet connection type below:

 
- DHCP Connection (Dynamic IP Address)**  
Choose this if your Internet connection automatically provides you with an IP Address. Most Cable Modems use this type of connection.
- Username / Password Connection (PPPoE)**  
Choose this option if your Internet connection requires a username and password to get online. Most DSL modems use this type of connection.
- Username / Password Connection (PPTP)**  
PPTP client.
- Username / Password Connection (L2TP)**  
L2TP client.
- 3G Connection**  
3G.
- Static IP Address Connection**  
Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured.

The subsequent configuration pages will differ depending on the selection you make on this page.

- DHCP Connection (Dynamic IP Address):** Choose this if your Internet connection automatically provides you with an IP Address. Most cable modems use this type of connection. See "Dynamic IP (DHCP)" on page 14 for information about how to configure this type of connection.
- Username / Password Connection (PPPoE):** Choose this option if your Internet connection requires a username and password to connect. Most DSL modems use this style of connection. See "PPPoE" on page 15 for information about how to configure this type of connection.
- Username / Password Connection (PPTP):** Choose this option if your Internet connection requires Point-to-Point Tunneling Protocol (PPTP). See "PPTP" on page 17 for information about how to configure this type of connection.
- Username / Password Connection (L2TP):** Choose this option if your Internet connection requires Layer 2 Tunneling Protocol (L2TP). See "L2TP" on page 18 for information about how to configure this type of connection.
- 3G Connection:** Choose this connection if you have installed a SIM card into the DWR-712. See "3G" on page 19 for information about how to configure this type of connection.
- Static IP Address Connection:** Choose this option if your Internet Setup Provider provided you with IP Address information that has to be manually configured. See "Static IP" on page 13 for information about how to configure this type of connection.

After entering the requested information,click **Next** to continue.

This completes the Internet Connection Setup Wizard. Click **Connect** to save your changes and reboot the router.



# Manual Internet Connection Setup

To set up your Internet connection manually, click **Manual Internet Connection Setup**.

**INTERNET CONNECTION**

There are two ways to set up your Internet connection: you can use the Web-based Internet Connection Setup Wizard, or you can manually configure the connection.

**INTERNET CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Router to the Internet, click on the button below.

**Note :** Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**MANUAL INTERNET CONNECTION OPTIONS**

If you would like to configure the Internet settings of your Router manually, then click on the button below.

## Internet Connection

Several different Internet Connection types can be selected depending upon the specifications of your Internet Service Provider (ISP). You can also set up the Auto-Backup feature, which allows you to use a 3G connection for your Internet connection if your main connection fails.

**My Internet Connection is:** Select the Internet Connection type specified by your Internet Service Provider (ISP). The corresponding settings will be displayed below. Please see the following pages for details on how to configure these different connection types.

**Host Name:** If the Internet Host you are using for the Auto-Backup feature requires you to enter a Host Name, enter it here. In most cases, you may leave this blank.

**Auto-Backup:** When this box is checked, the router will switch over to a 3G connection if the Internet Host (specified below) is unreachable.

**Internet Host:** Enter an IP address for the router to use to check if it is connected to the Internet. If Auto-Backup is enabled and the IP address cannot be reached, the router will switch over to a 3G connection.

**INTERNET CONNECTION**

Use this section to configure your Internet Connection type. There are several connection types to choose from: Static IP, DHCP, PPPoE, PPTP, L2TP, BigPond, and 3G. If you are unsure of your connection method, please contact your Internet Service Provider.

**Note:** If using the PPPoE option, you will need to remove or disable any PPPoE client software on your computers.

**INTERNET CONNECTION TYPE**

Choose the mode to be used by the router to connect to the Internet.

**My Internet Connection is :**

**Host Name :**

**Auto-Backup :**  Enable checking wired-WAN alive

**Internet host :**

\*Please input an IP address on the internet.

**DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE**

Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address information and/or a username and password.

**Primary DNS Server :**

**Secondary DNS Server :**  (optional)

**MTU :**  (bytes) MTU default = 1500

**MAC Address :**

**Auto-reconnect :**  Enable



## Static IP

Choose this Internet connection if your ISP assigns you a static IP address. After modifying any settings, click **Save Settings** to save your changes.

**IP Address:** Enter the IP address assigned to your network connection.

**Subnet Mask:** Enter the subnet mask.

**Default Gateway:** Enter the default gateway.

**Primary DNS Server:** Enter the primary DNS server.

**Secondary DNS Server:** Enter the secondary DNS server.

**MTU:** You may need to change the Maximum Transmission Unit (MTU) for optimal performance. The default value is 1500.

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your Ethernet card.

STATIC IP ADDRESS INTERNET CONNECTION TYPE	
Enter the static address information provided by your Internet Service Provider (ISP).	
IP Address :	<input type="text"/>
Subnet Mask :	<input type="text"/>
Default Gateway :	<input type="text"/>
Primary DNS Server :	<input type="text"/>
Secondary DNS Server :	<input type="text"/>
MTU :	<input type="text" value="1500"/> (bytes) MTU default = 1500
MAC Address :	<input type="text"/> <input type="button" value="Clone"/>

## Dynamic IP (DHCP)

This section will help you to obtain IP Address information automatically from your ISP. Use this option if your ISP didn't provide you with IP Address information and/or a username and password. After modifying any settings, click **Save Settings** to save your changes.


**Primary DNS Server:** (Optional) Fill in with IP address of primary DNS server.

**Secondary DNS Server:** (Optional) Fill in with IP address of secondary DNS server.

**MTU (Maximum Transmission Unit):** You may need to change the Maximum Transmission Unit (MTU) for optimal performance. The default value is 1500.

**MAC Address:** The default MAC Address is set to the Internet port's physical interface MAC address on the Broadband Router. It is not recommended that you change the default MAC address unless required by your ISP. You can use the **Clone Your PC's MAC Address** button to replace the Internet port's MAC address with the MAC address of your PC.

**Auto-reconnect:** This feature enables this product to renew the WAN IP address automatically when the lease time has expired.

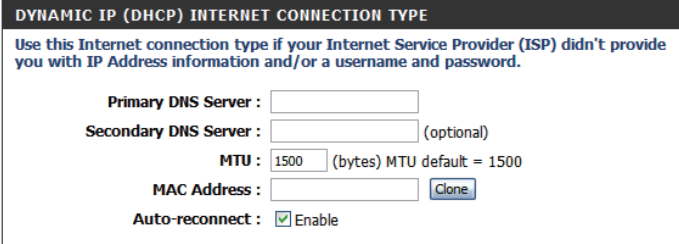

**DYNAMIC IP (DHCP) INTERNET CONNECTION TYPE**

Use this Internet connection type if your Internet Service Provider (ISP) didn't provide you with IP Address information and/or a username and password.

Primary DNS Server :

Secondary DNS Server :  (optional)

MTU :  (bytes) MTU default = 1500

MAC Address :

Auto-reconnect :  Enable

## PPPoE

Choose this Internet connection if your ISP provides you PPPoE account. After modifying any settings, click **Save Settings** to save your changes.

**Username:** The username/account name that your ISP provides to you for PPPoE dial-up.

**Password:** Password that your ISP provides to you for PPPoE dial-up.

**Verify Password:** Fill in with the same password in Password field.

**Reconnect Mode:** Choose **Always-on** when you want to establish PPTP connection all the time. If you choose **Connect-on-demand**, the device will establish PPTP connection when local users want to surf Internet, and disconnect if no traffic after time period of Maximum Idle Time.

**Service Name:** (Optional) Fill in if provided by your ISP.

**IP Address:** (Optional) Fill in if provided by your ISP. If not, keep the default value.

**Primary DNS Server:** (Optional) Fill in if provided by your ISP. If not, keep the default value.

**Secondary DNS Server:** (Optional) Fill in if provided by your ISP. If not, keep the default value.

**PPPOE**

Enter the information provided by your Internet Service Provider (ISP).

Username :	<input type="text"/>
Password :	<input type="password"/>
Verify Password :	<input type="password"/>
Reconnect Mode :	<input type="radio"/> Always-on <input checked="" type="radio"/> Connect-on-demand
Service Name :	<input type="text"/> (optional)
IP Address :	<input type="text"/>
Primary DNS Server :	<input type="text"/> (optional)
Secondary DNS Server :	<input type="text"/> (optional)
MAC Address :	<input type="text"/> <input type="button" value="Clone"/>
Maximum Idle Time :	<input type="text" value="300"/> seconds
MTU :	<input type="text" value="1492"/> (bytes) MTU default = 1492

**MAC Address:** MAC address of WAN interface. You can also copy MAC address of your PC to its WAN interface by pressing **Clone Your PC's MAC** button. The **Restore MAC** button will reset the router to its default MAC address.

**Maximum Idle Time:** The amount of time of inactivity before disconnecting established PPPoE session. Set it to zero or enable Auto-reconnect will disable this feature.

**Maximum Transmission Unit (MTU):** The default setting of PPPoE is 1492.

**PPPOE**  
Enter the information provided by your Internet Service Provider (ISP).

Username :

Password :

Verify Password :

Reconnect Mode :  Always-on  Connect-on-demand

Service Name :  (optional)

IP Address :

Primary DNS Server :  (optional)

Secondary DNS Server :  (optional)

MAC Address :

Maximum Idle Time :  seconds

MTU :  (bytes) MTU default = 1492

## PPTP

Choose this Internet connection if your ISP provides you PPTP account. After modifying any settings, click **Save Settings** to save your changes.

**Address Mode:** Choose Static IP only if your ISP assigns you an IP address. Otherwise, please choose Dynamic IP.

**PPTP IP Address:** Enter the information provided by your ISP. (Only applicable for Static IP PPTP.)

**PPTP Subnet Mask:** Enter the information provided by your ISP. (Only applicable for Static IP PPTP.)

**PPTP Gateway IP Address:** Enter the information provided by your ISP. (Only applicable for Static IP PPTP.)

**PPTP Server IP Address:** IP address of PPTP server.

**Username:** User/account name that your ISP provides to you for PPTP dial-up.

**Password:** Password that your ISP provides to you for PPTP dial-up.

**Verify Password:** Fill in with the same password in Password field.

**Reconnect Mode:** Choose **Always-on** when you want to establish PPTP connection all the time. If you choose **Connect-on-demand**, the device will establish PPTP connection when local users want to surf Internet, and disconnect if no traffic after time period of Maximum Idle Time.

**Maximum Idle Time:** The time of no activity to disconnect your PPTP session. Set it to zero or choose Always-on to disable this feature.

The screenshot shows a configuration window titled "PPTP" with the instruction "Enter the information provided by your Internet Service Provider (ISP)". The fields are as follows:

- Address Mode:** Radio buttons for "Dynamic IP" and "Static IP" (selected).
- PPTP IP Address:** Text box containing "0.0.0.0".
- PPTP Subnet Mask:** Text box containing "255.255.255.0".
- PPTP Gateway IP Address:** Text box containing "0.0.0.0".
- PPTP Server IP Address:** Empty text box.
- Username:** Empty text box.
- Password:** Empty text box.
- Verify Password:** Empty text box.
- Reconnect Mode:** Radio buttons for "Always-on" and "Connect-on-demand" (selected).
- Maximum Idle Time:** Text box containing "300" followed by "seconds".

At the bottom, there are two buttons: "Save Settings" and "Don't Save Settings".

## L2TP

Choose this Internet connection if your ISP provides you L2TP account. After modifying any settings, click **Save Settings** to save your changes.

**Address Mode:** Choose Static IP only if your ISP assigns you an IP address. Otherwise, please choose Dynamic IP.

**L2TP IP Address:** Enter the information provided by your ISP. (Only applicable for Static IP L2TP.)

**L2TP Subnet Mask:** Enter the information provided by your ISP. (Only applicable for Static IP L2TP.)

**L2TP Gateway IP Address:** Enter the information provided by your ISP. (Only applicable for Static IP L2TP.)

**L2TP Server IP Address:** IP address of L2TP server.

**Username:** User/account name that your ISP provides to you for L2TP dial-up.

**Password:** Password that your ISP provides to you for L2TP dial-up.

**Verify Password:** Fill in with the same password in Password field.

**Reconnect Mode:** Choose Always-on when you want to establish L2TP connection all the time. Choose Connect-on-demand the device will establish L2TP connection when local users want to surf Internet, and disconnect if no traffic after time period of Maximum Idle Time.

**Maximum Idle Time:** The time of no activity to disconnect your L2TP session. Set it to 0 or choose Always-on to disable this feature.

The screenshot shows the L2TP configuration window with the following fields and values:

- Address Mode:**  Dynamic IP  Static IP
- L2TP IP Address:**
- L2TP Subnet Mask:**
- L2TP Gateway IP Address:**
- L2TP Server IP Address:**
- Username:**
- Password:**
- Verify Password:**
- Reconnect Mode:**  Always-on  Connect-on-demand
- Maximum Idle Time:**  seconds

Buttons at the bottom: **Save Settings** and **Don't Save Settings**.

## 3G

Choose this Internet connection if you already use a SIM card for 3G Internet service from your Telecom company. The fields here may not be necessary for your connection. The information on this page should only be used if required by your service provider. After modifying any settings, click **Save Settings** to save your changes.

**Prefer Service Type:** Choose whether the DIR-712 should only use 3G networks, 2G networks, or use Auto Mode to automatically select a network.

**Account/Profile Name:** Fill in a name to identify the following 3G configuration.

**Username:** (Optional) Fill in only if requested by ISP.

**Password:** (Optional) Fill in only if requested by ISP.

**Dialed Number:** Enter the number to be dialed.

**Authentication:** Select PAP, CHAP, or Auto detection. The default authentication method is Auto.

**APN:** (Optional) Enter the APN information.

**PIN:** Enter the PIN associated with your SIM card.

**Reconnect Mode:** Select Auto or Manual to decide whether the router should reconnect to your 3G network automatically or manually.

**Maximum Idle Time:** Set the maximum time your connection can be idle before disconnecting. Set it to 0 or choose Auto in Reconnect Mode to disable this feature.

**Primary DNS Server:** (Optional) Fill in if provided by your ISP. If not, keep the default value.

**3G INTERNET CONNECTION TYPE**

Enter the information provided by your Internet Service Provider (ISP).

**Prefer Service Type :**

**Dial-Up Profile :**  Auto-Detection  Manual

**Pin Code :**

**Reconnect Mode :**  Auto  Manual

**Maximum Idle Time :**  seconds

**Keep Alive :**  Disable  Use Ping  Use LCP Echo Request

**Bridge ethernet ports :**  Enable

**NAT disable :**  Enable

**Roaming :**  Enable

**DNS check :**  Enable

**Secondary DNS Server:** (Optional) Fill in if provided by your ISP. If not, keep the default value.

**Keep Alive:** Select Disable or Use LCP Echo Request depending on the settings required by your ISP.

**PING Test** You can enable PING testing to check whether there is an active connection. Set the ping interval, the IP address to ping, and the packet size to use.

**Bridge Ethernet Ports:** Activate this feature to use the Ethernet WAN port as an additional LAN port.

**NAT Disable** Enabling this option will disable the NAT function of the DWR-712, allowing it to act as a link for your devices to your Internet connection, but without routing functions.

**3G INTERNET CONNECTION TYPE**  
Enter the information provided by your Internet Service Provider (ISP).

Prefer Service Type : Auto Mode ▾

Dial-Up Profile :  Auto-Detection  Manual

Pin Code :

Reconnect Mode :  Auto  Manual

Maximum Idle Time : 300 seconds

Keep Alive :  Disable  Use Ping  Use LCP Echo Request

Bridge ethernet ports :  Enable

NAT disable :  Enable

Roaming :  Enable

DNS check :  Enable



# Wireless Settings

This section will help you to manually configure the wireless settings of your router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

The Wireless Settings page allows you to configure how your router connects to the Internet. There are several ways to set up your wireless connection.

You can click on the **Wireless Connection Setup Wizard** button to start a wizard that will guide you through setting up your wireless settings.

If you want to manually configure your settings, click the **Manual Wireless Connection Setup** button and skip to "Manual Wireless Connection Setup" on page 23.

You can also set up a wireless connection to a device automatically, or configure your router automatically from a by clicking the **Wi-Fi Protected Setup** button. This is described in "Wi-Fi Protected Setup" on page 28.

**WIRELESS CONNECTION**

There are 3 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard or you can manually configure the connection.

**Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.**

**WIRELESS CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Wireless Router to the Internet, click on the button below.

[Wireless Connection Setup Wizard](#)

**Note:** Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**MANUAL WIRELESS CONNECTION OPTIONS**

If you would like to configure the Internet settings of your Router manually, then click on the button below.

[Manual Wireless Connection Setup](#)

**WI-FI PROTECTED SETUP**

If you would like to configure the Wi-Fi Protected Setup of your Router, then click on the button below.

[Wi-Fi Protected Setup](#)

## Wireless Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your D-Link router's wireless .

Click **Next** to continue.

**Note:** While using the wizard, you can click **Prev** to go back to the previous page or you can click **Cancel** to close the wizard.

**D-Link**

**WELCOME TO THE WIRELESS SECURITY SETUP WIZARD**

This wizard will guide you through a step-by-step process to setup your wireless network and make it secure.

- Step 1: Name your Wireless Network
- Step 2: Secure your Wireless Network
- Step 3: Set your Wireless Security Password

[Prev](#) [Next](#) [Cancel](#) [Save](#)

**WIRELESS**

Enter a name for your wireless network, then click **Next** to continue.

**STEP 1: NAME YOUR WIRELESS NETWORK**

Your wireless network needs a name so it can be easily recognized by wireless clients. For security purposes, it is highly recommended to change the pre-configured network name of [default].

Wireless Network Name (SSID) : myNetwork

Prev Next Cancel Save

Select a level of wireless security to use, then click **Next** to continue.

**STEP 2: SECURE YOUR WIRELESS NETWORK**

In order to protect your network from hackers and unauthorized users, it is highly recommended you choose one of the following wireless network security settings.

There are three levels of wireless security - Good Security, Better Security, or Best Security. The level you choose depends on the security features your wireless adapters support.

**BEST** :  Select this option if your wireless adapters SUPPORT WPA2

**BETTER** :  Select this option if your wireless adapters SUPPORT WPA

**GOOD** :  Select this option if your wireless adapters DO NOT SUPPORT WPA

**NONE** :  Select this option if you do not want to activate any security features

For information on which security features your wireless adapters support, please refer to the adapters' documentation.

Note: All wireless adapters currently support WPA.

Prev Next Cancel Save

If you chose **BEST** or **BETTER**, select whether to use TKIP or AES encryption, then enter a password to use for your wireless network. It is recommended that you use AES if your wireless computers and devices support it, as it is more secure. Click **Next** to continue.

**STEP 3: SET YOUR WIRELESS SECURITY PASSWORD**

Once you have selected your security level - you will need to set a wireless security password. With this password, a unique security key will be generated.

Wireless Security Password : AES myPassword

Note: You will need to enter the unique security key generated into your wireless clients enable proper wireless communication - not the password you provided to create the security key.

Prev Next Cancel Save

If you chose **GOOD**, select whether to use a HEX or ASCII password, then enter a password to use for your wireless network. If you choose HEX, you will need to enter a 10 or 26 digit password using only hex characters (0-9, A-F). If you choose ASCII, the password can be up to 5 or 13 alphanumeric characters. Click **Next** to continue.

**STEP 3: SET YOUR WIRELESS SECURITY PASSWORD**

Once you have selected your security level - you will need to set a wireless security password. With this password, a unique security key will be generated.

Wireless Security Password : HEX 1234567890

Note: You will need to enter the unique security key generated into your wireless clients enable proper wireless communication - not the password you provided to create the security key.

Prev Next Cancel Save

This completes the Wireless Connection Setup Wizard. Click **Save** to save your changes and reboot the router.

**SETUP COMPLETE!**

Below is a detailed summary of your wireless security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your wireless client adapters.

Wireless Network Name (SSID) : myNetwork

Prev Next Cancel Save

## Manual Wireless Connection Setup

To set up your wireless connection manually, click **Manual Wireless Connection Setup**.

**WIRELESS CONNECTION**

There are 3 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard or you can manually configure the connection.

**Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.**

**WIRELESS CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Wireless Router to the Internet, click on the button below.

[Wireless Connection Setup Wizard](#)

**Note:** Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**MANUAL WIRELESS CONNECTION OPTIONS**

If you would like to configure the Internet settings of your Router manually, then click on the button below.

[Manual Wireless Connection Setup](#)

**WI-FI PROTECTED SETUP**

If you would like to configure the Wi-Fi Protected Setup of your Router, then click on the button below.

[Wi-Fi Protected Setup](#)

## Wireless Settings

This page lets you set up your wireless network and choose a wireless security mode. After modifying any settings, click **Save Settings** to save your changes.

**Enable Wireless:** Select this checkbox to enable wireless access. When you set this option, the following parameters take effect.

**Wireless Network Name:** Also known as the SSID (Service Set Identifier), this is the name of your Wireless Local Area Network (WLAN). Enter a name using up to 32 alphanumeric characters. The SSID is case-sensitive.

**802.11 Mode: B/G mixed:** Enable this mode if your network contains a mix of 802.11b and 802.11g devices.

**N only:** Enable this mode if your network only has 802.11n devices.

**B/G/N mixed:** Enable this mode if you have a mix of 802.11n, 802.11g, and 802.11b clients.

**Auto Channel Scan:** Enabling this feature will allow the router to scan for the best channel to use automatically.

**Wireless Channel:** A wireless network uses specific channels in the wireless spectrum to handle communication between clients. Some channels in your area may experience interference from other electronic devices. Choose the clearest channel to help optimize the performance and coverage of your wireless network, or enable Auto Channel Scan for the router to automatically select the best channel.

**Visibility Status:** This setting determines whether the SSID will be **Visible** or **Invisible** to wireless clients looking for wireless networks. Setting this to **Invisible** can increase the security of your network by hiding it, but clients will need to manually enter the SSID of your network to connect.

**WIRELESS NETWORK**

Use this section to configure the wireless settings for this device. Please note that changes made on this section may also need to be duplicated on your wireless client.

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA and WPA2.

---

**WIRELESS NETWORK SETTINGS**

**Enable Wireless :**

**Wireless Network Name :**  (Also called the SSID)

**802.11 Mode :**

**Auto Channel Scan :**

**Wireless Channel :**

**Visibility Status :**  Visible  Invisible

---

**WIRELESS SECURITY MODE**

**Security Mode :**

## Wireless Security Mode

You can choose from several different wireless security modes. After selecting a mode, the settings for that mode will appear. After modifying any settings, click **Save Settings** to save your changes.

**Security Mode:** You can choose from 4 different security modes.

- **None:** No security will be used. This setting is not recommended.
- **WEP:** WEP encryption will be used. This setting is only recommended if your wireless devices cannot support WPA or WPA2.
- **WPA-Personal:** WPA-PSK encryption will be used. This setting is recommended for most users.
- **WPA-Enterprise:** WPA-EAP encryption will be used. This setting is only recommended if you have a RADIUS authentication server. Otherwise, **WPA-Personal** should be used.

**WIRELESS NETWORK**

Use this section to configure the wireless settings for this device. Please note that changes made on this section may also need to be duplicated on your wireless client.

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA and WPA2.

---

**WIRELESS NETWORK SETTINGS**

Enable Wireless :

Wireless Network Name :  (Also called the SSID)

802.11 Mode :

Auto Channel Scan :

Wireless Channel :

Visibility Status :  Visible  Invisible

---

**WIRELESS SECURITY MODE**

Security Mode :

If you choose **WEP**, the following options will appear:

- Authentication:** Select whether to use Open or Shared authentication.
- WEP Encryption:** Select whether to use **64-bit** or **128-bit** encryption.
- Default WEP Key:** Select which WEP key (1-4) to use as the default key. This will also change the WEP Key text box to that WEP key for you to configure(1-4).
- WEP Key:** Set the WEP key/password for your wireless network. Based on whether you are using 64 or 128-bit encryption, and whether you are using a HEX or ASCII key, you will need to enter different numbers of characters for your key, as indicated below the WEP Key text box. ASCII keys may use letters and numbers only, and HEX keys may use numbers 0-9 and letters A-F only.

**WIRELESS SECURITY MODE**

**Security Mode :** WEP

---

**WEP**

WEP is the wireless encryption standard. To use it you must enter the same key(s) into the router and the wireless stations. For 64 bit keys you must enter 10 hex digits into each key box. For 128 bit keys you must enter 26 hex digits into each key box. A hex digit is either a number from 0 to 9 or a letter from A to F. For the most secure use of WEP set the authentication type to "Shared Key" when WEP is enabled.

You may also enter any text string into a WEP key box, in which case it will be converted into a hexadecimal key using the ASCII values of the characters. A maximum of 5 text characters can be entered for 64 bit keys, and a maximum of 13 characters for 128 bit keys.

**Authentication :** Open

**WEP Encryption :** 64Bit

**Default WEP Key :** WEP Key 1

**WEP Key :** ASCII  (5 ASCII or 10 HEX)

If you choose **WPA-Personal**, the following options will appear:

- WPA Mode:** Select whether to use **WPA2 only** or **WPA only**. **WPA2 only** is the most secure, provided that all of your clients can support it.
- Cipher Type:** Select whether to use the **TKIP** or **AES** cipher. The **AES** cipher is the most secure, provided that all of your clients can support it.
- Network Key:** Enter the key/password you want to use for your wireless network. The key must be 8 to 63 characters long, and may only contain letters and numbers.

**WIRELESS SECURITY MODE**

**Security Mode :** WPA-Personal

---

**WPA**

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

**WPA Mode :** WPA only

**Cipher Type :** AES

---

**PRE-SHARED KEY**

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

**Network Key :**  (8~63 ASCII or 64 HEX)

If you choose **WPA-Enterprise**, the following options will appear:

**WPA Mode:** Select whether to use **WPA2 only** or **WPA only**. **WPA2 only** is the most secure, provided that all of your clients can support it.

**Cipher Type:** Select whether to use the **TKIP** or **AES** cipher. The **AES** cipher is the most secure, provided that all of your clients can support it.

**RADIUS Server IP Address:** Enter the IP address of your RADIUS server.

**RADIUS Server Port:** Enter the port used for your RADIUS server.

**RADIUS Server Shared Secret:** Enter the Shared Secret/password for your RADIUS server.

**WIRELESS SECURITY MODE**

**Security Mode :**

**WPA**

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

**WPA Mode :**

**Cipher Type :**

**EAP (802.1X)**

When WPA enterprise is enabled, the router uses EAP (802.1x) to authenticate clients via a remote RADIUS server.

**RADIUS Server IP Address :**

**RADIUS server Port :**

**RADIUS server Shared Secret :**

# Wi-Fi Protected Setup

To open the Wi-Fi Protected Setup page, click **Wi-Fi Protected Setup**.

The Wi-Fi Protected Setup page allows you to create a wireless connection between your router and a device automatically by simply pushing a button or entering a PIN code.

You can also use Windows 7 to do initial configuration of your router by using the **Connect to a network** wizard in Windows, and entering the WPS PIN/AP PIN of the router when prompted. After modifying any settings, click **Save Settings** to save your changes.

**WIRELESS CONNECTION**

There are 3 ways to setup your wireless connection. You can use the Wireless Connection Setup wizard or you can manually configure the connection.

**Please note that changes made on this section will also need to be duplicated to your wireless clients and PC.**

**WIRELESS CONNECTION SETUP WIZARD**

If you would like to utilize our easy to use Web-based Wizard to assist you in connecting your Wireless Router to the Internet, click on the button below.

[Wireless Connection Setup Wizard](#)

**Note:** Before launching the wizard, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

**MANUAL WIRELESS CONNECTION OPTIONS**

If you would like to configure the Internet settings of your Router manually, then click on the button below.

[Manual Wireless Connection Setup](#)

**WI-FI PROTECTED SETUP**

If you would like to configure the Wi-Fi Protected Setup of your Router, then click on the button below.

[Wi-Fi Protected Setup](#)

**WI-FI PROTECTED SETUP**

Wi-Fi Protected Setup is used to easily add devices to a network using a PIN or button press. Devices must support Wi-Fi Protected Setup in order to be configured by this method.

[Save Settings](#) [Don't Save Settings](#)

**WI-FI PROTECTED SETUP**

**WPS :**  Enable  Disable

**AP PIN :** 48115179 [Generate New PIN](#)

**Config Mode :** Registrar [▼](#)

**Config Status :** CONFIGURED [Release](#)

**Disable WPS-PIN Method :**

**Config Method :** Push Button [▼](#)

**WPS status :** NOUSED [Trigger](#)

[Save Settings](#) [Don't Save Settings](#)



**WPS:** Select whether you would like to enable or disable WPS features.

**AP PIN (also known as WPS PIN):** If you use Windows 7's **Connect to a network** wizard to do initial configuration of the router, you will need to enter the WPS PIN/AP PIN into the wizard when prompted. The factory default WPS PIN/AP PIN is printed on a label located on the bottom of the router. You can click the **Generate New PIN** button to change it to a randomly generated PIN.

**Config Mode:** Select whether the WPS config mode should be set to **Registrar** or **Enrollee**. In most cases, this should be set to **Registrar** so that you can use WPS to connect new wireless clients.

**Config Status:** If this is set to **CONFIGURED**, the router will be marked as "already configured" to computers that try to use WPS configuration, such as Windows 7's **Connect to a network** wizard. You can click the **Release** button to change the status to **UNCONFIGURED** to allow for WPS configuration of the router.

If this is set to **UNCONFIGURED**, you can click the **Set** button to change the status to **CONFIGURED** to block WPS configuration of the router.

**Config Method:** This lets you choose whether to use the **Push Button** connection method (PBC) or **PIN** method to connect to a wireless client when the **Trigger** button is clicked. If you choose the **PIN** method, you will need to enter a 8-digit PIN number that the wireless client need to use to connect to your router.

**WPS Status:** This will show the current WPS connection process status. Click the **Trigger** button to initiate a WPS connection.

**WI-FI PROTECTED SETUP**

Wi-Fi Protected Setup is used to easily add devices to a network using a PIN or button press. Devices must support Wi-Fi Protected Setup in order to be configured by this method.

Save Settings Don't Save Settings

---

**WI-FI PROTECTED SETUP**

WPS :  Enable  Disable

AP PIN : 48115179

Config Mode : Registrar

Config Status : CONFIGURED

Disable WPS-PIN Method :

Config Method : Push Button

WPS status : NOUSED

Save Settings Don't Save Settings

# Network Settings

This section will help you to change the internal network settings of your router and to configure the DHCP Server settings. After modifying any settings, click **Save Settings** to save your changes.

## Router Settings

**Router IP Address:** Enter the IP address you want to use for the router. The default IP address is **192.168.0.1**. If you change the IP address, you will need to enter the new IP address in your browser to get into the configuration utility.

**Default Subnet Mask:** Enter the **Subnet Mask** of the router. The default subnet mask is **255.255.255.0**.

**Local Domain Name:** Enter the local domain name for your network.

**NETWORK SETTING**

Use this section to configure the internal network settings of your router and also to configure the built-in DHCP server to assign IP address to the computers on your network. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.

Please note that this section is optional and you do not need to change any of the settings here to get your network up and running.

**ROUTER SETTINGS**

Use this section to configure the internal network settings of your router. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.

**Router IP Address :**

**Default Subnet Mask :**

**Local Domain Name :**

**DHCP SERVER SETTINGS**

Use this section to configure the built-in DHCP server to assign IP address to the computers on your network.

**Enable DHCP Server :**

**DHCP IP Address Range :**  to  (addresses within the LAN subnet)

**DHCP Lease Time :**  (Seconds)

**Primary DNS IP Address :**

**Secondary DNS IP Address :**

**Primary WINS IP Address :**

**Secondary WINS IP Address :**

## DHCP Server Settings

The DWR-712 has a built-in DHCP (Dynamic Host Control Protocol) server. The DHCP server assigns IP addresses to devices on the network that request them. By default, the DHCP Server is enabled on the device. The DHCP address pool contains a range of IP addresses, which is automatically assigned to the clients on the network. After modifying any settings, click **Save Settings** to save your changes.

**Enable DHCP Server:** Select this box to enable the DHCP server on your router.

**DHCP IP Address Range:** Enter the range of IPs for the DHCP server to use to assign IP addresses to devices on your network.

**DHCP Lease Time:** Enter lease time for IP address assignments.

**Primary DNS IP Address:** Enter the primary DNS IP Address that will be assigned to DHCP clients.

**Secondary DNS IP Address:** Enter the secondary DNS IP Address that will be assigned to DHCP clients.

**Primary WINS IP Address:** Enter the primary WINS IP Address that will be assigned to DHCP clients.

**Secondary WINS IP Address:** Enter the secondary WINS IP Address that will be assigned to DHCP clients.

The screenshot shows the 'DHCP SERVER SETTINGS' configuration page. It includes a title bar, a descriptive paragraph, and several configuration fields. The 'Enable DHCP Server' checkbox is checked. The 'DHCP IP Address Range' is set to 50 to 199. The 'DHCP Lease Time' is set to 86400 seconds. There are four empty input fields for DNS and WINS IP addresses. At the bottom, there are two buttons: 'Save Settings' and 'Don't Save Settings'.

**DHCP SERVER SETTINGS**

Use this section to configure the built-in DHCP server to assign IP address to the computers on your network.

Enable DHCP Server :

DHCP IP Address Range : 50 to 199 (addresses within the LAN subnet)

DHCP Lease Time : 86400 (Seconds)

Primary DNS IP Address :

Secondary DNS IP Address :

Primary WINS IP Address :

Secondary WINS IP Address :

Save Settings Don't Save Settings

# Message Service

If your ISP provides **SMS** service, you can check and send messages from this page.

**SMS Inbox:** Click this button to view SMS messages that you have received.

**Create Message:** Click this button to create a new message to send.



## SMS Inbox


This page shows all messages that are stored on the SIM card. Select a message to display its contents in the SMS window. After you read it, you can delete it, or reply to the sender. Click the **Refresh** button to update the list.

**Delete:** Deletes the selected SMS message.

**Reply:** Opens a Create Message window to reply to the selected SMS message.

**Forward:** Opens a Create Message windows to forward the selected SMS message to another recipient.

**Refresh:** Click this button to check for new messages.

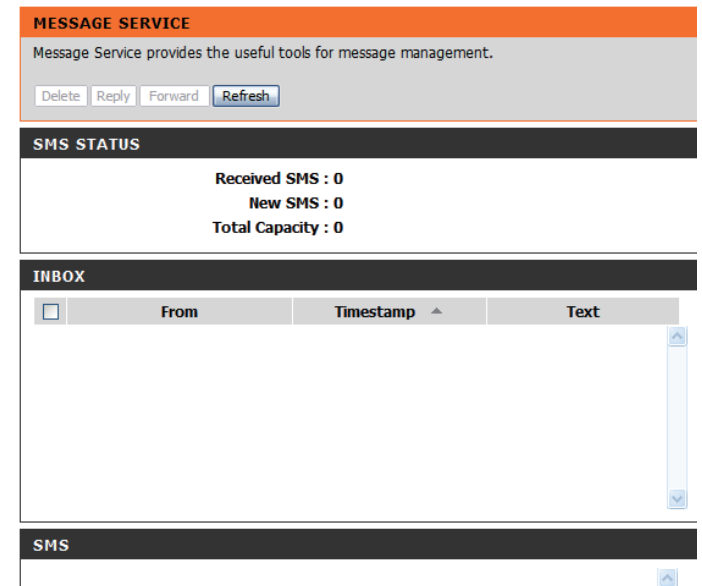

## Create Message


This page allows you to send an SMS to your contacts. Just fill in the phone number of the recipient, and type the content of message. Then push the "Send Message" button to send out this message. If you would like to add more than one recipient, you must put a semicolon (;) between each of the phone numbers.

**Receiver:** Type the phone number of the recipient.

**Text Message:** Type the message that you would like to send.

**Send Message:** Click this button to send the message.

**Cancel:** Click this button to clear the message.

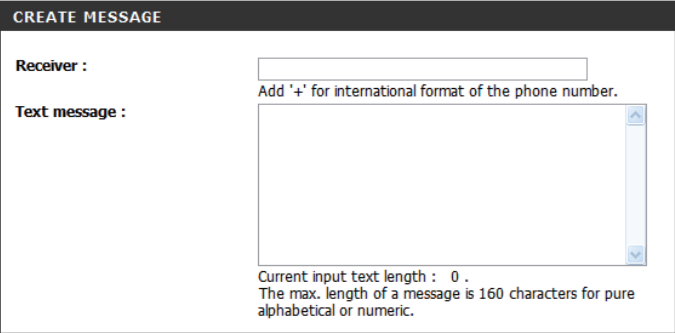

**CREATE MESSAGE**

 
**Receiver :**   
Add '+' for international format of the phone number.

**Text message :**

Current input text length : 0 .  
The max. length of a message is 160 characters for pure alphabetical or numeric.

# Advanced

The **ADVANCED** pages allow you to configure the more advanced settings of the router, such as Virtual Server (Port Forwarding), MAC and URL filtering, and advanced wireless and network settings. To view the Advanced configuration pages, click on **ADVANCED** at the top of the screen.



## Virtual Server

The device can be configured as a virtual server so that users can access services such as Web or FTP via the public (WAN) IP address of the router. You can also allow the settings to run on a specified schedule. The Virtual Server function is also known as Port Forwarding. After modifying any settings, click **Save Settings** to save your changes.

**Well-known Services:** This contains a list of pre-defined services. You can select a service, select a rule ID, then click the **Copy to** button to copy the default settings for that service to the specified rule ID.

**ID:** Specifies which rule to copy the selected **Well known service** settings to when you click the **Copy to** button.

**Use schedule rule:** Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to "Schedules" on page 55.

**VIRTUAL SERVER**

The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.

Well known services: --select one--
 ID: --

Use schedule rule: --ALWAYS ON--

**VIRTUAL SERVERS LIST**

ID	Service Ports	Server IP : Port	Enable	Schedule Rule#
1	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
2	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
3	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
4	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
5	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
6	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
7	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
8	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
9	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
10	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
11	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
12	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
13	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>

### VIRTUAL SERVERS LIST

**ID:** This identifies the rule.

**Server IP: Port:** Enter the last digits of the IP address of the computer on your local network that you want to allow the incoming service. In the next box, enter the port number that you would like to open.

**Enable:** Tick the checkbox to enable the specified rule.

**Schedule Rule #:** Specify the schedule rule number. To create schedules, please refer to "Schedules" on page 55.

**VIRTUAL SERVER**

The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.

---

Well known services --select one--  ID --

Use schedule rule --ALWAYS ON---

---

**VIRTUAL SERVERS LIST**

ID	Service Ports	Server IP : Port	Enable	Schedule Rule#
1	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
2	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
3	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
4	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
5	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
6	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
7	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
8	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
9	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
10	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
11	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
12	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
13	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
14	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
15	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
16	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
17	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
18	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
19	<input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>

# Application Rules

Some applications require multiple connections, such as Internet gaming, video conferencing, and Internet telephony among others. These applications may have difficulty working through NAT (Network Address Translation). **Application Rules** allow some of these applications work with the DWR-712 by opening ports after detecting traffic being sent through a trigger port. After modifying any settings, click **Save Settings** to save your changes.

**Popular Applications:** Select from a list of popular applications. You can select a service, select a rule ID, then click the **Copy to** button to copy the default settings for that service to the specified rule ID.

**ID:** Specifies which rule to copy the selected **Popular application** settings to when you click the **Copy to** button.

## APPLICATION RULES

**ID:** This identifies the rule.

**Trigger:** Enter the port to listen to in order to trigger the rule.

**Incoming Ports:** Specify the incoming port(s) to open when traffic comes over the **Trigger** port.

**Enable:** Tick the checkbox to enable the specified rule.

**APPLICATION RULES**

This option is used to open single or multiple ports on your router when the router senses data sent to the Internet on a 'trigger' port or port range. Special Applications rules apply to all computers on your internal network.

Popular applications -- select one --

 ID --

ID	Trigger	Incoming Ports	Enable
1	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
2	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
3	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
4	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
5	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
6	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
7	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
8	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
9	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
10	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
11	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
12	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>



# QoS Engine

The **QoS Engine** improves your online gaming or streaming media experience by ensuring that your game or media traffic is prioritized over other network traffic, such as FTP or Web. For best performance, use the Automatic Classification option to automatically set the priority for your applications. After modifying any settings, click **Save Settings** to save your changes.

## QOS ENGINE SETUP

**Enable QoS Packet Filter:** Select this box to enable the QoS feature.

**Upstream Bandwidth:** Specify the maximum upstream bandwidth here (e.g. 400 kbps).

**Use Schedule Rule:** Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to “Schedules” on page 55.

## QOS RULES

**ID:** This identifies the rule.

**Local IP : Ports:** Specify the local IP address(es) and port(s) for the rule to affect.

**Remote IP : Ports:** Specify the remote IP address(es) and port(s) for the rule to affect.

**QoS Priority:** Select what priority level to use for traffic affected by the rule: **Low, Normal, or High.**

**Enable:** Tick the checkbox to enable the specified rule.

**Use Rule #:** Specify the schedule rule number. To create schedules, please refer to “Schedules” on page 55.

**QOS ENGINE**

Use this section to configure QoS Engine. The QoS Engine improves your online gaming experience by ensuring that your game traffic is prioritized over other network traffic, such as FTP or Web. For best performance, use the Automatic Classification option to automatically set the priority for your applications.

---

**QOS ENGINE SETUP**

Enable QoS Packet Filter :   
 Upstream bandwidth :  kbps

Use schedule rule ---ALWAYS ON---  ID --

---

**QOS RULES**

ID	Local IP : Ports	Remote IP : Ports	QoS Priority	Enable	Use Rule#
1	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
2	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
3	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
4	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
5	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
6	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
7	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
8	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	High <input type="button" value="v"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>

# MAC Address Filter

The **MAC (Media Access Controller) Address Filter** option is used to control network access based on the MAC Address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of the network adapter. This feature can be configured to ALLOW or DENY network/Internet access. After modifying any settings, click **Save Settings** to save your changes.

## MAC FILTERING SETTINGS

- MAC Address Control:** Tick this box to enable MAC Filtering.
- Connection Control:** Wireless and wired clients with **C** selected can connect to this device and **allow/deny** connections from unspecified MAC addresses.
- Association Control:** Wireless clients with **A** selected can associate to the wireless LAN and **allow/deny** connections from unspecified MAC addresses.

## MAC FILTERING RULES

- ID:** This identifies the rule.
- MAC Address:** Specify the MAC Address of the computer to be filtered.
- IP Address:** Specify the last section of the IP address.
- Wake On LAN:** Click **Trigger** to configure Wake On LAN.
- C:** If this box is ticked, the rule will follow the connection control setting specified in MAC filtering settings specified above.
  - A:** If this box is ticked, the rule will follow the association control setting specified in MAC filtering settings specified above.

**MAC ADDRESS FILTER**

The MAC (Media Access Controller) Address filter option is used to control network access based on the MAC Address of the network adapter. A MAC address is a unique ID assigned by the manufacturer of the network adapter. This feature can be configured to ALLOW or DENY network/Internet access.

---

**MAC FILTERING SETTINGS**

**MAC Address Control :**  Enable

**Connection control :** Wireless and wired clients with **C** checked can connect to this device; and  unspecified MAC addresses to connect.

**Association control :** Wireless clients with **A** checked can associate to the wireless LAN; and  unspecified MAC addresses to associate.

**DHCP clients**

---

**MAC FILTERING RULES**

ID	MAC Address	IP Address	C	A
1	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>

# URL Filter

**URL Filter** allows you to set up a list of websites that will be blocked from users on your network. After modifying any settings, click **Save Settings** to save your changes.

**URL Filtering:** Select this box to enable URL Filtering.

## URL FILTERING RULES

**ID:** This identifies the rule.

**URL:** Enter URL that you would like to block. All URLs that begin with this URL will be blocked.

**Enable:** Tick the checkbox to enable the specified rule.

**URL FILTER**  
URL Blocking will block LAN computers to connect to pre-defined Websites.  
Save Settings Don't Save Settings

**URL FILTERING SETTING**  
URL Filtering :  Enable

**URL FILTERING RULES**

ID	URL	Enable
1	<input type="text"/>	<input type="checkbox"/>
2	<input type="text"/>	<input type="checkbox"/>
3	<input type="text"/>	<input type="checkbox"/>
4	<input type="text"/>	<input type="checkbox"/>
5	<input type="text"/>	<input type="checkbox"/>

Save Settings Don't Save Settings

# Outbound Filter

**Outbound Filter** enables you to control what packets are allowed to be sent out to the Internet. The outbound filter applies to all outbound packets. After modifying any settings, click **Save Settings** to save your changes.

## OUTBOUND FILTER SETTING

**Outbound Filter:** Select this box to **Enable** outbound filtering.

**Use Schedule Rule:** Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to “Schedules” on page 55.

## OUTBOUND FILTER RULES LIST

Here, you can select whether to Allow or Deny all outgoing traffic except for traffic that matches the listed rules.

**ID:** This identifies the rule.

**Source IP : Ports:** Specify the local IP address and then specify the port after the colon.

**Destination IP : Ports:** Specify the remote IP address and then the port after the colon.

**Enable:** Tick the checkbox to enable the specified rule.

**Schedule Rule #:** Specify the schedule rule number.

**Previous Page:** Go back to the previous filter page.

**Next Page:** Advance to the next filter page.

**OUTBOUND FILTER**

Packet Filter enables you to control what packets are allowed to pass the router. Outbound filter applies on all outbound packets.

---

**OUTBOUND FILTER SETTING**

**Outbound Filter :**  Enable

**Use schedule rule** ---ALWAYS ON---  **ID** --

---

**OUTBOUND FILTER RULES LIST**

Allow all to pass except those match the following rules.  
 Deny all to pass except those match the following rules.

ID	Source IP:Ports	Destination IP:Ports	Enable	Schedule Rule#
1	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
2	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
3	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
4	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
5	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
6	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
7	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
8	<input style="width: 100%;" type="text"/>	<input style="width: 100%;" type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>

# Inbound Filter

**Inbound Filter** enables you to control what packets are allowed to come in to your network from the Internet. The inbound filter only applies to packets that are destined for Virtual Servers or DMZ hosts. After modifying any settings, click **Save Settings** to save your changes.

## INBOUND FILTER SETTING

**Inbound Filter:** Select this box to **Enable** the filter.

**Use Schedule Rule:** Select a schedule to use and copy to the specified rule ID when you click the **Copy to** button. You may select **Always On** or use a specific schedule that you have defined. To create and edit schedules, please refer to “Schedules” on page 55.

## INBOUND FILTER RULES LIST

Here, you can select whether to Allow or Deny all incoming traffic except for traffic that matches the listed rules.

**ID:** This identifies the rule.

**Source IP : Ports:** Specify the local IP address and then specify the port after the colon.

**Destination IP : Ports:** Specify the remote IP address and then the port after the colon.

**Enable:** Tick the checkbox to enable the specified rule.

**Schedule Rule #:** Specify the schedule rule number.

**Previous Page:** Go back to the previous filter page.

**Next Page:** Advance to the next filter page.

**INBOUND FILTER**

Packet Filter enables you to control what packets are allowed to pass the router. Inbound filter applies on packets that destined to Virtual Servers or DMZ host only.

**INBOUND FILTER SETTING**

**Inbound Filter :**  Enable

**Use schedule rule** ---ALWAYS ON---  ID --

**INBOUND FILTER RULES LIST**

Allow all to pass except those match the following rules.  
 Deny all to pass except those match the following rules.

ID	Source IP:Ports	Destination IP:Ports	Enable	Schedule Rule#
1	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
2	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
3	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
4	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
5	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
6	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
7	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>
8	<input type="text"/> : <input type="text"/>	<input type="text"/> : <input type="text"/>	<input type="checkbox"/>	<input type="button" value="Add New Rule..."/>

# SNMP

**SNMP** (Simple Network Management Protocol) is a widely used network monitoring and control protocol that reports activity on each network device to the administrator of the network. SNMP can be used to monitor traffic and statistics of the DWR-712. The DWR-712 supports SNMP v1 and v2c. After modifying any settings, click **Save Settings** to save your changes.

## SNMP

**SNMP Local:** Select whether to **Enable** or **Disable** local SNMP administration.

**SNMP Remote:** Select whether to **Enable** or **Disable** remote SNMP administration.

**Get Community:** Enter the password **public** in this field to allow read-only access to network administration using SNMP. You can view the network, but no configuration is possible with this setting.

**Set Community:** Enter the password **private** in this field to enable read/write access to the network using SNMP.

**IP 1, IP 2, IP 3, IP 4:** Enter up to 4 IP addresses to use as trap targets for your network.

**SNMP Version:** Select the SNMP version of your system.

**WAN Access IP Address** If you want to limit remote access SNMP access, enter the IP address of the remote computer you will use to access this device. All other IP addresses will be denied remote SNMP access.

# Routing

The **Routing** page allows you to specify custom routes that determine how data is moved around your network. After modifying any settings, click **Save Settings** to save your changes.

## RIP SETTING

**RIP:** Select this box to enable routing, then select which routing protocol to use:

- **RIPv1:** Protocol in which the IP address is routed through the internet.
- **RIPv2:** Enhanced version of RIPv1 with added features such as Authentication, Routing Domain, Next Hop Forwarding, and Subnet-mask Exchange.

## ROUTING RULES

**ID:** This identifies the rule.

**Destination:** Enter in the IP of the specified network that you want to access using the static route.

**Subnet Mask:** Enter in the subnet mask to be used for the specified network.

Enter in the gateway IP address for the specified network.

**Gateway:**

**Hop:** Enter in the amount of hops it will take to reach the specified network.

**Note:** In a transmission path, each link is terminated at a network device such as a router or gateway. The number of hops equals the number of routers or gateways that data must pass through before reaching the destination.

**Enable:** Select this box to enable the rule.

**ROUTING**

This Routing page allows you to specify custom routes that determine how data is moved around your network.

**RIP SETTING**

**RIP :**  Enable  RIPv1  RIPv2

**ROUTING RULES**

ID	Destination	Subnet Mask	Gateway	Hop	Enable
1	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
2	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
3	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
4	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
5	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
6	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
7	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>
8	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>

## Advanced Wireless

**Advanced Wireless** contains settings which can negatively affect the performance of your router if configured improperly. Do not change these settings unless you are already familiar with them or have been instructed to make the change by one of our support personnel. After modifying any settings, click **Save Settings** to save your changes.

**Beacon Interval:** Specify a value for the beacon interval. Beacons are packets sent by an Access Point to synchronize a wireless network. 100 is the default setting and is recommended.

**Transmit Power:** Set the transmit power of the antennas.

**RTS Threshold:** This value should remain at its default setting of 2347. If inconsistent data flow is a problem, only a minor modification should be made.

**Fragmentation:** The fragmentation threshold, which is specified in bytes, determines whether packets will be fragmented. Packets exceeding the 2346 byte setting will be fragmented before transmission. 2346 is the default setting.

**DTIM Interval:** Set the interval for DTIM. A Delivery Traffic Indication Message (DTIM) is a countdown informing clients of the next window for listening to broadcast and multicast messages. The default interval is 3.

**WMM Capable:** WMM (Wi-Fi Multimedia) is a QoS (Quality of Service) system for your wireless network. Enable this option to improve the quality of video and voice applications for your wireless clients.

**TX Rates:** Select the basic transfer rates based on the speed of wireless adapters on your wireless network. It is strongly recommended to keep this setting to **Auto**.

**ADVANCED WIRELESS**

If you are not familiar with these Advanced Wireless settings, please read the help section before attempting to modify these settings.

Save Settings
Don't Save Settings

**ADVANCED WIRELESS SETTINGS**

<b>Beacon Interval :</b>	<input type="text" value="100"/>	(msec, range:1~1000)
<b>Transmit Power :</b>	<input type="text" value="100%"/>	
<b>RTS Threshold :</b>	<input type="text" value="2347"/>	(1~2347)
<b>Fragmentation :</b>	<input type="text" value="2346"/>	(256~2346, even number only)
<b>DTIM Interval :</b>	<input type="text" value="1"/>	(range: 1~255)
<b>WMM Capable</b>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
<b>TX Rates :</b>	<input type="text" value="MCS 7 - 65[135]"/>	

Save Settings
Don't Save Settings



# Advanced Network

**Advanced Network** contains settings which can change the way the router handles certain types of traffic. We recommend that you do not change any of these settings unless you are already familiar with them or have been instructed to make the change by one of our support personnel. After modifying any settings, click **Save Settings** to save your changes.

**Enable UPnP:** Tick this checkbox to use the Universal Plug and Play (UPnP™) feature. UPnP provides compatibility with various networking equipment, software, and peripherals.

**Enable WAN Ping Respond:** Select the box to allow the WAN port to be “pinged.” Blocking WAN pings may provide some extra security from hackers.

**ADVANCED NETWORK**

If you are not familiar with these Advanced Network settings, please read the help section before attempting to modify these settings.

Save Settings Don't Save Settings

**UPNP**

Universal Plug and Play (UPnP) supports peer-to-peer Plug and Play functionality for network devices.

Enable UPnP :

**WAN PING**

If you enable this feature, the WAN port of your router will respond to ping requests from the Internet that are sent to the WAN IP Address.

Enable WAN Ping Respond :

Save Settings Don't Save Settings

# DMZ

Sometimes you may want a computer exposed to the outside world for certain types of applications. If you choose to expose a computer, you can enable DMZ. DMZ is short for Demilitarized Zone. This option will expose the chosen computer completely to the outside world.

**Enable DMZ:** If an application has trouble working from behind the router, you can expose one computer to the Internet and run the application on that computer.

**Note:** Placing a computer in the DMZ may expose that computer to a variety of security risks. Use of this option is only recommended as a last resort.


**DMZ IP Address:** Specify the IP address of the computer on the LAN that you want to have unrestricted Internet communication. If this computer obtains its IP address automatically using DHCP, be sure to make a static reservation on the **Setup > Network Settings** page so that the IP address of the DMZ machine does not change.

Click **Save Settings** to save your changes, or click **Don't Save Settings** to discard your changes.

The screenshot shows the DMZ configuration page. At the top, there is a header for 'DMZ' with a sub-header 'DMZ' and three buttons: 'Save Settings', 'Don't Save Settings', and 'Reboot Now'. Below this is the 'FIREWALL SETTINGS' section, which includes a checkbox for 'Enable SPI' that is checked. The 'DMZ HOST' section contains a descriptive paragraph about the DMZ option, a 'Note' about security risks, and a checkbox for 'Enable DMZ' which is unchecked. Below the checkbox is a text input field for 'DMZ IP Address' with a '<<' button to its right, and a dropdown menu labeled 'Computer Name'. At the bottom of the page are two buttons: 'Save Settings' and 'Don't Save Settings'.

# Tools

 The **TOOLS** pages allow you to adjust various system setting for your router, such as the system time, firmware, and custom schedules. To view the Tools pages, click on **TOOLS** at the top of the screen.



# Admin

The **Admin** page allows you to change the Administrator password and enable Remote Management. The admin has read/write access while users only have read-only access. Only the admin has the ability to change both admin and user account passwords. After modifying any settings, click **Save Settings** to save your changes.

## ADMINISTRATOR

**Admin Password:** Enter and confirm the password that the admin account will use to access the router's management interface.

## REMOTE MANAGEMENT

**Remote Management:** Tick this check box to enable remote management. Remote management allows the DWR-712 to be configured over the Internet through a web browser. A username and password will still be required to access the Web-Management interface.

**IP Allowed to Access:** Enter the Internet IP address of the PC that has access to the Broadband Router. If you enter an asterisk (\*) in this field, then anyone will be able to access the Router. Adding an asterisk (\*) into this field could present a security risk and is not recommended.

**Port:** This is the port number used to access the router. 8080 is the port usually used for the Web-Management interface.

**ADMINISTRATOR SETTINGS**

To help secure your network, we recommend that you should choose a new password.

**ADMINISTRATOR (THE DEFAULT LOGIN NAME IS "admin")**

**New Password :**

**Confirm Password :**

**REMOTE MANAGEMENT**

**Enable Remote Management :**  Enabled

**IP Allowed to Access :**

**Port :**

# Time

This section will help you set the time zone that you are in and an NTP (Network Time Protocol) server to use. Daylight Saving can also be configured to adjust the time when needed. After modifying any settings, click **Save Settings** to save your changes.

## TIME AND DATE CONFIGURATION

**Time Zone:** Select the appropriate **Time Zone** from the drop-down box.

**Enable Daylight Saving:** Tick this checkbox to allow for daylight saving adjustments. Use the dropdown boxes to specify a start date and end date for daylight saving time adjustments.

## AUTOMATIC TIME AND DATE CONFIGURATION

Tick the **Automatically synchronize with Internet time server** checkbox to allow the router to use an NTP server to update the router's internal clock.

**NTP Server Used:** Enter an NTP server to use for time synchronization, or use the dropdown box to select one. Click the **Update Now** button to synchronize the time with the NTP server.

**TIME AND DATE**

The Time and Date Configuration option allows you to configure, update, and maintain the correct time on the internal system clock. From this section you can set the time zone that you are in and set the NTP (Network Time Protocol) Server. Daylight Saving can also be configured to adjust the time when needed

---

**TIME AND DATE CONFIGURATION**

**Time :** Wed May 23, 2012 21:52:16

**Time Zone :** (GMT +08:00) Taipei

**Enable Daylight Saving :**

---

**AUTOMATIC TIME AND DATE CONFIGURATION**

Automatically synchronize with Internet time server

**NTP Server Used :** time.nist.gov

time-nw.nist.gov

---

**SYNC. RESULT**

# Syslog

The DWR-712 keeps a running log of events and activities occurring on the router. You may send these logs to a syslog server on your network. After modifying any settings, click **Save Settings** to save your changes.

**Enable Logging to Syslog Server:** Tick this checkbox to send the router logs to a syslog server.

**Syslog Server IP Address:** Enter the IP address of the syslog server that the router will send the logs to.

**SYSLOG**

The SysLog options allow you to send log information to a SysLog Server.

Save Settings Don't Save Settings

**SYSLOG SETTINGS**

Enable Logging To Syslog Server :

Syslog Server IP Address :

Save Settings Don't Save Settings

# E-mail Settings

**E-mail Settings** allow you to send the system log files, router alert messages, and firmware update notifications to an e-mail address. After modifying any settings, click **Save Settings** to save your changes.

**Enable E-mail Notification:** When this option is enabled, router activity logs will be e-mailed to the specified e-mail address.

**SMTP Sever IP and Port:** Enter the SMTP server IP address the router will use to send e-mails. Enter the complete IP address followed by a colon(:) and the port number. (e.g. 123.123.123.1:25).

**SMTP Username:** Enter the username for the SMTP account.

**SMTP Password:** Enter the password for the SMTP account.

**Send E-mail Alert to:** Enter the e-mail address where you would like the router to send e-mails to.

**E-mail Subject:** Enter a subject for the e-mail.

**E-mail Log Now:** Click this button to send the current logs to the specified e-mail address.

**EMAIL SETTINGS**  
Send system log to a dedicated host or email to specific receipts  
Save Settings Don't Save Settings

**EMAIL SETTINGS**  
Enable Email Notification :   
SMTP Server IP and Port :  :   
SMTP Username :   
SMTP Password :   
Send E-mail alert to :   
E-mail Subject :   
Email Log Now

Save Settings Don't Save Settings


# System

Here, you can save the current system settings to a local hard drive. After modifying any settings, click **Save Settings** to save your changes.

**Save Settings To Local Hard Drive** Use this option to save your current router configuration settings to a file. Click **Save** to open a file dialog, and then select a location and file name for the settings.

**Load Settings From Local Hard Drive:** Use this option to load previously saved router configuration settings. Click **Browse...** and select the saved file and then click the **Upload Settings** button to upload the settings to the router.

**Restore To Factory Default Settings:** This option will restore all settings back to their defaults. Any settings that have not been backed up will be lost, including any rules that you have created.

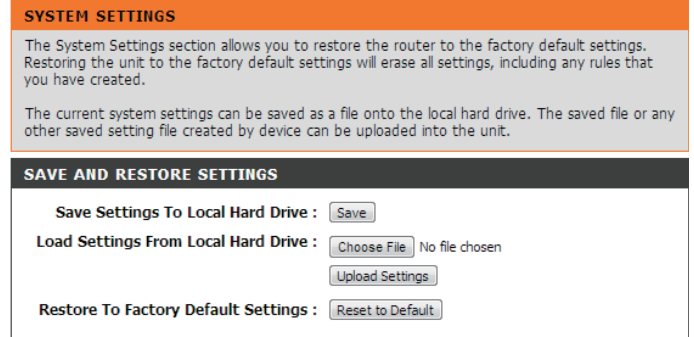

# Firmware

Here, you can upgrade the firmware of your router. Make sure the firmware you want to use is on the local hard drive of the computer and then click **Browse** to upload the file. You can check for and download firmware updates at the D-Link support site at <http://support.dlink.com>. After modifying any settings, click **Save Settings** to save your changes.

**Current Firmware Version:** Displays your current firmware's version.

**Current Firmware Date:** Displays your current firmware's release date.

**Upload:** After you have downloaded a new firmware, click **Browse** to locate the firmware on your computer, then click **Upload** to start the firmware upgrade.

**Warning:** You must use a wired computer to upload the firmware file; do not use a wireless computer. During the upgrade process, do not power off your computer or router, and do not refresh the browser window until the upgrade is complete.

**Accept Unofficial Firmware:** If the firmware you want to install is not an official D-Link release, you will need to check this checkbox.

**Warning:** Unofficial firmwares are not supported, and may cause damage to your device. Use of unofficial firmwares is at your own risk.

**FIRMWARE UPGRADE**

There may be new firmware for your Router to improve functionality and performance.

To upgrade the firmware, locate the upgrade file on the local hard drive with the Browse button. Once you have found the file to be used, click the Save Settings below to start the firmware upgrade.

**FIRMWARE INFORMATION**

Current Firmware Version :	V2.00
Current Firmware Date :	2013/11/05

**FIRMWARE UPGRADE**

**Note! Do not power off the unit when it is being upgraded.**  
**The upgrade procedure takes about 180 seconds.**  
**When the upgrade is done successfully, the unit will be restarted automatically.**

To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.

Upload :  No file chosen

Accept unofficial firmware.



# Dynamic DNS

The DDNS feature allows you to host a server (Web, FTP, or Game Server) using a domain name that you have purchased (such as www.exampledomain.com) with your dynamically assigned IP address. You can use one of the listed DDNS service, or you can sign up for D-Link's free DDNS service at [www.dlinkddns.com](http://www.dlinkddns.com). After modifying any settings, click **Save Settings** to save your changes.

**DDNS:** Tick this checkbox to enable the DDNS feature.

**Provider:** Select a DDNS service provider to use.

**Host Name:** Enter the **Host Name** that you registered with your DDNS service provider.

**Username / E-mail:** Enter the **Username** for your DDNS account.

**Password / Key:** Enter the **Password** for your DDNS account.

**DYNAMIC DNS**

The Dynamic DNS feature allows you to host a server (Web, FTP, Game Server, etc...) using a domain name that you have purchased (www.whateveryournameis.com) with your dynamically assigned IP address. Most broadband Internet Service Providers assign dynamic (changing) IP addresses. Using a DDNS service provider, your friends can enter your host name to connect to your game server no matter what your IP address is.

**DYNAMIC DNS**

**DDNS :**

**Provider :** DynDNS.org(Dynamic) ▼

**Host Name :**

**Username / E-mail :**

**Password / Key :**

# System Check

This useful diagnostic utility can be used to check if a computer is connected to the network. It sends ping packets and listens for responses from the specific host. After modifying any settings, click **Save Settings** to save your changes.

**Host Name or IP Address:** Enter a host name or the IP address that you want to ping and click the **Ping** button. The results of the ping attempt will be displayed in the **PING RESULT** section below.

The screenshot displays the 'System Check' utility interface. It is divided into three main sections: 'PING TEST' (top, orange header), 'PING TEST' (middle, dark grey header), and 'PING RESULT' (bottom, dark grey header). The top 'PING TEST' section contains the text 'Ping Test sends "ping" packets to test a computer on the Internet.' and two buttons: 'Save Settings' and 'Don't Save Settings'. The middle 'PING TEST' section contains the text 'Ping Test is used to send "Ping" packets to test if a computer is on the Internet.' and a form with the label 'Host Name or IP address :', an input field, and a 'Ping' button. The bottom 'PING RESULT' section is currently empty. At the bottom of the interface, there are two buttons: 'Save Settings' and 'Don't Save Settings'.

# Schedules

This section allows you to manage schedule rules for various firewall and parental control features. After modifying any settings, click **Save Settings** to save your changes.

**Enable Schedule:** Tick this checkbox to enable schedules.

**Edit:** Click this button to edit the selected rule. (see below)

**Delete:** Click this button to delete the selected rule.

**Previous Page:** Click this button to go to the previous page of rules.

**Next Page:** Click this button to go to the next page of rules.  
Click this button to specify the start time, end time, and name of the rule.

**Add New Rule...:** Click this button to create a new rule. (see below)

**Name of Rule #:** Enter a name for your new schedule.

**Policy:** Select Activate or Inactivate to decide whether features that use the schedule should be active or inactive except during the times specified.

**Week Day:** Select a day of the week for the start time and end time.

**Start Time (hh:mm):** Enter the time at which you would like the schedule to become active.

**End Time (hh:mm):** Select the time at which you would like the schedule to become inactive.

After making your changes, click **Save Settings** to save the schedule.

**SCHEDULES**

The Schedule configuration option is used to manage schedule rules for "Virtual Server "Outbound Filter" and "Inbound Filter".

---

**SCHEDULE RULE**

**Enable Schedule :**

Rule#	Rule Name	Action
1	test	<input type="button" value="Edit"/> <input type="button" value="Delete"/>

**SCHEDULES**

The Schedule configuration option is used to manage schedule rules for "Virtual Server "Outbound Filter" and "Inbound Filter".

---

**SCHEDULE RULE SETTING**

**Name of Rule 2 :**

**Policy :**  except the selected days and hours below.

ID	Week Day	Start Time (hh:mm)	End Time (hh:mm)
1	Monday <input type="button" value="v"/>	08:00	19:00
2	Tuesday <input type="button" value="v"/>	08:00	19:00
3	Wednesday <input type="button" value="v"/>	08:00	19:00
4	Thursday <input type="button" value="v"/>	08:00	19:00
5	Friday <input type="button" value="v"/>	08:00	19:00
6	-- choose one -- <input type="button" value="v"/>		
7	-- choose one -- <input type="button" value="v"/>		
8	-- choose one -- <input type="button" value="v"/>		

# Connection Reset

This feature allows you to reset the internet connection on your router by periodically resetting the connection. You can choose to have this happen on a predetermined schedule by configuring the options on this page.

**Auto-Reboot:** Select whether the connection reset feature should be **Enabled** or **Disabled**.

**Reboot-Schedule:** If the connection reset feature is enabled, select when it should activate via the hour and minute from the dropdown boxes.


**Daily Schedule:** Select this option if you want the connection reset feature to activate on a daily schedule.

**Weekly Schedule Day of Week:** Select this option if you want the connection reset feature to activate only on a certain day of the week.

The screenshot shows two versions of the 'CONNECTION RESET' configuration page. The top version is a warning message: 'Is possible set Auto-Reboot diary, weekly or monthly but the router must have the currently time. Configure a NTP server to get the time from network on TOOLS-> Time'. It includes buttons for 'Save Settings', 'Don't Save Settings', and 'Reboot Now'. The bottom version shows the configuration options: 'Auto-Reboot' with radio buttons for 'Disable' (selected) and 'Enable'; 'Reboot-Schedule' with dropdowns for '3' and '0'; 'Diary Schedule' with a radio button (selected); and 'Weekly Schedule Day of Week' with a dropdown set to 'Monday'. It also includes 'Save Settings' and 'Don't Save Settings' buttons.

# Status

 The **STATUS** pages allow you to see the current status of the router for various categories, including WAN, 3G, network, and wireless. To view the Status pages, click on **STATUS** at the top of the screen.



## Device Info

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

**General:** Displays the current time and firmware version.

**WAN:** Displays the WAN connection details of the router.

**3G Card:** Displays the 3G connection details of the router.

**LAN:** Displays the LAN connection details of the router.

**Wireless LAN:** Displays the wireless LAN connection details of the router.

**LAN Computers:** Displays the list of clients connected to the router.

**DEVICE INFORMATION**

All of your Internet and network connection details are displayed on this page. The firmware version is also displayed here.

**GENERAL**

Time : Thu Dec 31, 2009 17:17:47 -0800  
Firmware Version : V2.00 , 2013/11/05

**WAN**

Connection Type : 3G  
 Network Status : Connecting...  
 Connection Time : N/A  
 Signal Strength : N/A  
 IP Address : 0.0.0.0  
 Subnet Mask : 0.0.0.0  
 Default Gateway : 0.0.0.0  
 DNS Server : 0.0.0.0 , 0.0.0.0

**3G CARD**

Card Info : MTK2  
 Link Status : Connecting...  
 Network Name : N/A

**LAN**

MAC Address : 84:C9:B2:E3:80:1F  
 IP Address : 192.168.1.99  
 Subnet Mask : 255.255.255.0  
 DHCP Server : Disabled

DHCP Server : Disabled

# Log

Here, you can view and download the system log.

**Previous:** Click this button to go to the previous page of the log.

**Next:** Click this button to go to the next page of the log.

**First Page:** Click this button to skip to the first page of the log.

**Last Page:** Click this button to skip to the last page of the log.

**Refresh:** Click this button to refresh the system log.

**Download:** Click this button to download the current system log to your computer.

**Clear Logs:** Click this button to clear the system log.

**Link To Log Settings:** Click this button to go to the Log Settings page. For more, refer to “Log” on page 58.

The screenshot shows the D-Link DWR-712 web interface. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar contains links for DEVICE INFO, LOG, STATISTICS, WIRELESS, and LOGOUT. The main content area is titled 'VIEW LOG' and displays the following information:

View Log displays the activities occurring on the device.  
Page: 1/3 (Log Number : 31)

Navigation buttons: Previous, Next, First Page, Last Page, Refresh, Download, Clear logs, Link To Log Settings.


The SYSTEM LOG table contains the following entries:

Time	Message
May 23 21:40:27	kernel: klogd started: BusyBox v1.3.2 (2012-02-16 10:56:57 CST)
May 23 21:40:37	commander: InE NAT Server ...
May 23 21:40:39	nat: Using the packet filter which support IP range
May 23 21:40:41	syslog: Unable to open /var/run/udhcpd.leases for reading
May 23 21:40:41	udhcpd[1816]: udhcpd (v0.9.9-pre) started
May 23 21:40:41	udhcpd[1816]: Unable to open /var/run/udhcpd.leases for reading
May 23 21:40:41	commander: Start UPNP Daemon !!
May 23 21:40:45	commander: STOP WANTYPE Dynamic IP Address
May 23 21:40:45	commander: START WANTYPE Dynamic IP Address
May 23 21:40:46	udhcpd[2016]: udhcpd (v0.9.9-pre) started
May 23 21:40:46	udhcpd[2016]: Lease of 172.17.5.103 obtained, lease time 43200
May 23 21:40:46	init: Starting pid 2115, console /dev/ttyS1: '/bin/ash'
May 23 21:40:47	commander: Start/Restart httpd !
May 23 21:40:48	commander: Synchronization Time Fail, Re-Sync after 10 sec
May 23 21:40:49	commander: Restart UPNP Daemon !!

Additional elements include an Internet Online indicator, a Reboot button, and a Helpful Hints section on the right side.

# Statistics

Here you can view the packets transmitted and received passing through your router on both WAN and LAN ports. The traffic counter will reset if the device is rebooted. Click the **Refresh** button to refresh the WAN statistics.

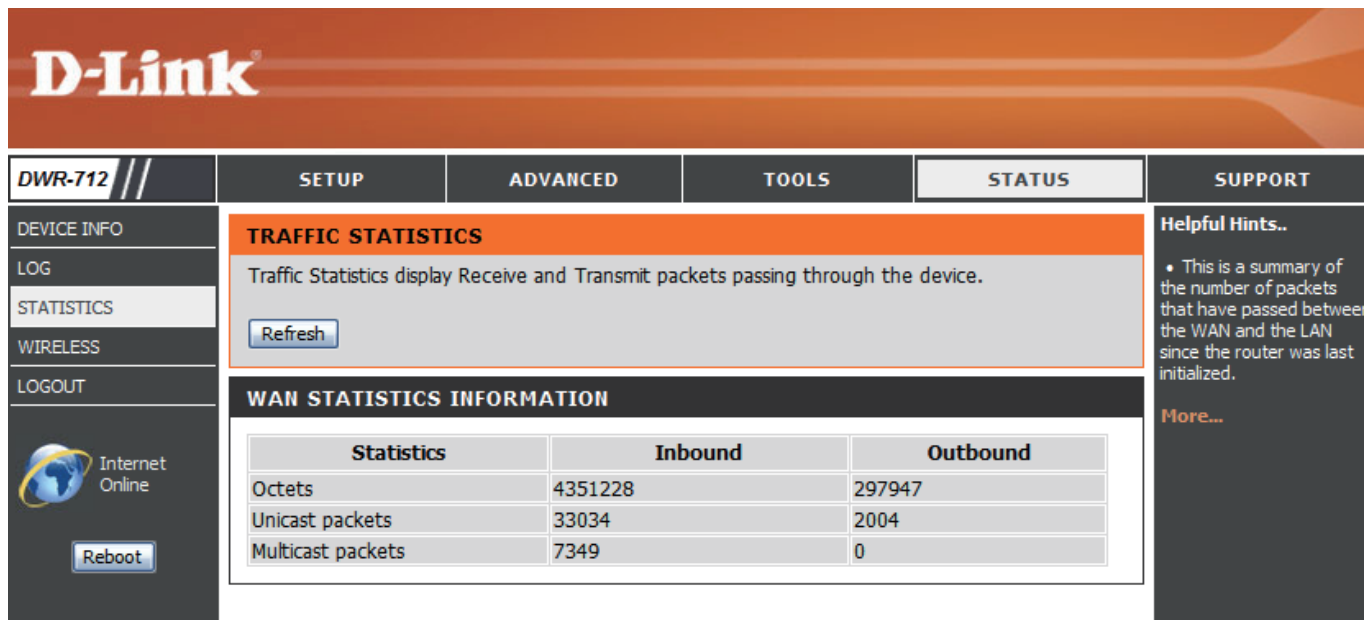

The screenshot shows the D-Link web interface for the DWR-712 router. The top navigation bar includes tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The left sidebar contains links for DEVICE INFO, LOG, STATISTICS (selected), WIRELESS, and LOGOUT, along with an Internet Online indicator and a Reboot button. The main content area is titled "TRAFFIC STATISTICS" and includes a "Refresh" button. Below this is a table titled "WAN STATISTICS INFORMATION" with columns for Statistics, Inbound, and Outbound.

Statistics	Inbound	Outbound
Octets	4351228	297947
Unicast packets	33034	2004
Multicast packets	7349	0

**Helpful Hints..**

- This is a summary of the number of packets that have passed between the WAN and the LAN since the router was last initialized.

[More...](#)

# Wireless

This table displays a list of wireless clients that are connected to your wireless router. It also displays the connection time and MAC address of the connected wireless clients. Click **Refresh** to refresh the list.


The screenshot shows the D-Link web interface for the DWR-712 router. The top navigation bar includes 'D-Link' and a menu with 'DWR-712', 'SETUP', 'ADVANCED', 'TOOLS', 'STATUS', and 'SUPPORT'. The 'STATUS' tab is selected. On the left sidebar, 'WIRELESS' is highlighted under 'DEVICE INFO'. The main content area is titled 'WIRELESS CLIENT LIST' and contains a description: 'View the wireless clients that are connected to the router. (A client might linger in the list for a few minutes after an unexpected disconnect.)' Below this is a 'Refresh' button. Underneath is a section titled 'WIRELESS CLIENT TABLE' with a table header showing 'ID' and 'MAC Address'. On the right sidebar, there are 'Helpful Hints..' and a 'More...' link.

D-Link					
DWR-712	SETUP   ADVANCED   TOOLS   STATUS   SUPPORT				
DEVICE INFO LOG STATISTICS <b>WIRELESS</b> LOGOUT Internet Online Reboot	<h3>WIRELESS CLIENT LIST</h3> <p>View the wireless clients that are connected to the router. (A client might linger in the list for a few minutes after an unexpected disconnect.)</p> <p><a href="#">Refresh</a></p> <h3>WIRELESS CLIENT TABLE</h3> <table border="1"> <thead> <tr> <th>ID</th> <th>MAC Address</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> </tr> </tbody> </table>	ID	MAC Address		
ID	MAC Address				
	<b>Helpful Hints..</b> <ul style="list-style-type: none"> <li>This is a list of all wireless clients that are currently connected to your wireless router.</li> </ul> <a href="#">More...</a>				



# Support

 The **SUPPORT** pages provide help information for each section of the device's interface. To view the Support pages, click on **SUPPORT** at the top of the screen.



The screenshot shows the D-Link DWR-712 web interface. At the top, the D-Link logo is displayed. Below it, a navigation bar contains tabs for SETUP, ADVANCED, TOOLS, STATUS, and SUPPORT. The SUPPORT tab is selected. On the left side, there is a vertical menu with options: MENU, SETUP, ADVANCED, TOOLS, STATUS, and LOGOUT. Below the menu, there is an "Internet Online" status indicator and a "Reboot" button. The main content area is titled "SUPPORT MENU" and contains a list of links: Setup, Advanced, Tools, and Status. Below this, there are four sections of help information: "SETUP HELP" (Internet, Wireless Settings, Network Settings, Message Service), "ADVANCED HELP" (VIRTUAL SERVER, Application Rules, QoS Engine, MAC Address Filter, Website Filter, Outbound Filter, Inbound Filter, SNMP, Routing, Advanced Wireless, Advanced Network), "TOOLS HELP" (Admin, Time, SysLog, Email settings, System, Firmware, Dynamic DNS, System Check, Schedules), and "STATUS HELP" (Device Info, Log, Statistics, Wireless).

# Connecting to a Wireless Network Using Windows 7

Windows 7 users may use the built-in wireless utility to connect to a wireless network. If you are using another company's utility or Windows 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows 7 utility as seen below.

If you receive the Wireless Networks Detected bubble, click on the center of the bubble to access the utility. You can also click on the wireless icon in your system tray (lower-right corner).

The utility will display any available wireless networks in your area.



Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.


If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.



## Configuring Wireless Security

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).

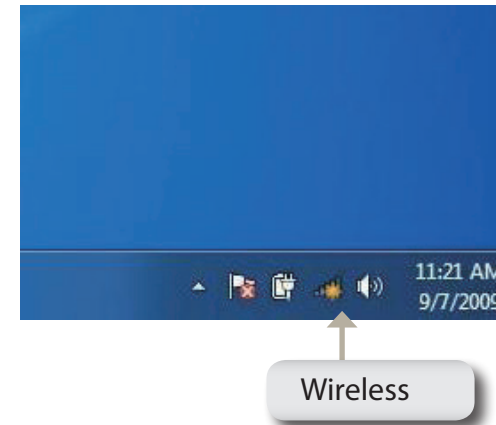


2. The utility will display any available wireless networks in your area.



3. Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.



4. The following window appears while your computer tries to connect to the router.

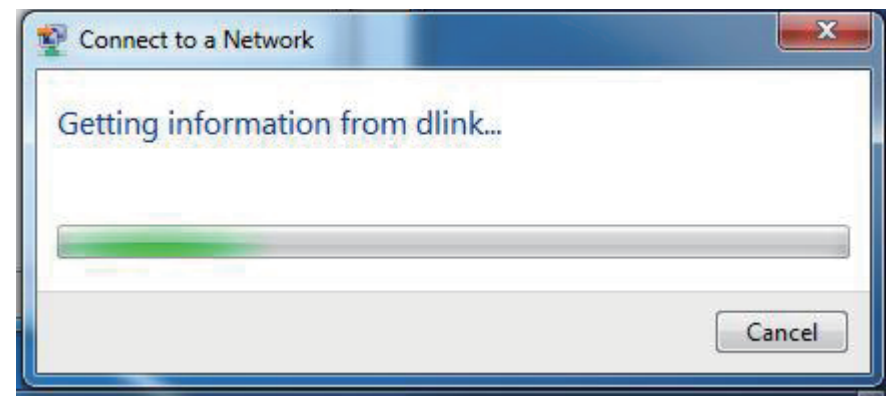

5. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.




# Using Windows Vista™

Windows® Vista™ users may use the built-in wireless utility. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® Vista™ utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

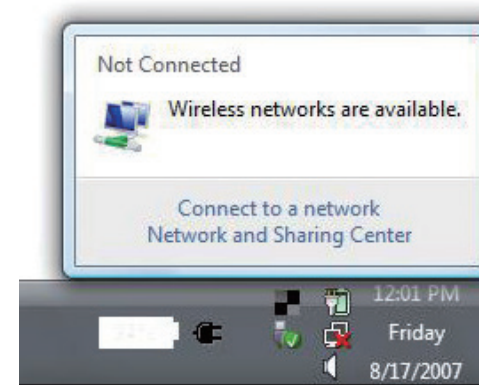

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

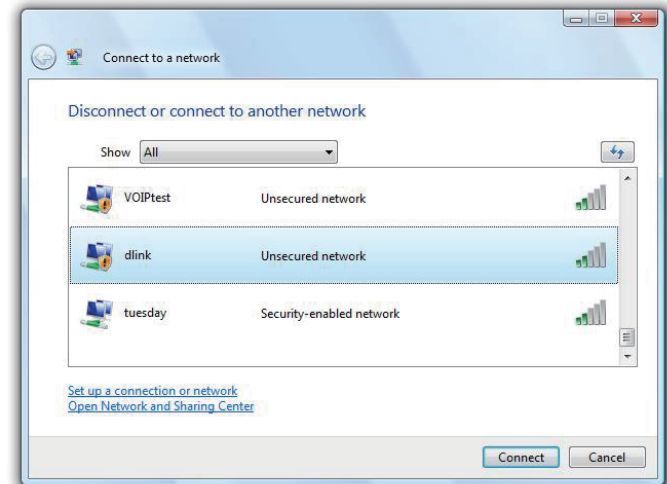


## Configuring Wireless Security

It is recommended to enable wireless security (WEP/WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows® Vista™ Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.




2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

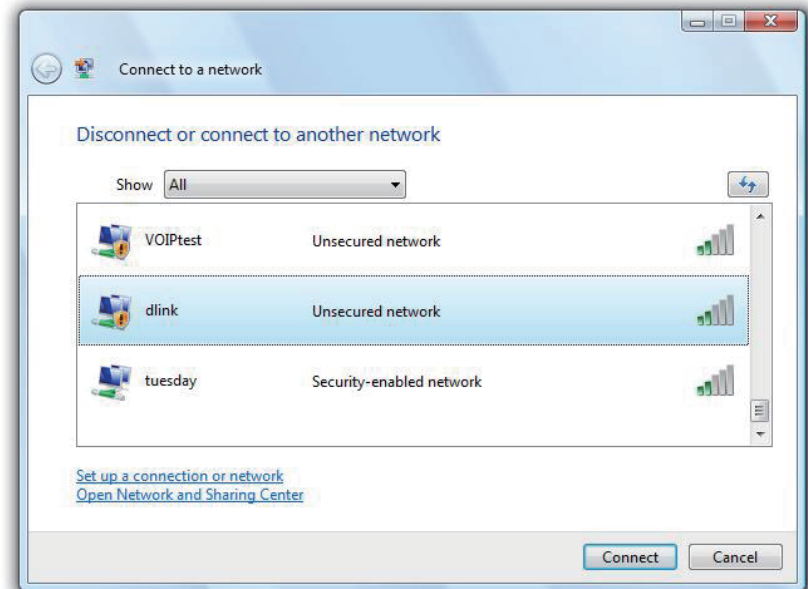



3. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

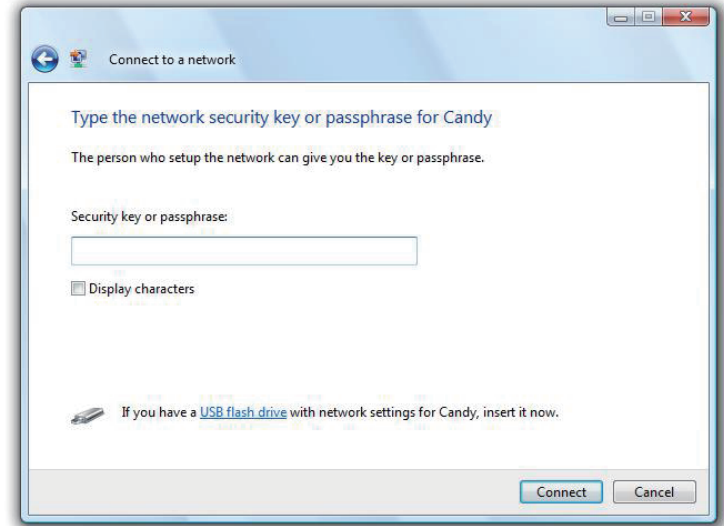

# Connect to a Wireless Network Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

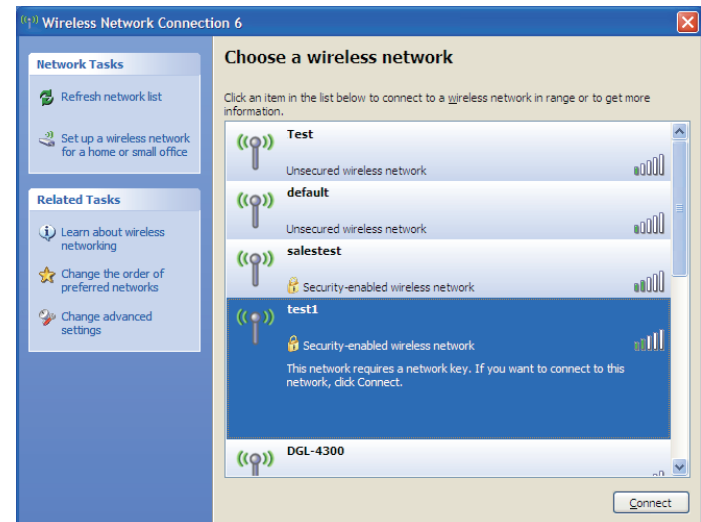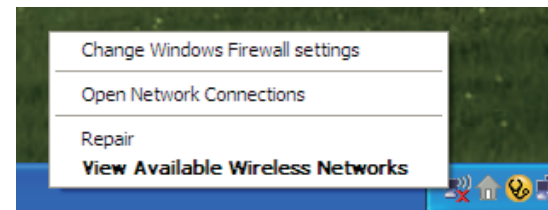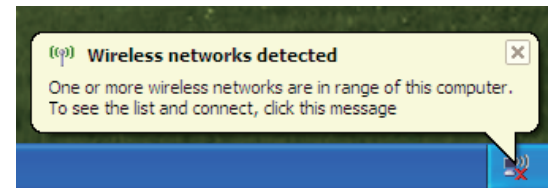


# Configure WEP

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

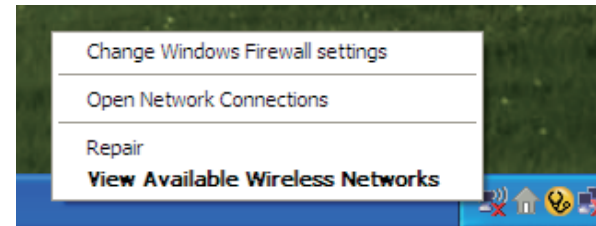


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

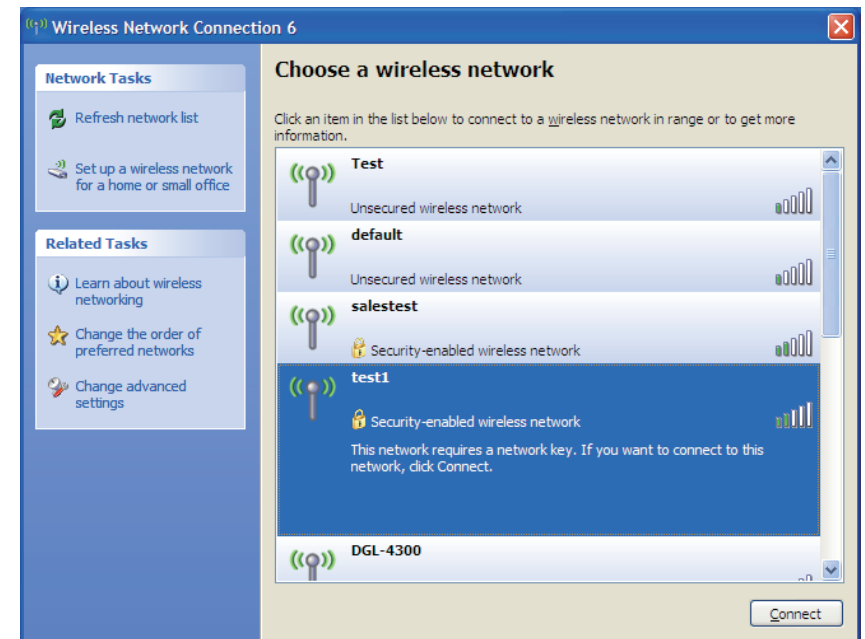

3. The **Wireless Network Connection** box will appear. Enter the same WEP key that is on your router and click **Connect**.



It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WEP settings are correct. The WEP key must be exactly the same as on the wireless router.

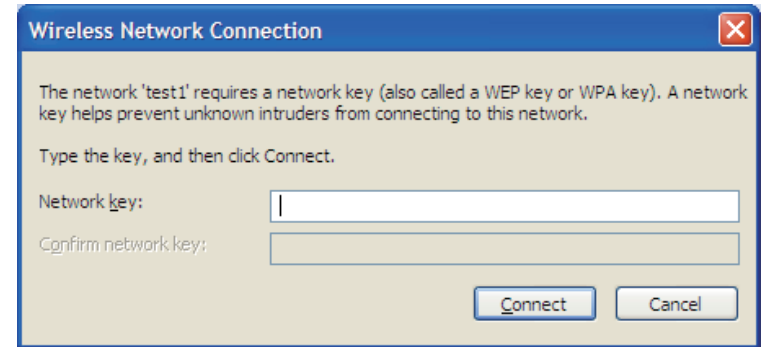

## Configure WPA-PSK


It is recommended to enable WPA on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WPA key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.
2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

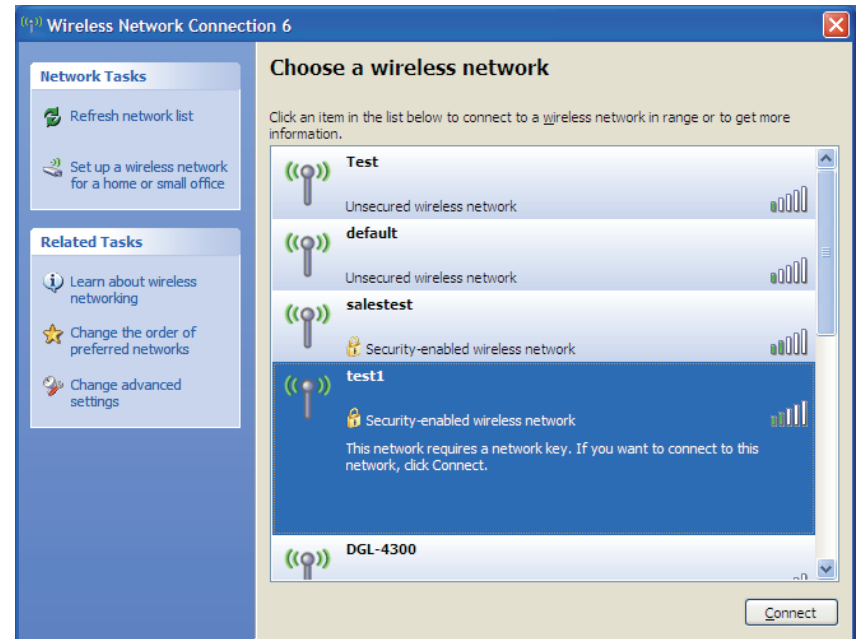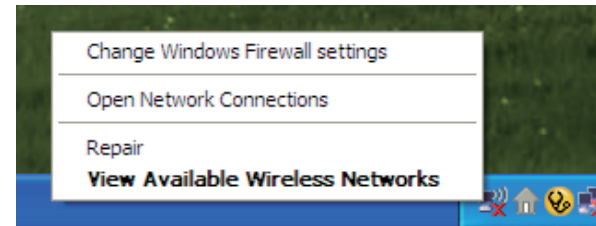

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

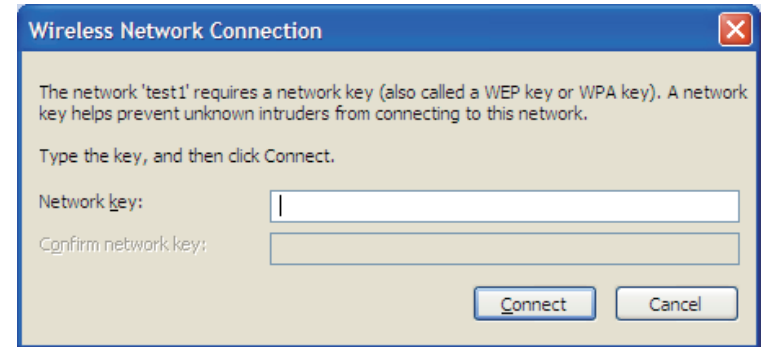

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWR-712. Read the following descriptions if you are having problems. (The examples below are illustrated in Windows® XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

## 1. Why can't I access the web-based configuration utility?

When entering the IP address of the D-Link router (192.168.0.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
  - Internet Explorer 6 or higher
  - Netscape 8 or higher
  - Mozilla 1.7.12 (5.0) or higher
  - Opera 8.5 or higher
  - Safari 1.2 or higher (with Java 1.3.1 or higher)
  - Camino 0.8.4 or higher
  - Firefox 1.5 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.
- Disable any internet security software running on the computer. Software firewalls such as Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the **Security** tab, click the button to restore the settings to their defaults.
  - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
  - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link router in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the router for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

## 2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Unfortunately, this process will change all your settings back to the factory defaults.

To reset the router, locate the reset button (hole) on the rear panel of the unit. With the router powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the router will go through its reboot process. Wait about 30 seconds to access the router. The default IP address is 192.168.0.1. When logging in, the username is **admin** and leave the password box empty.



# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.

## **What is Wireless?**

Wireless or Wi-Fi technology is another way of connecting your computer to the network without using wires. Wi-Fi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

## **Why D-Link Wireless?**

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

## **How does wireless work?**

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

### **Wireless Local Area Network (WLAN)**

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

### **Wireless Personal Area Network (WPAN)**

Bluetooth is the industry standard wireless technology used for WPAN. Bluetooth devices in WPAN operate in a range up to 30 feet away.

Compared to WLAN the speed and wireless operation range are both less than WLAN, but in return it doesn't use nearly as much power which makes it ideal for personal devices, such as mobile phones, PDAs, headphones, laptops, speakers, and other devices that operate on batteries.

## Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

### Home

- Gives everyone at home broadband access
- Surf the web, check e-mail, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

### Small Office and Home Office

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

## **Where is wireless used?**

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

## **Tips**

Here are a few things to keep in mind, when you install a wireless network.

### **Centralize your Router or Access Point**

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

### **Eliminate Interference**

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the router/access point. This would significantly reduce any interference that the appliances might cause since they operate on same frequency.

### **Security**

Don't let you next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

# Wireless Modes

There are basically two modes of networking:

- • **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- • **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more WNA-2330 wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

# Networking Basics


## Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type *cmd* and click **OK**. (Windows® Vista™ users type *cmd* in the **Start Search** box.)

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

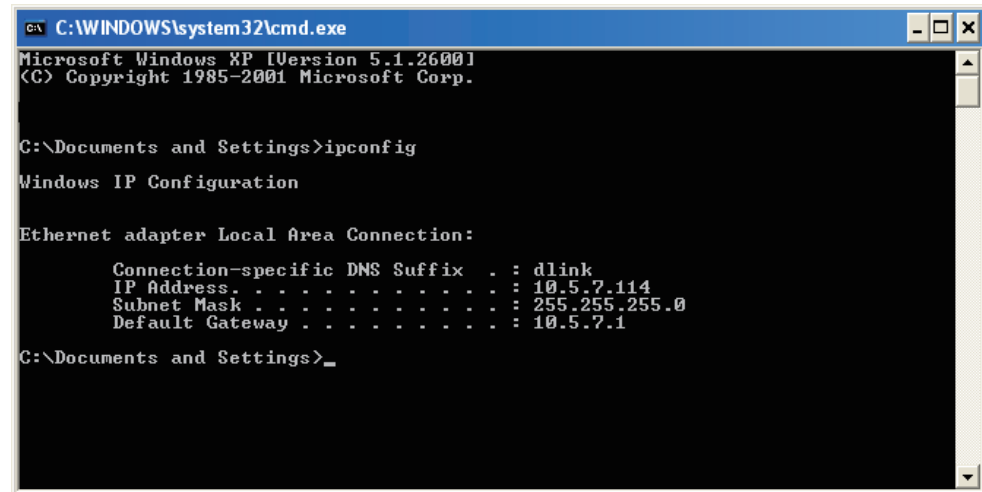

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . .                : 10.5.7.114
    Subnet Mask . . . . .              : 255.255.255.0
    Default Gateway . . . . .          : 10.5.7.1

C:\Documents and Settings>_
```

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

## Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

### Step 1

Windows® Vista™ - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**

Windows® XP - Click on **Start > Control Panel > Network Connections.**

Windows® 2000 - From the desktop, right-click **My Network Places > Properties.**

### Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties.**

### Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties.**

### Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

**Example:** If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

### Step 5

Click **OK** twice to save your settings.

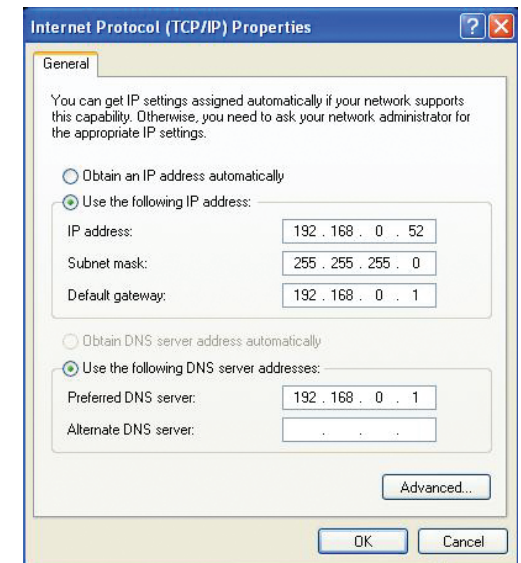

# Technical Specifications

## GSM Band (GSM/GPRS/EDGE)

- 850 / 900 / 1800 / 1900 MHz
- Power Class 4 (850 / 900 MHz)
- Power Class 1 (1800 / 1900 MHz)

## UMTS/HSDPA Band <sup>1</sup>

- 900 / 2100 MHz, 850/1900 / 2100 MHz
- Power Class 3

## Data Rates <sup>2</sup>

- Up to 150 Mbps with 802.11n clients
- 6/9/11/12/18/24/36/48/54 Mbps in 802.11g mode
- 1/2/5.5/11 Mbps in 802.11b mode
- 3G Uplink: Up to 5.76 Mbps
- 3G Downlink: Up to 21 Mbps

## Standards

- 802.11b/g, compatible with 802.11n devices
- 802.3
- 802.3u

## Wireless Security

- 64/128-bit WEP (Wired Equivalent Privacy)
- WPA & WPA2 (Wi-Fi Protected Access)

## Firewall

- Network Address Translation (NAT)

- Stateful Packet Inspection (SPI)

## VPN

- L2TP/PPTP/IPSEC/VPN Pass-through

## Antenna

- External 3G antenna

## Ports

- Four LAN ports (RJ-45)
- WAN port (RJ-45)
- Phone port (RJ-11)

## USIM Slot

- Standard 6-pin SIM card interface

## LED Status Indicators

- Status
- WAN
- LAN
- WLAN
- 2G
- 3G
- SMS
- Signal

## Dimensions (L x W x H)



- 190 x 119 x 22 mm (7.48 x 4.69 x 0.87 inches)

- 10% to 90% (Non-condensing)

### **Operating Temperature**

- 0 to 40 °C (32 to 104 °F)

### **Certifications**

- CE

### **Operating Humidity**

<sup>1</sup> Supported frequency band is dependent upon regional hardware version.

<sup>2</sup> Maximum wireless signal rate derived from IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range.