

HOW DO I CHECK MY AIRTIME BALANCE?

1. In idle state of the device, enter *188# and then dial by pressing the green Dial / Answer key.
2. An on-screen message will confirm that an SMS with your airtime balance will be sent to you shortly.

HOW DO I CONFIGURE THE APN IF I'M NOT USING A TELKOM SIM?

1. On the home screen, press Menu (Left Soft Key) > select [Settings] > click on [Wireless & Networks]
2. Select [Mobile networks] > scroll down and select [Access Point Names]
3. Click on the [Ok] button and select [Edit] > select [APN] > click on [Ok] and select [Edit]
4. Click [back] to delete the default APN > now type the APN settings provided by your Internet Service Provider
To change between upper & lowercase press the [#] key > click on [Ok] > select [Ok] to save.

USB TETHERING

1. One-on-one internet connection between the device and a laptop/computer.
2. Connect a device to the phone using a USB cable (use the phone's power socket as a connection point).
3. In the idle mode, press Menu (Left Soft Key) > select [Settings] > click on [Wireless & Networks]
4. Select [Tethering & portable hotspot] > click on [USB tethering] to enable it.
5. Your computer will now be able to connect the internet through your device.

WI-FI TETHERING

1. You can connect up to 8 Users using your device as a Wi-Fi Hotspot.
2. In the idle mode, press Menu (Left Soft Key) > select [Settings] > and click on [Wireless & Networks]
3. Select [Tethering & portable hotspot] > click on [Wi-Fi hotspot].
4. Option 1 [WLAN switch] select to [Enable] the Wi-Fi hotspot.
5. Option 2 [Keep Wi-Fi hotspot on] select how long you want the Wi-Fi hotspot to be active.
6. Option 3 [Set up Wi-Fi hotspot] lets you edit the details for your Wi-Fi hotspot:
 - Rename your [Network SSID] in order to recognise it easier.
 - Set your [Security] to WPA2 - PSK to setup a password for you hotspot.
 - Create a unique [Password] to prevent unauthorised access to your device.
7. Option 4 [Connected Users] shows the number of active connections.

HOW DO I ADD A CONTACT TO MY CONTACT LIST?

1. On the home screen, press Contacts (Right Soft Key) > then press [Ok]
2. Scroll down and select [New] > then press [Ok]
3. Select where you would like to save the contact (SIM or phone) > press [OK]
4. Type the contact's name and phone number into the fields provided
5. Press [OK] > and select [Save] to save your new contact.

HOW DO I SET QUICK DIAL KEYS (M1 - M4)?

1. On the home screen, press Menu (Left Soft Key) > navigate to [Settings], then press [Ok]
2. Scroll down to [Quick number], then press [Ok] > select the slot where you would like to set the number > then press [Ok]
3. If you know the number, enter it here > then press [Save] > and select [Save] from the menu.
Or if you already have the contact saved, press [Save] > then select [From contact] > press [OK]
Select the contact from your contact list > and press [Ok] > press [Save] > and select [Save] from the menu.

HOW TO DEACTIVATE THE SIM CARD'S PIN CODE

1. On the home screen, press Menu (Left Soft Key) > navigate to [Settings], then press [Ok]
2. Scroll down and select [Security], then press [Ok] > select [Set up SIM card lock], then press [Ok]
3. Select [Lock SIM card], and press [Ok] > enter your current SIM card PIN and click on [Ok] to deactivate it.

SENDING A SMS

1. On the home screen, press Menu (Left Soft key) > select [SMS] > select [Write Message].
2. You can manually enter recipient number in the "Type number" field or select from contacts.
3. Type your message content in the "Type text message" field > press [Ok] > select [Send] to send.

PLEASE NOTE

Only some of the key features are listed here. For more details on other features and configuration settings, please refer to the User Manual on our website at: Telkom.d-link.co.za

BASIC USER SETUP GUIDE

DWR-720 /PW

PACKAGE CONTENT

1



DWR-720 /PW Phone

2



AC Power Adapter

3



Antenna

4



Handset Receiver

5



Handset Cord

6

 


Battery

INSERTING & REMOVING SIM CARD


INSERT

Turn the SIM card so the gold contacts are facing down and the top right corner is the one that is cut. Insert the SIM card by carefully sliding it into the silver SIM card holder from the right.

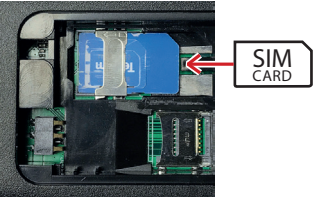


REMOVE

 Remove the SIM card by pushing down the clip on the right. Then carefully sliding the SIM card out from the left.

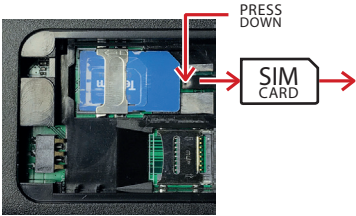


INSERTING MICRO SD CARD

 
Lightly press down and carefully slide the MicroSD card cover to the right. You will hear a small click and the clip will now be loose.

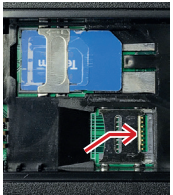

 Flip open the MicroSD card cover by softly lifting it to the right. Turn the MicroSD card so the gold contacts are on the right facing down. Place the MicroSD card flat into the groove.

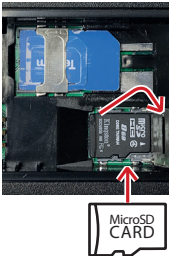

 Close the MicroSD card cover by flipping the cover left, softly press down and slide the cover to the left to lock. You will hear a small click and the clip is now locked.

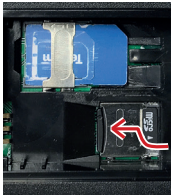

INSTALLATION

Ensure the DWR-720 /PW is powered off before performing the steps below.

 
01

Flip the phone around and open the Battery Cover at the bottom of the device.




02

Insert and slide the SIM Card into place as shown above.

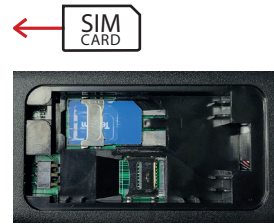

03

 Open the MicroSD card holder and insert the MicroSD card into the

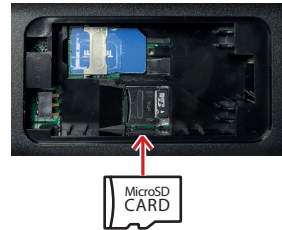

04

Insert the Battery with the metal end on the bottom left. Close Battery Cover.



Note: The battery comes partially charged. You can use the device while charging.

05

Screw the antenna into the TNC Antenna Port



06

Plug the one end of the handset cord into the handset receiver.



07

Plug the other end of the handset cord into the headset port on the back of the phone and clip the cord into the cord clip.



09

On the front of the device, hold the Red End call / Power key for ± 5 seconds.

A loading screen will display to indicate that the phone is starting up.



 
10

If prompted for a PIN number enter the 4 digit PIN indicated on the larger card supplied with the SIM card. Push the left Soft Key and select "OK" to unlock.

Note: If the phone has no signal and shows "Mobile Network Not Available" when dialling please phone Telkom on 081 180 to verify that your SIM is active and your area has coverage.



KEY LOCATION

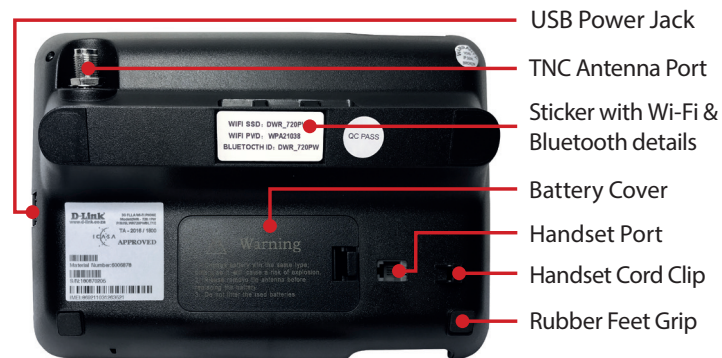

OTHER IMPORTANT KEYS

*** KEY:** Press and hold the [0] key to input a + when dialling a number.

POWER ON/OFF

ON: On the front of the device, hold the Red End call / Power key for 5 seconds.
OFF: Hold the Red End / Power Key for 5 seconds.
Note: In this state, all reminders and alarms will still sound.

SETTINGS

1. You can change your language, time & date, Call settings, Phone Settings, Display settings, Etc.
2. Edit Volume, Security.
3. Check your phone information.

CHANGING CALL VOLUME

Press the Right / Left direction key to adjust the volume while on a call.

NETWORK DEPENDANT FEATURES

Call forwarding, call barring, call waiting and voice mail.

USEFUL TELKOM MOBILE USSD CODES

*188#

*180#

*1#

*140*mobile number#

Check Mobile Balance and get all your balances SMS'd to you
Mobile Account Menu (buy bundles, transfer airtime/data, manage spend limit, get device settings, change tariff, BIS)
Check what your mobile number is (Indicated by MSISDN)
Send a Please Call Me

FAQ

MY PHONE SAYS MOBILE NETWORK NOT AVAILABLE WHEN DIALLING

1. If this is a new installation, your SIM card may not be active. This could take between 24 - 48 Hrs.
2. Or there is no mobile service (signal) / coverage in your area.

Check that your SIM Card has been inserted correctly (as indicated on page 1 of this user guide).

If problem persists please phone Telkom on 081 180 to verify that your SIM card is active and that your area has coverage.

MAKING AND ENDING A CALL

1. On the home screen, enter the number you want to dial and press the green Dial / Answer key.
2. With the handset on hook the hands free call (Loud speaker) will be initiated.
3. Pick up the handset receiver to switch over to handset calling.
4. During an active call, press the large speaker icon to enable hands free call.
5. To end an active call, press the red End / Power key or hang up.