Using DWR-956 as an Access Point.

DWR-956 Access Point Setup

1. Login into your DWR-956 with the default IP address <u>http://10.0.0.2</u>



2. Logon with your router login details. Default is admin/admin

Please enter the ι	isername and	password:	
Username:			
Password:			
	Login	Cancel	
	Login	Guilder	

3. Go to Basic Setup, LAN, IPv4 Configuration after the above steps are completed.



1. Change the routers IP address as well as enable DHCP Relay.

IPv4 Configuration

IP Address:	10.0.0.254		
Subnet Mask:	255.255.255.0		
Primary DNS Server:	10.0.254		
Secondary DNS Server:	8.8.8.8		
Domain Name:	localhost		
Disable DHCP			
Relay IP:	10.0.0.2		
Start(PC):	10.0.0.3		
End(PC):	10.0.254		
Lease Time:	1440 (minutes)		
	Edit Reserved IP Address		
Lan Port Map:	🗹 LAN1 🗹 LAN2 🗹 LAN3 🗹 LAN4		
	🖉 SSID1 🗹 SSID2 🗹 SSID3 🖉 SSID4		
	🖉 SSID5 🗹 SSID6 🗹 SSID7 🗹 SSID8		

2. Click Apply settings.

Apply Refresh

3. You have to reboot the second DWR-956 before the above settings will work.