



How to change APN settings

Step 1: Open your web browser and type **10.0.0.2** into the address bar, then press Enter.

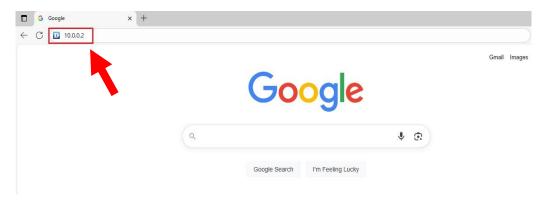

If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Username is admin, password will either be admin, admin1 or personalized.

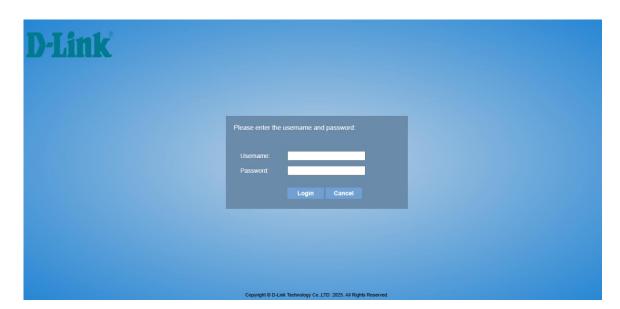



Setup Guide

Step 2: Once logged in, navigate to


Basic Setup → WAN Service



Step 3: Here you will see a table with three options, look for the one that says LTE and then click on edit.

WAN ServiceInfo IP Protocol Type **WAN Name** Interface Mode Service Type Action DHCP_WAN_ETH ETH1 TR069_INTERNET_VOIP Edit Delete DHCP IPv4&6 PPPoE_WAN_ETH ETH1 PPPoE IPv4&6 TR069_INTERNET_VOIP Edit Delete LTE LTE DHCP IPv4 TR069_INTERNET_VOIP Edit Delete Set New WAN ETH1 ✓ Interface: Mode: DHCP ~ Create Refresh

Step 4: The following screen will appear, click on advance settings.

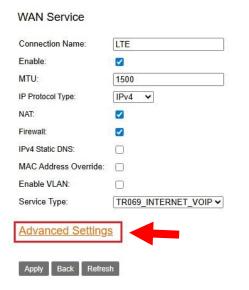



Setup Guide

Step 5:

PIN: If the SIM card has a pin, please enter it into the PIN field or leave it blank if it does not have a PIN.

APN: Change it to from auto to other, you will then have the option to enter the APN.

PIN:	
NetWork:	Auto
APN:	Other
DialNumber:	*99#
Dial UserName:	any
Dial Password:	any
DHCP Option 60 Setting:	
DHCP Option 66:	
DHCP Option 120:	
DHCP Option 81 Setting:	
Bound Ports:	□ LAN1 □ LAN2 □ LAN3 □ LAN4
	☐ SSID1 ☐ SSID2 ☐ SSID3 ☐ SSID4
	☐ SSID5 ☐ SSID6 ☐ SSID7 ☐ SSID8
	A grey out port means it has been bound.

Once you have entered the APN, click on apply. Give it a minute, if the internet still does not come through, power off the router, and turn it back on. The internet should come through.