

## [Basic Manual Setup for DWR-957X – Configure your SIP FAX VoIP]

**Step 1:** Open your web browser and type **10.0.0.2** into the address bar, then press Enter.



If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Default Username is admin, password is admin, unless it was updated.



**Step 2:** Once logged in, navigate to

**Applications → VoIP → Basic Setup**



**Step 3:** Fill in the following details as supplied by your Internet Service Provider (ISP)

1. **Register Server**
  2. **Outbound Server**
  3. Scroll down and select **Enable** under Connection 1
  4. Enter your **User Name** (*YourSIPnumber@RegisteredServer*)
  5. Enter your **Password**
  6. Click **Apply**
- If you want to **connect more than one phone** on a VoIP account
7. Select **Instance Id**

## Basic Setup


Port:	<input type="text" value="5060"/>	(1024 ~ 65535)
1. Register Server:	<input type="text"/>	
Proxy:	<input type="text"/>	
2. Outbound Server:	<input type="text"/>	
<b>Connection 1</b>		
3. Enable:	<input type="checkbox"/>	
4. User Name:	<input type="text"/>	
5. Password:	<input type="text"/>	
Instance Id:	<input type="checkbox"/>	7.
6.	<input type="button" value="Apply"/>	

To verify that your SIP account is successfully connected, navigate to:

**Status → VoIP → Voice Status**

The **Voice Register Status** should be **"UP"**

If the status says **"Registering"**, please double check that you have entered your details exactly as supplied by your ISP.

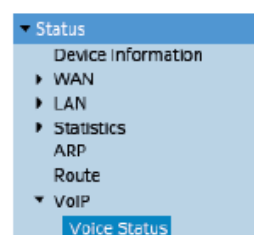

## Voice Status

Line	Voice Register Status
Line1	UP