

# [Basic Manual Setup for DWR-957X – How to configure as Access Point]

**Step 1:** Open your web browser and type **10.0.0.2** into the address bar, then press Enter.



If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Default Username is admin, password is admin, unless it was updated.






Step 2: Once logged in, navigate to

### Basic Setup → LAN → IPv4 Configuration



**Step 3:** Make sure that the secondary router's IP address is not the same or in the same range as the primary router.

#### **IPv4** Configuration

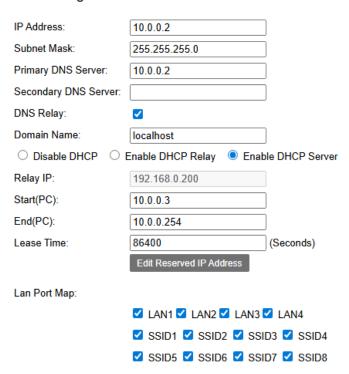



## **Example:**

Primary router = 10.0.0.2

Secondary router = anywhere between 10.0.1.2 and 10.0.1.254

or 192.168.0.1 and 192.168.0.254

## **IPv4** Configuration

IP Address:	10.0.1.2	
Subnet Mask:	255.255.255.0	
Primary DNS Server:	10.0.0.2	
Secondary DNS Server:		
DNS Relay:	✓	
Domain Name:	localhost	
$\bigcirc \   {\sf Disable\ DHCP\ } \   \bigcirc \   {\sf Enable\ DHCP\ Relay} \   \bullet \   {\sf Enable\ DHCP\ Server}$		
Relay IP:	192.168.0.200	
Start(PC):	10.0.1.1	
End(PC):	10.0.1.254	
Lease Time:	86400	(Seconds)
	Edit Reserved IP Address	
Lan Port Map:		
	✓ LAN1 ✓ LAN2 ✓ LAN3 ✓ LAN4	
	☑ SSID1 ☑ SSID2 ☑ SSID3 ☑ SSID4	
	✓ SSID5 ✓ SSID6 ✓ SSII	D7 🗹 SSID8

- Click on apply
- Router will lose connection
- Connect a LAN cable from the primary router's LAN port to the secondary routers WAN port.
- Internet connection should go through. If not, turn both routers off and on again.