


[Basic Manual Setup for DWR-957X — How to change the Wi-Fi name and password]

Step 1: Open your web browser and type **10.0.0.2** into the address bar, then press Enter.

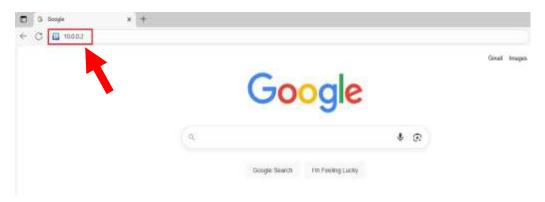

If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Default Username is admin, password is admin, unless it was updated.





Step 2: Once logged in, navigate to

Basic Setup → Wireless → Basic Configuration



Step 3: Here you will see options for both the 2.4Ghz and the 5Ghz.

SSID: This will be your Wi-Fi name.

WPA Pre-share key: This will be your Wi-Fi password.

You can feel free to change it here. Scroll down and click on apply.

Please note: All previously connected devices will now be disconnected, look for the new Wi-Fi name on your device and use the new password to connect.

