


[Basic Manual Setup for DWR-957X- How to configure as repeater]

Step 1: Open your web browser and type **10.0.0.2** into the address bar, then press Enter.

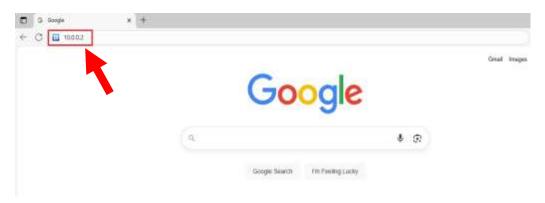

If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Default Username is admin, password is admin, unless it was updated.





Step 2: Once logged in, navigate to

Advance Setup → Wireless → WDS Settings



Step 3: Change the WDS mode to Repeater and add the 2nd routers MAC address found under Device information or the scanning feature can be used if device is difficult to access.




Step 4: Click the Apply button to Save the settings.



Configuring the second DWR-957X for Repeater mode

Step 5: Follow steps 1-4 for the 1st DWR-957X.

Step 6: Go to Basic Setup, LAN, IPv4 Configuration after the above steps are completed

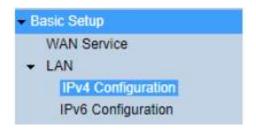

Step 7: Change the routers IP address as well as enable DHCP Relay.

IPv4 Configuration IP Address: 10.0.0.254 Subnet Mask: 255.255.255.0 Primary DNS Server: 10.0.0.254 Secondary DNS Server: 8.8.8.8 Domain Name: localhost Disable DHCP Enable DHCP Relay Enable DHCP Server Relay IP: 10.0.0.2 Start(PC): 10.0.0.3 End(PC): 10.0.0.254 Lease Time: 1440 (minutes) Edit Reserved IP Address ✓ LAN1 ✓ LAN2 ✓ LAN3 ✓ LAN4 Lan Port Map: SSID1 SSID2 SSID3 SSID4 SSID5 SSID6 SSID7 SSID8 Apply Refresh

Click Apply settings.

You have to reboot the second DWR-957X before the above settings will work.