



## [G2562DX Changing Router Login Password]

The below steps will guide you to Change the router login password on the router.  
(Please ensure you are connected to the router either on Wi-Fi or Ethernet cable)

- 1) Login to the device WEB GUI using 10.0.0.2 and Use Username: admin Password: admin/admin1.

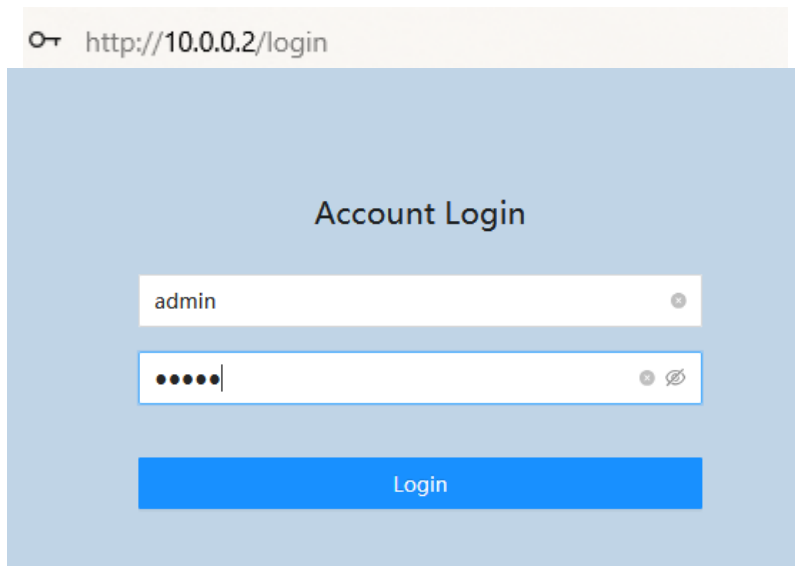

- 2) Navigate to management → System settings → Here you can change the Admin Password.
  - Old Password = admin or a previous password set on first time setup.
  - New Password = The New password you want to use.
  - Confirm Password = Re-Type the New password you have chosen.

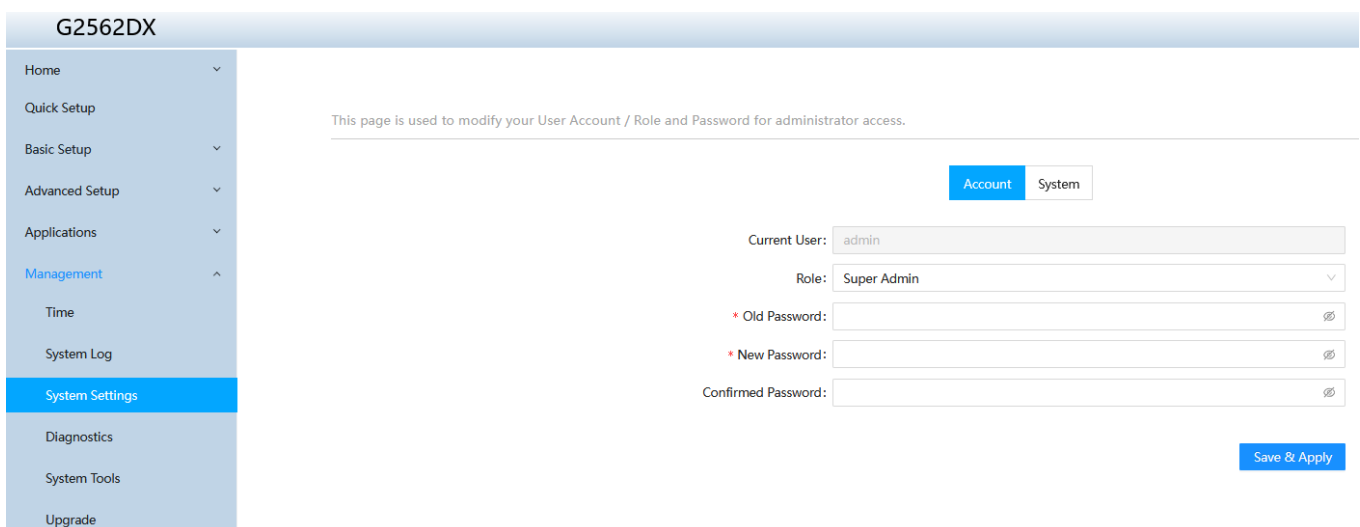

Once done → Click Save & Apply.

