


## [G2562DX How to Change Wi-Fi Channel]

The below steps will guide you to Manually Change the Wi-Fi Channel on the router.  
(Please ensure you are connected to the router either on Wi-Fi or Ethernet cable)

- 1) Login to the device WEB GUI using 10.0.0.2 and Use Username: admin Password: admin/admin1.

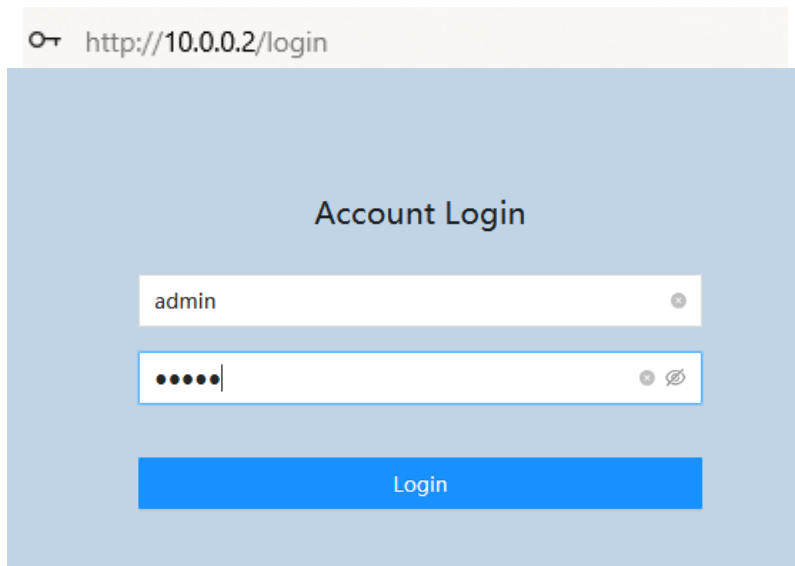

- 2) Navigate to Basic Setup → Wi-Fi 2.4Ghz → Basic  
-Channel will be on “Auto” by default → you can select the drop-down arrow and choose a channel between 1 – 13 (It is recommended to use channel 1/6/11) → once done click on Save & Apply.

