


## [Basic Manual Setup for G413X- Basic Wizard Setup for LTE]

Before you start: Please make sure that a NANO sim is inserted in the router and the sim is activated by your ISP & has data.


On a device that is connected to the router (preferably with a cable on a pc/laptop or Wi-Fi
on a phone is fine but please make sure your mobile data is off).

Note: this config is best done with a LAN cable.

2) Open a web Brower (internet explorer/google chrome/Firefox) input the IP address of your router (default is 10.0.0.2 unless it was changed), we will use Microsoft Edge in this example.

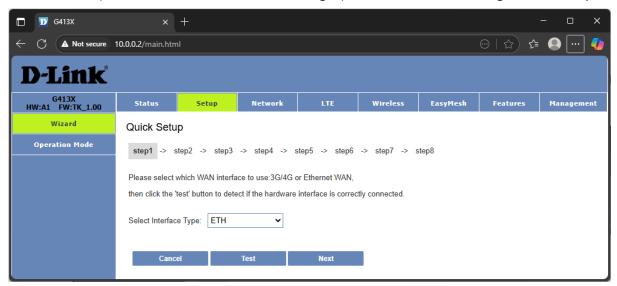


3) Change the Interface Type to 3G/4G

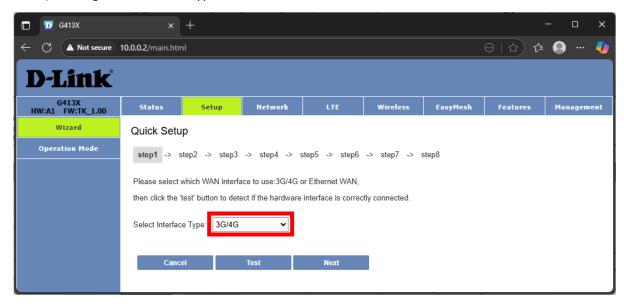




4) Click on [Test] as per the instructions.

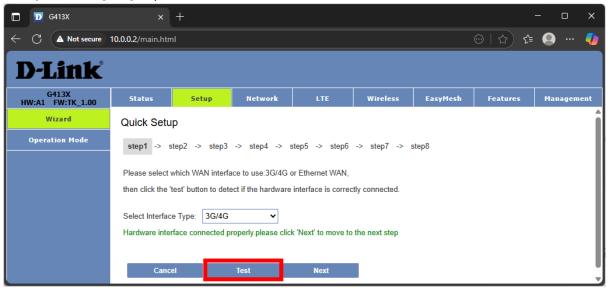


a. If it passes, it will show Hardware interface connect properly.

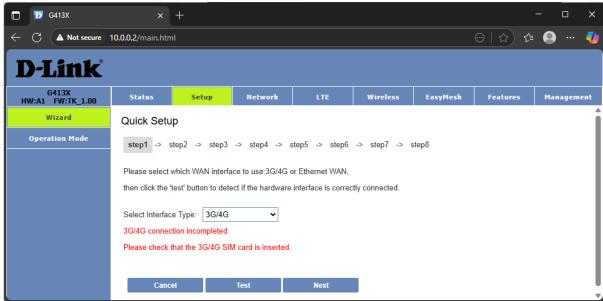


b. If it fails, it will show 3G/4G connection incomplete, please re-insert your SIM card and restart the router.



5) Click on [Next] as per the instructions

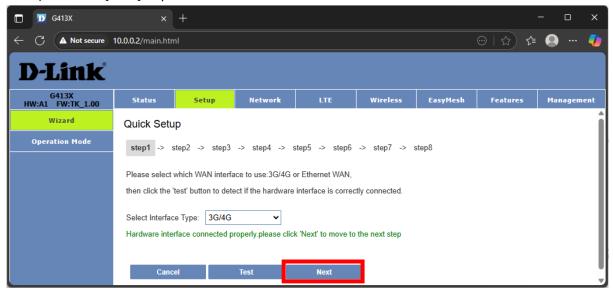

- 6) System will Auto detect, please select the one that passed and click on [Next]
  - a. If both DHCP and PPPoE test failed, it means that your SIM card is not activated. Please contact the provider of your SIM card to activate it.

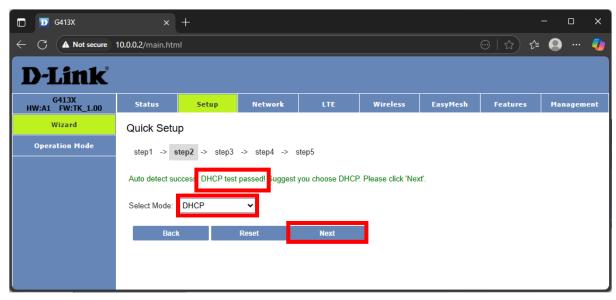




- 7) Update your 2.4G and 5.8G Wi-Fi name and password.
  - a. SSID is the Wi-Fi name that you will connect to
  - b. WPA Pre-share key is the Wi-Fi password of the corresponding Wi-Fi



8) Change the login password that you will use next time you try to access the router's interface.

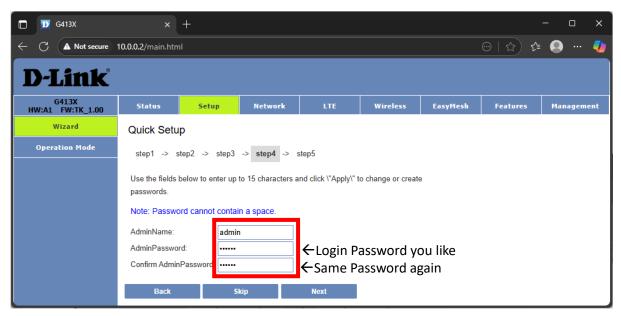



9) This is the summary page that will show you all the settings that will be changed. Please take a photo or screen shot for future reference and click on [Apply]

