


## [Basic Manual Setup for G413X-How to change Wi-Fi password]


 On a device that is connected to the router (preferably with a cable on a pc/laptop or WiFi on a phone is fine but please make sure your mobile data is off).
Note: this config is best done with a LAN cable.

2) Open a web Brower (internet explorer/google chrome/firefox) input the IP address of your router (default is 10.0.0.2 unless it was changed), we will use Microsoft Edge in this example.

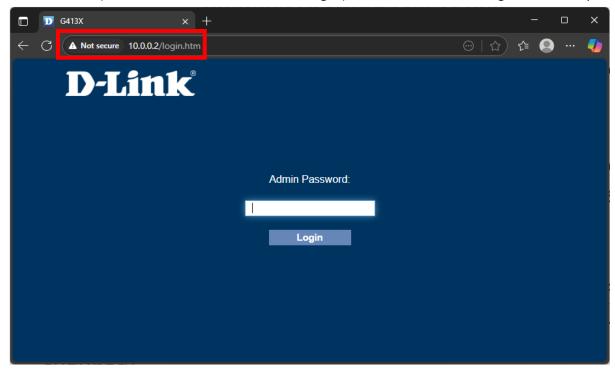




3) Login (default password is admin unless it was changed)

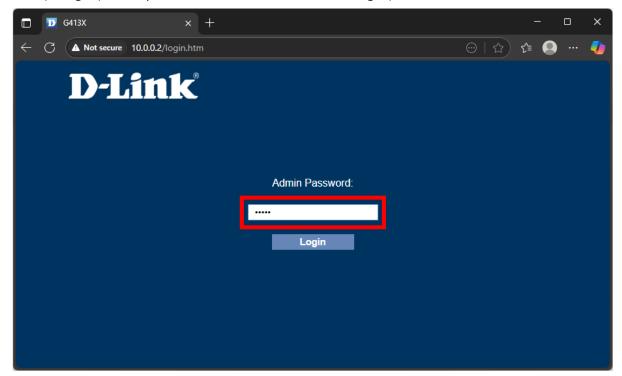




- 4) Go to Wireless (top) then Security (left)
  - a. Click [Security] for 2.4GHz if you wish to change the password for 2.4G WiFi
  - b. Click [Security] for 5GHz if you wish to change the password for 5G WiFi

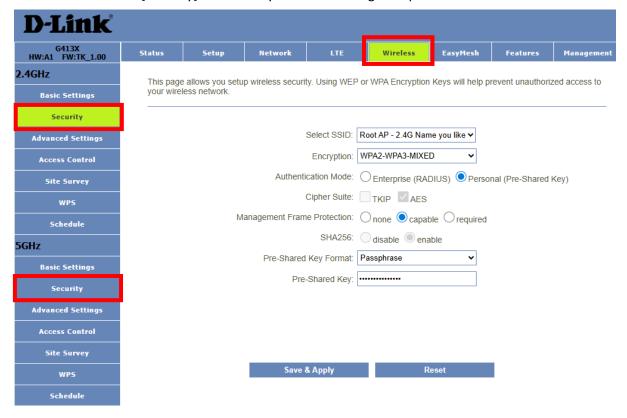




5) Click on the • • next to Pre-Shared Key, to reveal your Wi-Fi password. You may now update the password to a preferred one.

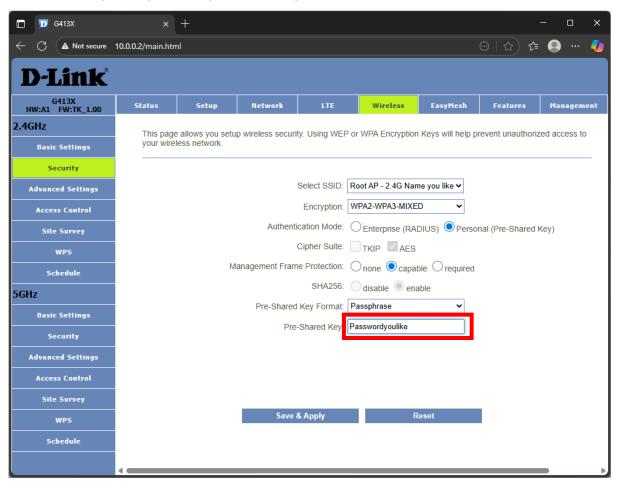



6) Click on Save & Apply

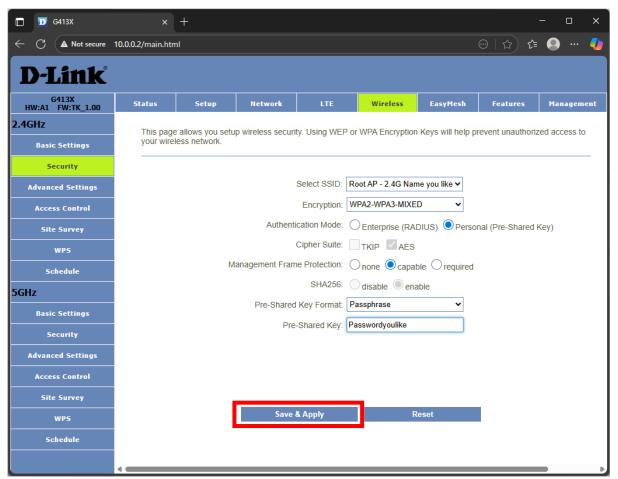

- 7) Restart the router after the countdown is done & the change is done
- 8) Please remember to update the Wi-Fi password on your previously connected devices.