



Manual PPPoE setup

Step 1: Open your web browser and type **10.0.0.2** into the address bar, then press Enter.

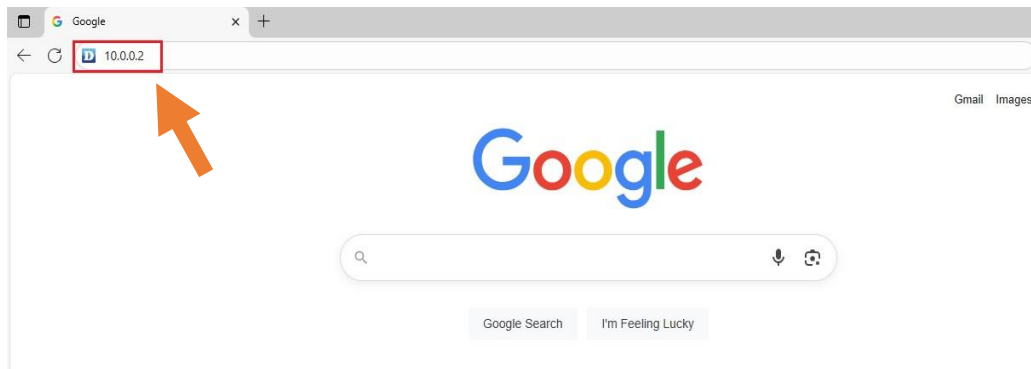

If your device is connected to the router, it will take you to a blue D-Link page asking for a username and password. Username is admin, password will either be admin, admin1 or personalized.

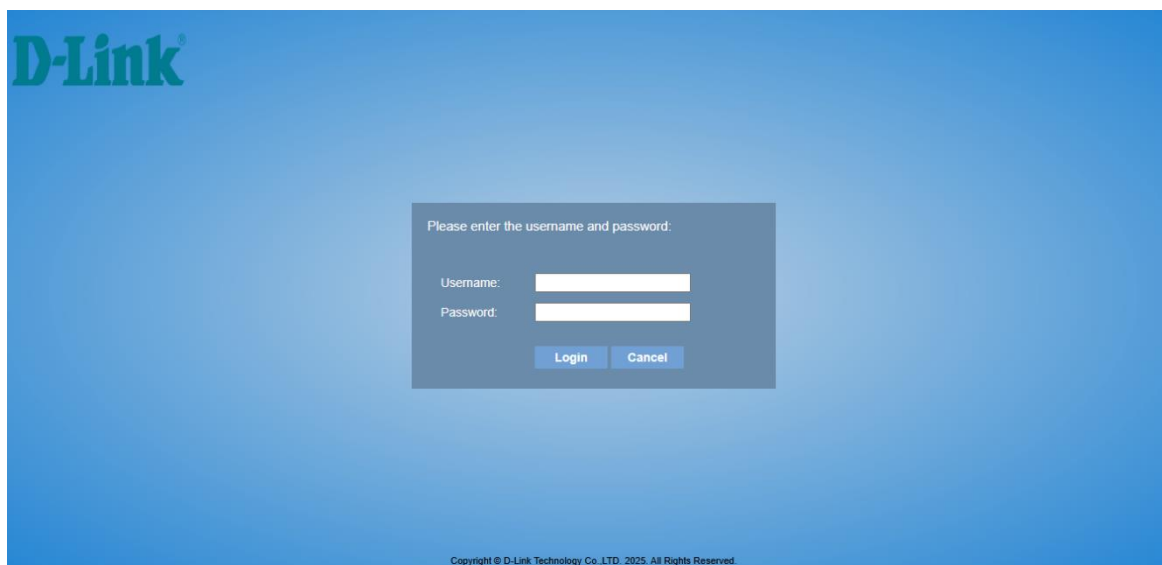

Step 2: Once logged in, navigate to

Basic Setup → WAN Service



Step 3: Here you will see a table with three options, look for the one that says **PPPoE_WAN_ETH** and then click on edit.

WAN ServiceInfo

WAN Name	Interface	Mode	IP Protocol Type	Service Type	Action	
DHCP_WAN_ETH	ETH1	DHCP	IPv4&6	TR069_INTERNET_VOIP	Edit	Delete
PPPoE_WAN_ETH	ETH1	PPPoE	IPv4&6	TR069_INTERNET_VOIP	Edit	Delete
LTE	LTE	DHCP	IPv4	TR069_INTERNET_VOIP	Edit	Delete


Set New WAN

Interface:

Mode:

Step 4: The following screen will appear, look for where it says User Name & Password, please enter your details here as provided by your internet service provider.

Please note that it is case sensitive and it will have to be entered exactly as it was sent to you.

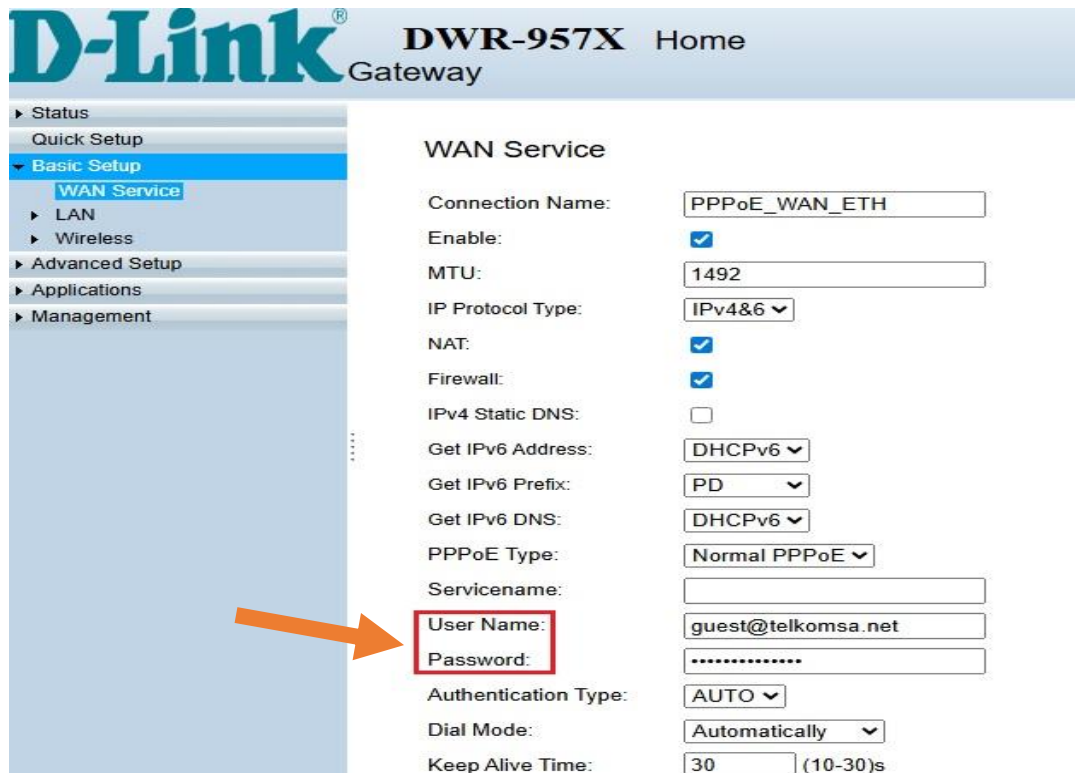

D-Link® DWR-957X Home Gateway

- Status
- Quick Setup
- ▼ Basic Setup
 - WAN Service
 - LAN
 - Wireless
- Advanced Setup
- Applications
- Management

WAN Service

Connection Name: PPPoE_WAN_ETH

Enable: ☒

MTU: 1492

IP Protocol Type: IPv4&6 ▼

NAT: ☒

Firewall: ☒

IPv4 Static DNS: ☐

Get IPv6 Address: DHCPv6 ▼

Get IPv6 Prefix: PD ▼

Get IPv6 DNS: DHCPv6 ▼

PPPoE Type: Normal PPPoE ▼

Servicename:

User Name:

Password:

Authentication Type: AUTO ▼

Dial Mode: Automatically ▼

Keep Alive Time: 30 (10-30)s

Once you have entered your details, scroll down and click on apply.

Give it a few seconds and the internet should come through, if not power off the router for a few seconds and power it back on.

If the router still does not have internet, please contact your Internet service provider to confirm if the details are correct.